


Service Manual

General Description
Adjustment Procedures
Block / Schematic Diagrams
Exploded Views / Parts List

Video Cassette Recorder

Panasonic **VHS**

PAL NTSC 4.43

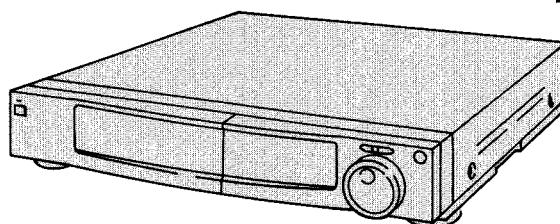Hi-Fi HQ
NV-F77EG


SPECIFICATIONS

ITEM	SPECIFICATION		ITEM	SPECIFICATION
POWER	SOURCE: 220 ~ 240 V 50/60Hz		VIDEO	OUTPUT: EURO AV (AV1/2) Connector (21 pin × 2) 1.0 Vp-p, 75Ω unbalanced
	CONSUMPTION: 34 watts			
RECORDING SYSTEM	2 rotary heads, helical scanning system		AUDIO	HEAD: 1 Stationary head (Normal Audio) 2 rotary heads (Hi-Fi 2CH)
	PAL/NTSC 4.43			INPUT: AUDIO IN (AV3) Connector (Phono type) More than -10dBV (316mV), more than 47 kΩ EURO AV (AV1/2) Connector (21 pin × 2) More than -6dBV (500mV) more than 10kΩ MICROPHONE JACK - 70dBV
TV TUNER SYSTEM	GERMANY	VHF I: CHE2 ~ CHE4 VHF III: CHS4 ~ CHE12 VHF H: CHS11 ~ CHS20 (PAL/SECAM B) 75Ω unbalanced UHF: CH21 ~ CH69 (PAL/SECAM G) 75Ω unbalanced		OUTPUT: AUDIO OUT Connector (Phono type) - 8dBV (400mV), Less than 1kΩ EURO AV (AV1/2) Connector (21 pin × 2) - 6dBV (500mV), Less than 1kΩ HEADPHONE JACK - 30dBV, 8Ω
	ITALY	VHF I: CHA ~ CHH VHF III: CHS4 ~ CHH2 VHF H: CHS11 ~ CHS41 (PAL/SECAM B) 75Ω unbalanced UHF: CH21 ~ CH69 (PAL/SECAM G) 75Ω unbalanced		TRACK: 1 track (Normal-mono only) 2 channels (Hi-Fi Sound-Stereo)
	OTHER COUNTRIES	VHF I: CHE2 ~ CHS3 VHF III: CHM1 ~ CHE12 VHF H: CHU1 ~ CHS41 (PAL/SECAM B) 75Ω unbalanced UHF: CH21 ~ CH69 (PAL/SECAM G) 75Ω unbalanced		TAPE FORMAT
RF OUT SYSTEM	UHF: CH36 ± 4 (PAL G) 76 ⁺² ₋₃ dBμ, 75Ω unbalanced		TAPE SPEED	SP: 23.39mm/s LP: 11.695mm/s Record/Playback Time: SP: 4 hours with 240min. type tape LP: 8 hours with 240min. type tape FF/REW Time 2.5min. with 180min. type tape
VIDEO	HEADS: 4 rotary heads 1 pair for SP recording, playback and trick play (L-R heads) 1 pair for LP recording, playback and trick play (L' - R' heads)		DIMENSIONS	430(W) × 96(H) × 374(D)mm
	INPUT: VIDEO IN (AV3) Connector (Phono type) 1.0 Vp-p, 75Ω terminated EURO AV (AV1/2) Connector (21 pin × 2) 1.0 Vp-p, 75Ω unbalanced		WEIGHT	6.0kg
			STANDARD ACCESSORIES	1 pc. DIN-RE Cable 1 pc. Infra-red remote controller 2 pc. Audio Cables 1 pc. Programme sheet 1 pc. AC Mains Lead

Weight and dimensions shown are approximate.
Specifications are subject to change without notice.

Panasonic

INTRODUCTION

This service manual contains technical information which will allow service personnels to understand and service this model.

Section 1 presents you with some general information of features and controls, enabling you to become familiar with each function.

Section 2 contributes to your mechanical and electrical adjustment as well disassembly and replacement procedures.

In the case of very common information relating to other models like mechanical adjustments, please refer to each service manual.

Section 3 contains block diagrams which offers you information for checking and understanding each circuit. Schematic diagrams which give you detailed information such as waveforms, voltage data, function e.t.c...

Section 4 contains exploded views and parts list.

Please place orders using the parts list and not the drawing reference numbers.

If the circuit is changed or modified, this information will be followed by supplementary service manual to be filed with original service manual.

CONTENTS

SERVICE INFORMATION

SECTION 1

GENERAL DESCRIPTIONS.....	1-1
1-1. TECHNICAL INFORMATION	1-1
1-2. OPERATING INSTRUCTIONS	1-3
Setting Up	
Connections.....	1-3
Tuning the TV into your VTR.....	1-4
Setting the Clock of the VTR.....	1-4
Storing TV Broadcasts into your VTR.....	1-5
Controls, Indicators and Connection Sockets	1-6
Infra-Red Remote Controller.....	1-9
Basic Operations	
Playback	1-10
On-the-spot Recording.....	1-11
Automatic Features	1-12
One-Touch Timer Recording (OTR).....	1-12
Additional Functions	
Timer Recording	1-13
Search Function.....	1-15
Editing.....	1-16
Bar Code Operation	1-18

SECTION 2

ADJUSTMENT PROCEDURES	2-1
2-1. DISASSEMBLY METHOD	2-1
2-2. MECHANICAL ADJUSTMENT PROCEDURES	2-4
2-3. ELECTRICAL ADJUSTMENT PROCEDURES	2-7

SECTION 3

ABBREVIATIONS & BLOCK DIAGRAMS.....	3-1
3-1. ABBREVIATIONS.....	3-1
3-2. LUMINANCE & CHROMINANCE BLOCK DIAGRAM.....	3-5
3-3. HI-FI AUDIO BLOCK DIAGRAM.....	3-9
3-4. SYSTEM CONTROL & SERVO BLOCK DIAGRAM.....	3-13

SECTION 4

SCHEMATIC DIAGRAM	4-1
4-1. SYSTEM CONTROL & SERVO SECTION IN MAIN SCHEMATIC DIAGRAM.....	4-1
4-2. POWER SCHEMATIC DIAGRAM.....	4-8
4-3. LUMINANCE & CHROMINANCE SECTION IN MAIN SCHEMATIC DIAGRAM.....	4-10
4-4. AUDIO SECTION IN MAIN SCHEMATIC DIAGRAM	4-14
4-5. SUB SERVO PACK SCHEMATIC DIAGRAM.....	4-18
4-6. LUMINANCE & CHROMINANCE PACK SCHEMATIC DIAGRAM.....	4-21
4-7. S-VHS P.B. PACK SCHEMATIC DIAGRAM	4-24
4-8. INPUT/OUTPUT PACK SCHEMATIC DIAGRAM.....	4-27
4-9. HEAD AMP SCHEMATIC DIAGRAM	4-30
4-10. HI-FI AUDIO PACK SCHEMATIC DIAGRAM.....	4-32
4-11. TIMER & VR SCHEMATIC DIAGRAM.....	4-34
4-12. TV DEMODULATOR PACK SCHEMATIC DIAGRAM	4-39
4-13. DECODER PACK SCHEMATIC DIAGRAM.....	4-41
4-14. VPS PACK SCHEMATIC DIAGRAM	4-44
4-15. POWER C.B.A.	4-46
4-16. MAIN C.B.A.	4-48
4-17. LUMINANCE & CHROMINANCE PACK C.B.A.	4-51
4-18. S-VHS P.B. PACK C.B.A.	4-53
4-19. SUB SERVO PACK C.B.A.	4-54
4-20. HEAD AMP C.B.A.	4-56
4-21. INPUT/OUTPUT PACK C.B.A.	4-58
4-22. HI-FI AUDIO PACK C.B.A.	4-61
4-23. TIMER C.B.A. & VR C.B.A.	4-64
4-24. TV DEMODULATOR PACK C.B.A.	4-68
4-25. DECODER PACK C.B.A.	4-70
4-26. VPS PACK C.B.A.....	4-71

SECTION 5

EXPLODED VIEWS & PARTS LIST.....	5-1
5-1. EXPLODED VIEW & MECHANICAL REPLACEMENT PARTS LIST	5-1
1. CHASSIS PARTS SECTION (1).....	5-1
2. CHASSIS PARTS SECTION (2).....	5-3
3. CASSETTE UP MECHANISM SECTION.....	5-5
4. CASING PARTS SECTION.....	5-6
5. PACKING PARTS SECTION.....	5-8
5-2. ELECTRICAL REPLACEMENT PARTS LIST	5-9

SERVICE INFORMATION

1-1. HOW TO CHECK THE CRACKED CHIP PART

- (1) Apply heat to the soldered portions of chip part using a soldering iron for about 2-3 seconds.
- (2) If the chip part is faulty, it will be broken or cracked.

Caution: Do not leave soldering iron on the PCB too long as damage may occur to the PCB or the chip parts.

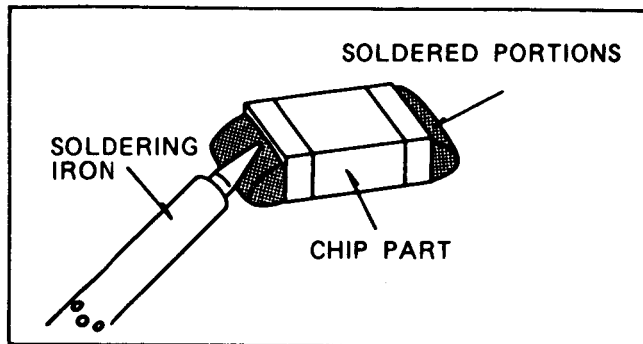


FIG. G1

Note: Regarding intermittent faults
The main causes of these faults are poor soldering and cracked chip parts.

1-2. HOW TO REPLACE THE CHIP PART

1) REMOVAL (RESISTOR, CAPACITOR, etc...)

- (1) Presolder the one side of soldering portion for chip part and grasp the chip part by tweezers.
- (2) Melt the presoldered portion. And then remove the chip part with a twisting motion while melting the soldering portion of another side quickly.

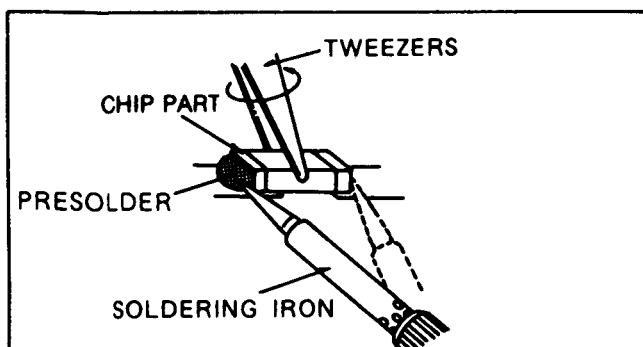


FIG. G2

2) REMOVAL (transistor, diode, etc...)

- (1) Grasp the chip part with tweezers and melt the solder of one lead.

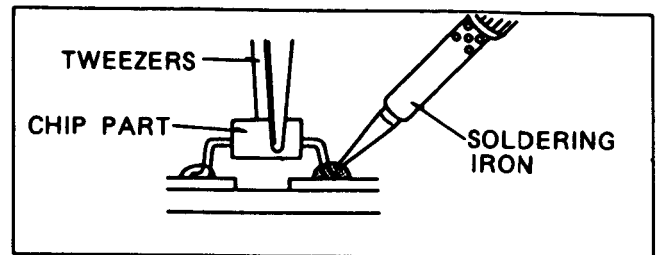


FIG. G3

- (2) Lift the side of that lead upward.

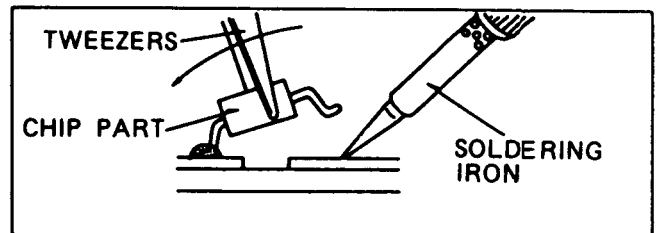


FIG. G4

Caution: Do not lift the chip part too high as damage may occur to the PCB or the leads that are still soldered on the PCB.

- (3) Simultaneously heat the solder of the two remaining leads and lift part to remove.

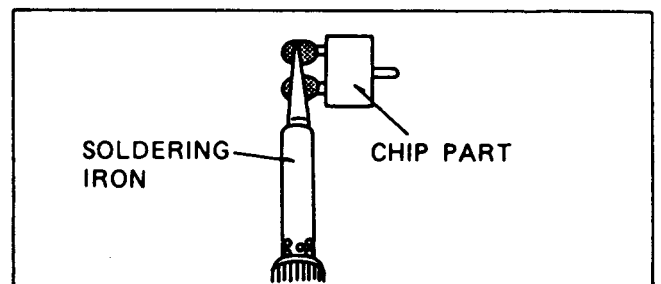


FIG. G5

3) INSTALLATION

- (1) Presolder the one side of contact point on the circuit board.

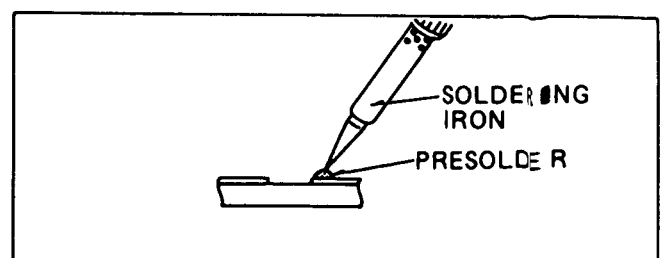


FIG. G6

- (2) To install the chip part, hold in position using tweezers, apply heat to the pre-soldered portions using a fine tip soldering iron.
- (3) Solder the other side of the chip part.
- (4) Check your soldering.

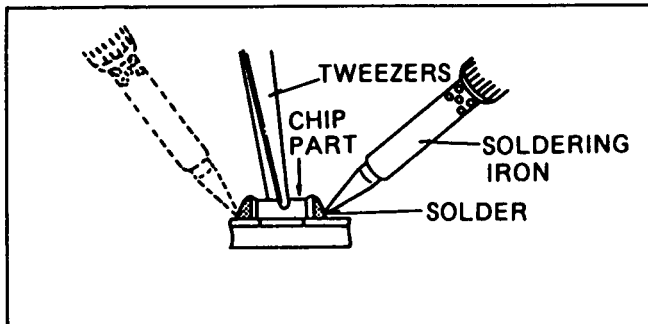


FIG. G7

1-3. HOW TO REMOVE THE FLAT-IC

(WITH HOT-AIR FLAT-IC DESOLDERING MACHINE)

(FOR EXAMPLE)

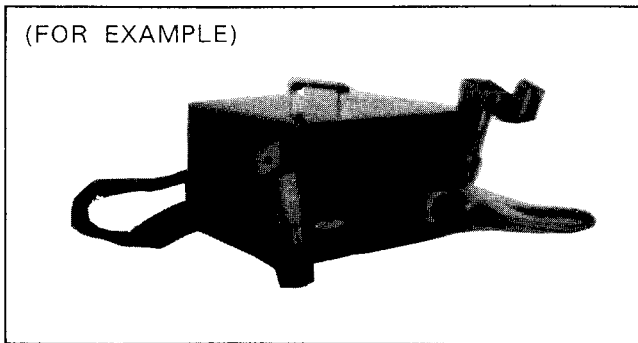


FIG. G8

- (1) Prepare the HOT-AIR FLAT-IC DESOLDERING MACHINE. And then apply hot air to FLAT-IC about 5 ~ 8 seconds.
- (2) Remove the FLAT-IC with tweezers while applying the hot air.

Caution: Do not supply the hot air to the chip parts around the Flat-IC for long time as damage may occur to the chip parts around the Flat-IC.

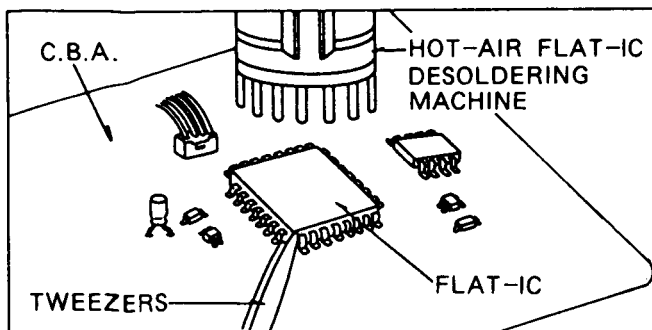


FIG. G9

(WITH SOLDERING IRON)

- (1) Using solder braid remove the solder from all pins of the Flat-IC. When you use the solder flux which is applied to all pins of the Flat-IC, you can remove it easily.

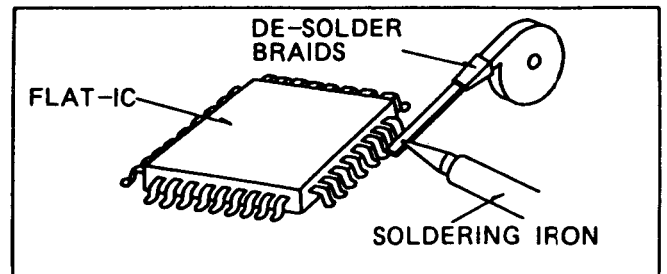


FIG. G10

- (2) Lift each lead of the Flat-IC upward one by one using a sharp pin or non solder wire (iron wire), while heating the pins using a fine tip soldering iron or a hot air blower.

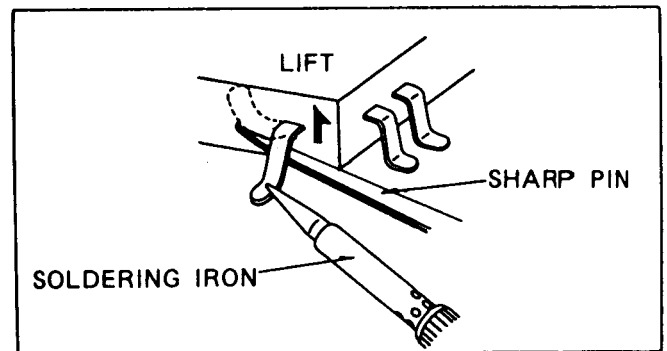


FIG. G11

(WITH IRON WIRE)

- (1) Affix the wire to workbench or solid mounting point as shown in FIG. G12.
- (2) Pull up wire as the solder melts so as to lift the IC lead from the PCB contact pad, while heating the pins using a fine tip soldering iron or hot air blower.

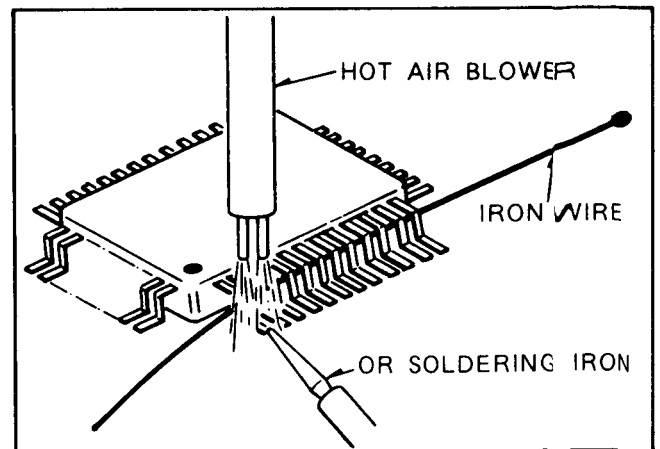


FIG. G12

Note: When using a soldering iron care must be taken to ensure that the Flat IC is not being held by glue before it is the PCB may be damaged if force is used.

SECTION 1 GENERAL DESCRIPTIONS

1-1. TECHNICAL INFORMATION

INITIALIZATION OF CHANNEL MEMORY IC (IC7505/M6M80021P)

When replace the channel memory IC (IC7505/M6M80021P), the memory IC should be initialized to keep formal specification.

Note:

- 1) It should be performed before tuner preset.
- 2) During initialization or after initialization within 1 second, do not stop the power source. (Do not disconnect AC cord.)
- 3) Meaning of "INITIALIZATION" is to erase the "SKIP CH". In another to say the number of POSITION CH and DISPLAY CH to be same.

Method:

- 1) Press the CH UP/DOWN Button so that the Channel indicator indicates "-- --".
- 2) Connect the Diode (MA165) to Pin 54 of IC7501 for Anode, Pin 35 of IC7501 for Cathode twice.
- 3) Channel indication disappears, and approximately 3 seconds later Channel indicator indicates "1".

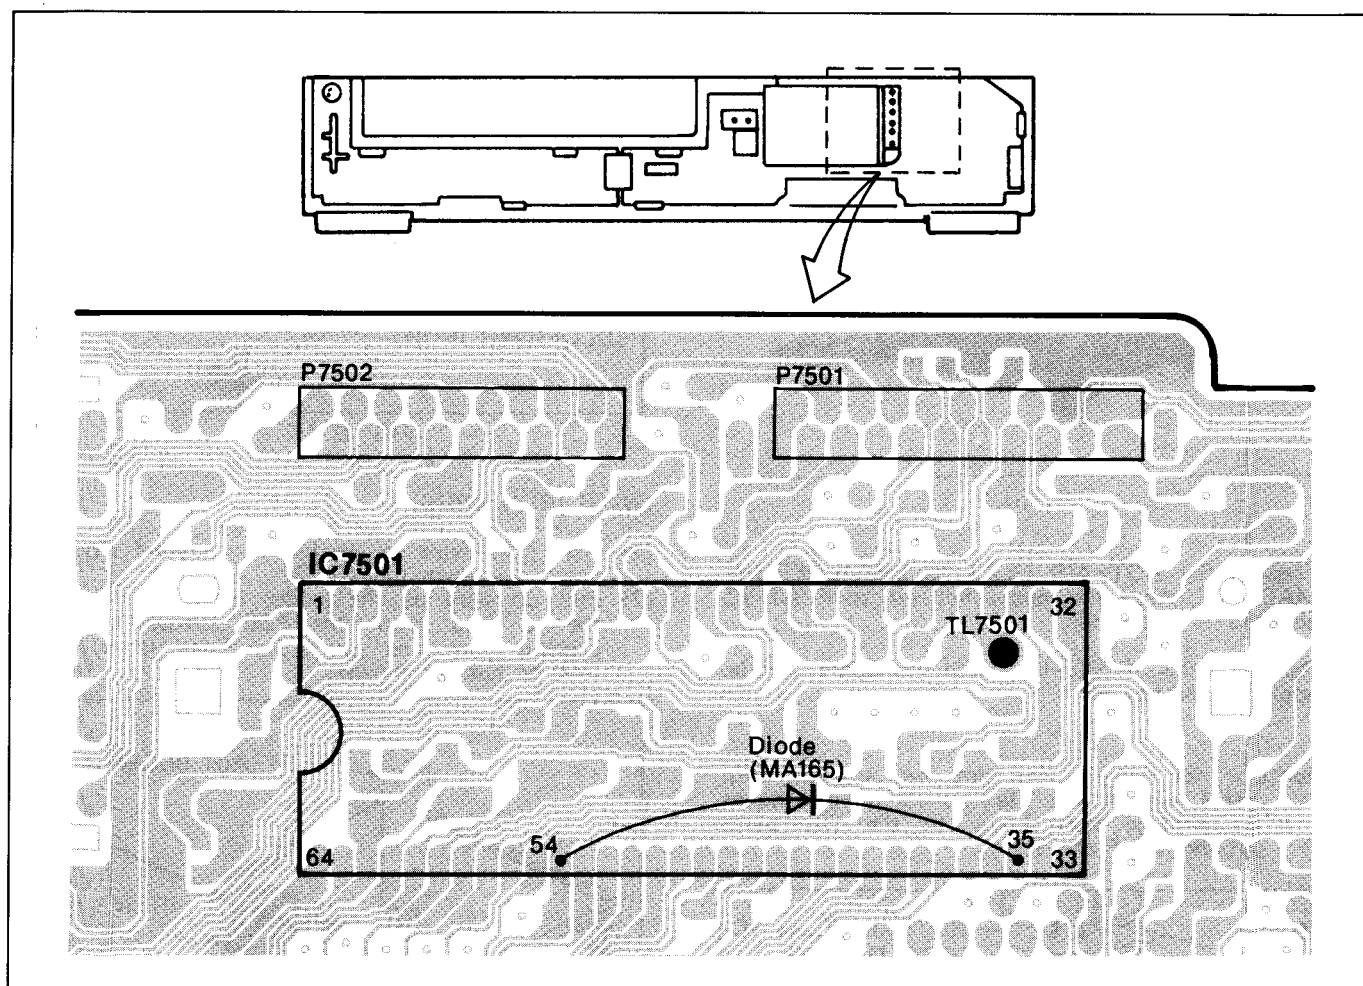


Fig. T1

SERVICE NOTE

When repairing without the top panel unit, Tape Select Switch must be set to the E195 position to prevent the malfunction of the Take-Up Photo Sensor.

SERVICE INFORMATION DISPLAY


This unit can be confirmed the mode information which is detected by microprocessor IC6001 via multi function display.

Method:

- 1) Press "EJECT", "FF" and "REW" keys at the same time.
- 2) The counter of multi function display indicates microprocessor data approximately 1 minutes as shown in Fig.T2.

Note:

- 1) This mode can be entered even when Power off.
- 2) Also it can be displayed the data when connect jumper wire between TP6001 and TPGND. (Press "EJECT", "FF" and "REW" keys at the same time, increment service number)

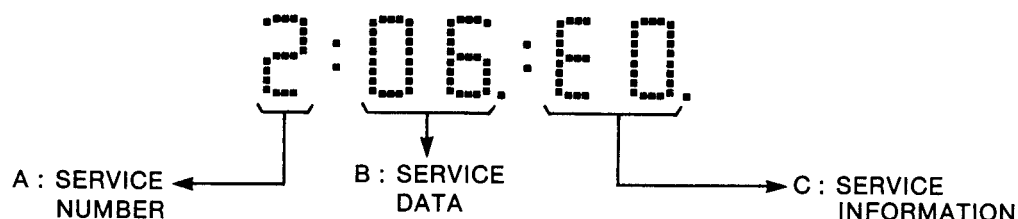

A: SERVICE NUMBER	B: SERVICE DATA	
1	*0 (hex)	can not detect Take-up and Supply Photo
	*9 (hex)	detect Take-up Photo
	*U (hex)	detect Supply Photo
	*3 (hex)	detect Take-up and Supply Photo
2	02 (hex)	EJECT
	03 (hex)	CASSETTE IN
	04 (hex)	CASSETTE DOWN
	06 (hex)	STOP 1
	08 (hex)	STOP 2
	0U (hex)	PLAY
3	L* (hex)	STOP 1 → STOP 2
	4* (hex)	PLAY → CUE/REV
	3* (hex)	STOP 2 → PLAY
	2* (hex)	STOP 1 → FF/REW
	1* (hex)	During Unloading
5	1*** **** (bin)	capstan motor ON
	**** 1*** (bin)	capstan motor reverse direction
6	***1 **** (bin)	cylinder motor ON

C : SERVICE INFORMATION

E0 : Normal
 E1 : Cylinder lock (STOP)
 E2 : Reel lock (STOP)
 E3 : Rev Motor lock
 E4 : Mechanism lock during unloading
 E5 : Mechanism lock during mode transfer to FF or REW
 E6 : Mechanism lock during front unloading (Cassette out)
 E9 : Serial data (IC6001 – IC7501) can not be transmitted.

Note:

1. "*" : No meaning
2. "hex" : hexadecimal digit
3. "bin" : binary digit

ex.


bin	hex
0000	0
0001	1
⋮	⋮
1010	U
1110	L

Fig. T2

Connections

•Connection to a TV Set with 21 Pin Scart Terminal

The Scart connection is optional but will be required to playback Hi-Fi stereo sound through a stereo TV. See page 1-8 for more detail.

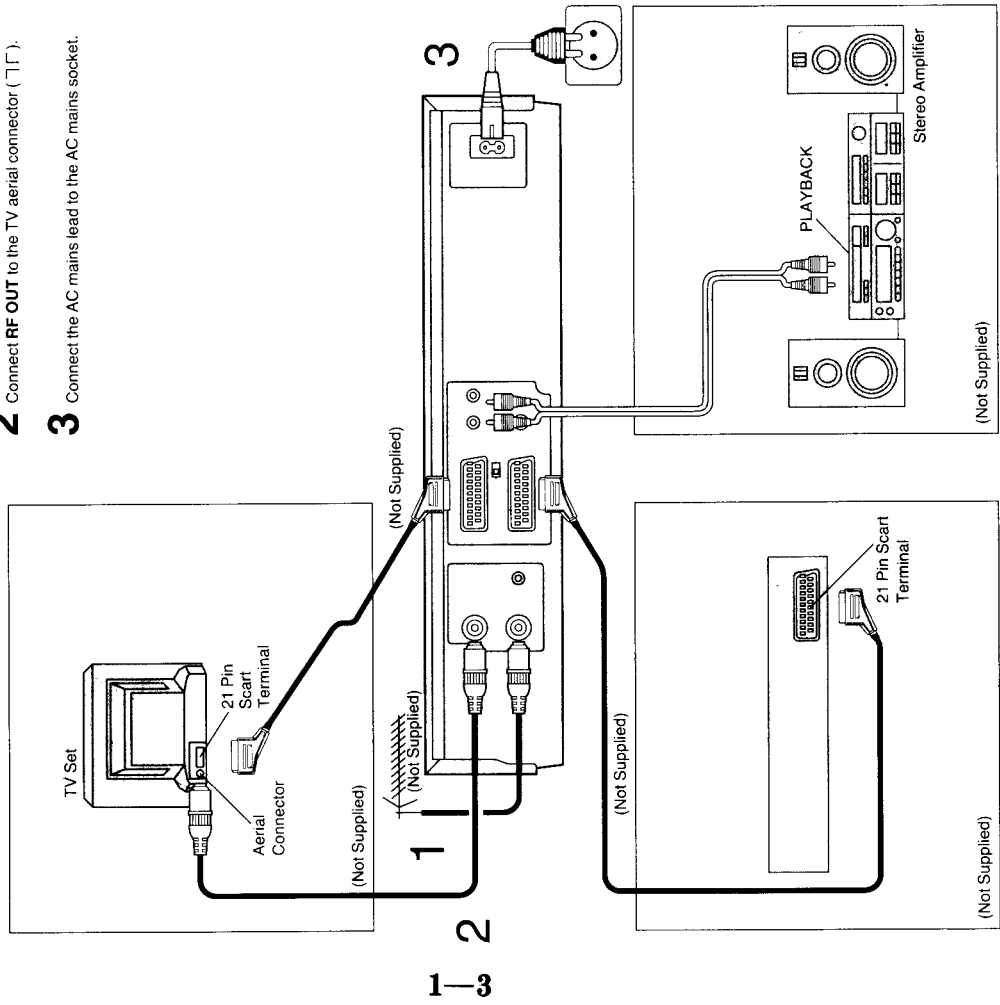


•Connection to a Satellite Receiver, etc.

•Connection to a Stereo Amplifier

•Connection to a pay TV decoder

Connect the TV set decoder to the VTR as shown in the figure. One decoder can be used both for the VTR and TV.

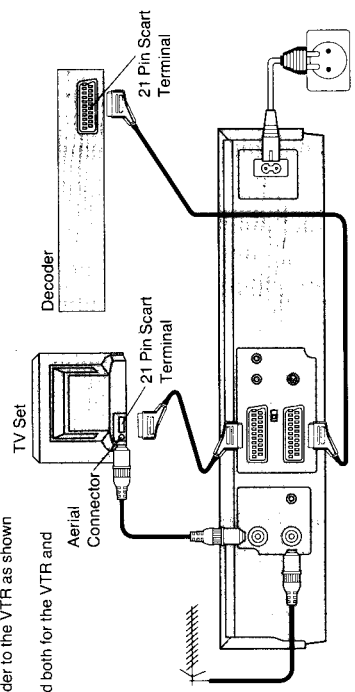

Note:

•If the TV set is provided with an RGB-compatible connector, connect the 21-pin AV cable from the VTR to this connector. Use full-pin 21-pin AV cables for connecting the TV set and VTR and for connecting the VTR and decoder.

AV LINK

With this button the connected colour TV set can be switched from TV to AV operation.
Condition: connection by means of Scart cable, and reaction to switching voltage as for PLAY function. This makes a variety of functions possible, such as simultaneous recording and viewing when a "Premiere" decoder or a satellite receiver has been connected.

Enjoying sound and pictures from the VTR

VTR mode (VTR indicator lights)

Watching another program on the TV while recording on the VTR


TV mode (VTR indicator goes off)

- Select the program to be watched using the TV set's tuner.
- The sound and pictures of a different channel are received by the VTR.

Power ON	VTR	TV set
	VTR mode	AV input selected
	TV mode	Input from TV set's tuner*
Power Off	—	Input from TV set's tuner

*When the VTR is set to the TV mode and the VTR to the pay TV (channels 90 to 99) mode, the signals will still be scrambled even when pay TV is selected by the TV set's tuner. At a time like this, either set the VTR to the VTR mode or switch the TV set's input signals to AV input.

Tuning the TV into your VTR

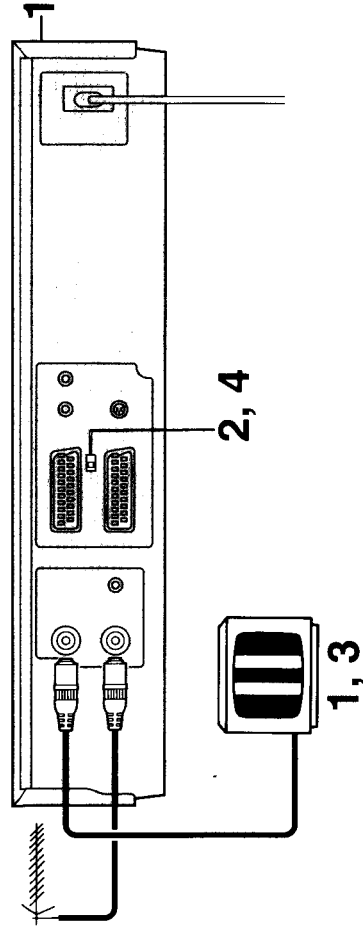

It is possible to view the video picture on your TV in the same way as you watch TV broadcasts.

If you are connecting the video to the TV by the use of the 21 pin scart terminal then you do not need to follow the procedure mentioned below. See page 1-3.


Operations

- 1 Turn the TV on. The VTR should also be turned on by pressing **VTR** on the front panel of the video.
- 2 To generate a test pattern, set the **TEST SIGNAL** located on the rear of the video to ON.
- 3 Set the TV to a free station number which you wish to use for your video playback i.e. station 5. Follow the tuning procedure for your TV until you can view the **TEST BARS**.
- 4 After tuning the test bars into the TV, set **TEST SIGNAL** to OFF. Station 5 is now your video channel.


Note:

The **TEST** signal is transmitted on channel 36 of the broadcasting channels. If you are encountering interference from another broadcast on the video channel, you may readjust to a free channel by using the **CH ADJ.** screw which is located on the rear of the VTR.


Please note that if the **CH ADJ.** screw is used then you will have to return your TV to the **TEST** signal as in item 2 to 4 above.

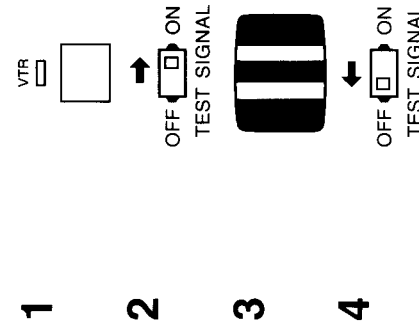

Setting the Clock of the VTR

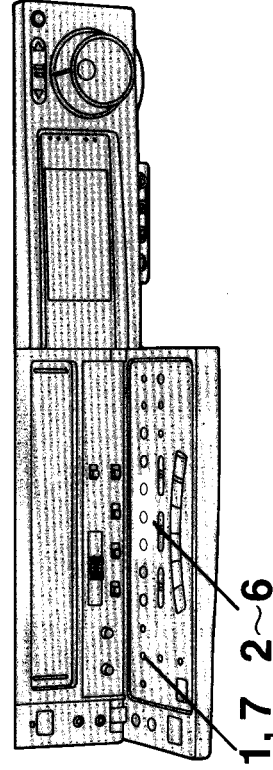

For Example: Set the clock for Sunday, October 10, 1999, 20:15.

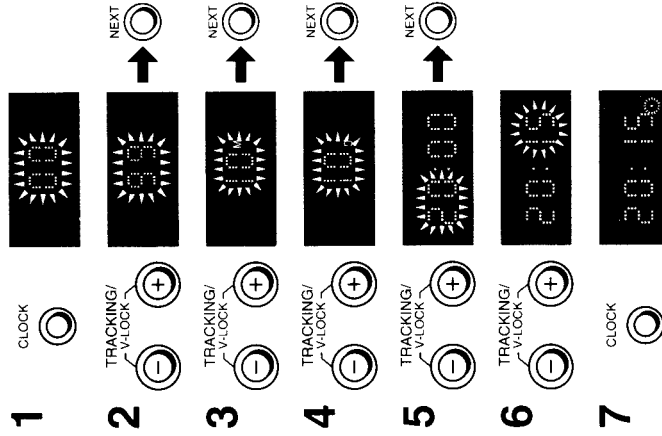

In addition to setting the VTR clock from the remote controller, it can also be set directly from the VTR. The built-in digital clock employs the 24-hour system.

Preparation

Turn ON the VTR.

Operations


- 1 Press **CLOCK**.
- 2 Set the year by pressing **TRACKING/V-LOCK** + or - , and then press **NEXT**.
- 3 Set the month by pressing **TRACKING/V-LOCK** + or - , and then press **NEXT**.
- 4 Set the date by pressing **TRACKING/V-LOCK** + or - , and then press **NEXT**.
- 5 Set the hour by pressing **TRACKING/V-LOCK** + or - , and then press **NEXT**.
- 6 Set the minute by pressing **TRACKING/V-LOCK** + or - , and then press **NEXT**.
- 7 To start the clock from this setting, press **CLOCK**.

Note:

The clock operates for at least 60 minutes, by its back up system in the event of power failure.

Storing TV Broadcasts into your VTR

Storing TV Broadcasts into your VTR

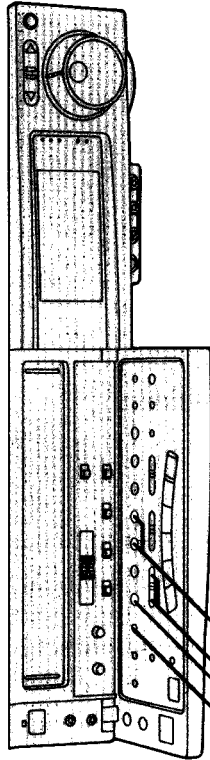

1, 5, 4, 2, 3

For example:

Set the programme position.

1 PRESET/FINE/NORMAL

2

3

TRACKING/V-LOCK

4

5

Note:

While tuning, your video may lock onto several weak stations from distant transmitters. Should this occur press **TRACKING/V-LOCK**, or **PROG/RECALL**, until a strong station is received.

Introduction

The VTR is fitted with its own tuner (just like a normal TV set) and can be pre-set to receive up to 99 TV broadcast stations.

Preparation

Confirm the TV is on and the VTR viewing channel is selected.

Operations

- 1 Press the **PRESET/FINE/NORMAL**.
 - 2 Select programme position 35 for tuning by using **✓** **▲**.
 - 3 To search for the TV station press **TRACKING/V-LOCK** + or - . If the required TV broadcast is not displayed, again press + or - .
 - 4 Select the broadcasting system for the TV station tuned, by using **PROG/CHECK**.
In the Display, "1" (PAL) or "2" (MESECAM) will be displayed.
 - 1 (PAL) For receiving PAL system broadcasts
 - 2 (MESECAM) For receiving SECAM system broadcasts

The MESECAM Indicator Lamp lights up.
- Repeat steps 2-4 for each channel you want to tune to a station.
- 5 Once all the broadcast stations are memorized into their appropriate station positions, press **PRESET/FINE/NORMAL** once again to set the VTR to normal operative mode.



Fine Tuning Procedure

- 1 Press **PRESET/FINE/NORMAL** twice.
- 2 Press **TRACKING/V-LOCK** + or - to obtain the best tuning condition.
 - "AFC" Indicator will not be displayed.
 - To return the tuning to its former state, press **AFC/VPS**.
- 3 Press **PRESET/FINE/NORMAL**.

Blanking of Unoccupied Programme Positions

- 1 Press **PRESET/FINE/NORMAL**.
- 2 Select a programme position which you do not want to tune to a TV station, by using **✓** **▲**.
- 3 Press **CLEAR** ("—" "—") will be displayed in the Programme Position Indication.
 - Repeat steps 2 and 3 for any programme positions on which no stations are to be tuned. Afterwards, these programme positions will be skipped during Up/Down selection of the programme position.
 - To cancel the blanking of a programme position, select that programme position on the VTR and then press **CLEAR**.
- 4 Press **PRESET/FINE/NORMAL** twice.

Channel Indication	TV Channel	
	Germany/Italy	Other Countries
2-12	E2-E12	E2-E12
13-20	A-H (Only Italy)	—
21-69	21-69	21-69
74-76	—	S1-S3
80-82	—	M1-M3
83-89	S4-S10	M4-M10
90-99	S11-S20	U1-U10
121-141	(8 MHz) Hyperband	S21-S41

*In Italy: H1...(11), H2...(12)


On the programme positions (channels) 1-89, normal TV stations can be preset.

On the programme positions (channels) 90-99, DBS stations can be preset, such as Pay TV (Premiere).

Descramble operation is possible only for these programme positions.

Controls, Indicators and Connection Sockets


Controls, Indicators and Connection Sockets

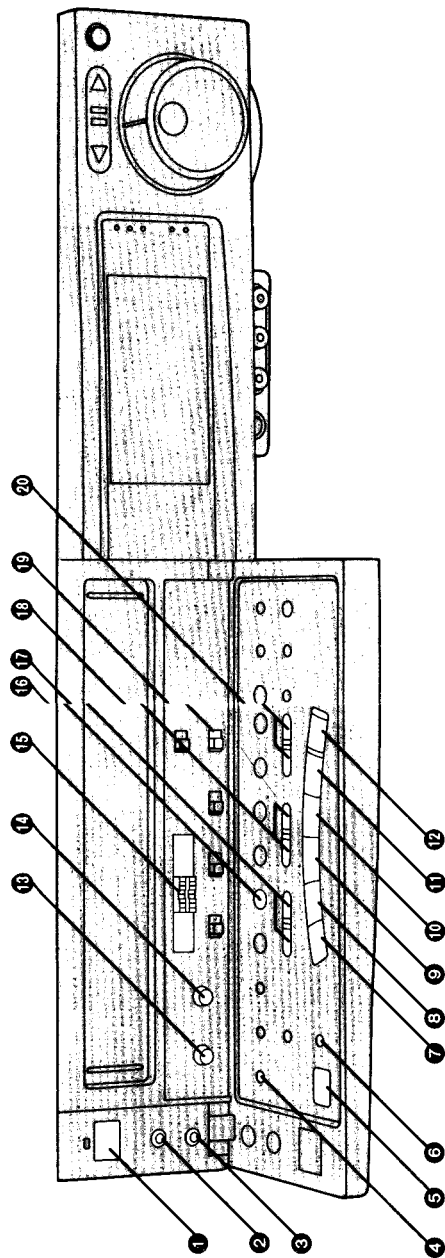

- 2 MIC**
Connect a microphone to this socket for recording. Then, this socket has priority.
- 3 PHONES**
For connecting stereo headphones.
- 4 AV LINK**
Press this button to select the VTR mode or TV mode for AV LINK.
- 5 EJECT**
Press this button to eject the cassette tape.
- 6 AUDIO OUT**
Press this button to select the desired sound tracks. Each press of this button changes the selected sound tracks as follows:
Hi-Fi stereo (L and R) — Hi-Fi mono left (L) — Hi-Fi mono right (R) — Normal (Hi-Fi off) — Hi-Fi Stereo...
- 7 REW (REWIND)**
Press this button once when the tape is stopped to rapidly rewind it. For short Review playback (during normal playback), keep the button pressed for as long you want the tape to be played back at high speed in reverse direction. For longer Review playback (during normal playback), quickly press the button to start the Review playback. "◀▶" is lit.
Hold down the button while the tape is rapidly rewinding to monitor the picture at high speed in the reverse direction.
- 8 PLAY**
Press this button to start playback. "▶" is lit.


- 9 FF (FAST FORWARD)**
Press this button once when the tape is stopped to rapidly wind it forward. For short Cue playback (during normal playback), keep the button pressed for as long you want the tape to be played back at high speed in forward direction. For longer Cue playback (during normal playback), quickly press the button to start the Cue playback. "▶▶" is lit.
Hold down the button while the tape is winding forward to monitor the picture at high speed in the forward direction.
- 10 STOP**
Press this button to stop any playback or recording.
- 11 PAUSE/STILL**
Press this button to stop the tape temporarily during playback and recording. Pressing the button again releases the pause.
If pressed during playback, a still picture is shown and "⏸" is lit.
• If the pause is not released within 5 minutes, the VTR will automatically switch to the STOP mode to protect the tape and the video heads.
- 12 REC**
Press this button on the VTR to start a recording. The two recording buttons on the remote controller have to be pressed together for the same function. "▷ REC" is lit.
- 13 PHONES LEVEL**
For adjusting the volume level of connected stereo headphones.
- 14 PICTURE**
Use this control to adjust the sharpness of the picture. It becomes softer when the control is turned to the left, and sharper when turned to the right.

- 15 HI-FI REC LEVEL**
Use this control for adjusting the recording level to peak at +4 dB on the recording level indicator.
- 16 RECORDING SP/LP**
Press this button to select the tape speed required for recording.
SP gives the best picture quality.
LP gives the longest recording time.
This needs only to be set for recording since the VTR automatically selects the correct speed for playback.
- 17 ⏮ ⏭**
Press these buttons to select the required TV station. The VTR can handle up to 99 stations.
- 18 OTR ON (ONE-TOUCH TIMER RECORDING)**
Press + or - to set the OTR starting time. "OTR" and "OFF" are lit. A single push changes the time in 1-minute steps, and holding down either button changes the time in 10-minute steps.
- 19 REMOTE MODE (VTR 1/2)**
VTR 1: Set at this position on both the VTR and remote controller for normal use with one VTR.
VTR 2: Set at this position when using two Panasonic VTRs.
This allows the remote controller to be set for operating VTR 1 or VTR 2.
- 20 OTR OFF (ONE-TOUCH TIMER RECORDING)**
Press + or - to set the OTR ending time. "OTR" and "OFF" are lit. A single push changes the time in 1-minute steps, and holding down either button changes the time in 10-minute steps. The OTR OFF buttons must be first pressed within 8 seconds after the OTR starting time has been set, otherwise the starting time will be cancelled.

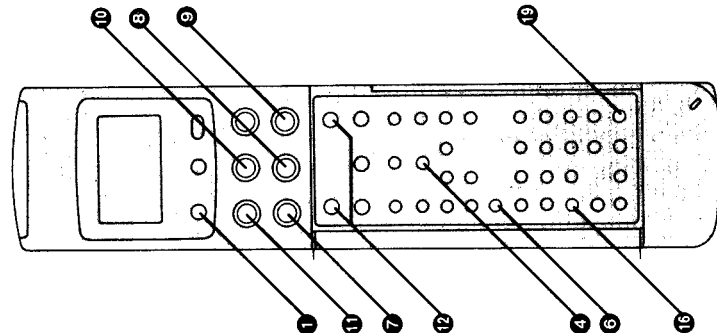


Basic Controls

- 1 VTR (Video Cassette Recorder On/Off)**
The VTR is turned on and off by pressing this button. The indicator on the button is lit when the VTR is on.
• The VTR is also automatically turned on if a cassette tape is inserted.
— This VTR is also temporarily turned on if EJECT is pressed to eject a cassette tape. In this case, it is automatically turned off afterwards.

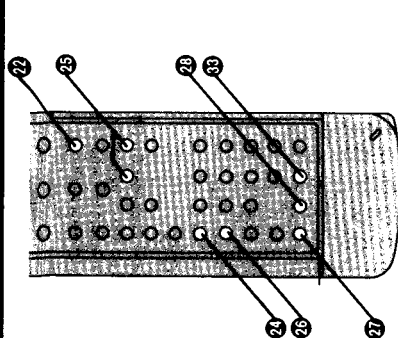


Additional Controls



- 22 CLOCK**
Press this button to initiate date and time settings. After the time has been entered correctly, this button is pressed again to memorize the setting.
- 23 RESET**
To reset the tape counter (elapsed time) to "0:00.00".
• The Tape Counter is automatically reset to "0:00.00" when the video cassette is inserted.
- 24 PRESET/FINE/NORMAL**
Press this button to initiate TV station settings for the tuner.
- 25 PROG/CHECK (PROG)**
This button is used to select the programme number for timer recording. Number "1, 2, 3... or 8" is lit. The button is also used to display details of a preset timer recording.
- 26 TRACKING/V-LOCK**
For manual tracking adjustment
The + and - buttons are used to adjust the tracking when, for example, noise bars on the picture are better removed manually than by the automatic digital tracking control. After making a manual adjustment, press both buttons together to return to automatic digital tracking control.
Manual tracking adjustment is sometimes necessary to reproduce good Hi-Fi sound and picture quality when playing back tapes that have been recorded on another VTR.
- 27** For slow tracking adjustment
When noise bars appear during Super Still, Super Still Advance or Super Fine Slow playback, switch over to slow playback and adjust with the "+" or "-" button to reduce the noise bars.
For vertical locking adjustment
When the picture is tilted, press the **VERTICAL LOCK** button to return the picture to its original position during still-picture playback.

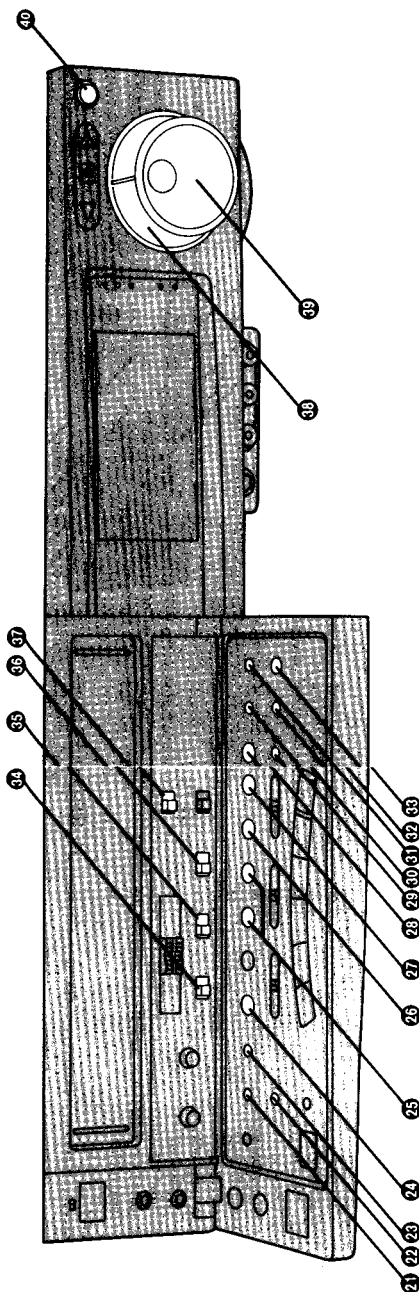

- 28 NEXT**
For setting the clock and timer recording
(Remote controller: No function)
These buttons are also used for selecting the different time units when setting the clock to the present time, and for setting the data necessary for timer recording.
- 29** Press this button to memorize preset data and to change to the next variable when setting the clock or timer. At each push, the flashing indication on the date display changes in the order YEAR, MONTH, DATE, HOUR, MINUTE.
- 30 TIMER REC**
This button used to set the VTR for timer recording.
When set for timer recording, "T" is lit, and the VTR will turn itself on automatically to begin recording at the preset time, even if it has been turned off by the ON/OFF button.
The VTR can only be operated manually when the timer recording function is off. Timer recording can be set whether the function is on or off, but recording will only be performed when the function is on.
If the timer recording function is on, but no video cassette is inserted or no timer recording has been programmed, the "T" will flash to warn that timer recording cannot be performed.
- 31 CANCEL**
Press this button to cancel the settings made for a timer recording.
- 32 AUDIO DUB**
Press this button to set up the VTR for audio dubbing.
- 33 AFC/VPS**
The VPS function for timer recording can be cancelled or activated again.
After performing manual fine tuning of a TV station, pressing this button will return the tuning to automatic.
- 34 INSERT**
Press this button to set up the VTR for insert editing.
- 35 CLEAR**
This button should be set according to the colour TV system used during recording and playback.
When the MESECAM indicator is lit, the MESECAM system is selected.
- 36 PAL/MESECAM**
This button should be set according to the colour TV system used during recording and playback.
When the MESECAM indicator is lit, the MESECAM system is selected.
- 37 NOISE FILTER/EDIT**
OFF: Set at this position for normal use of the VTR.
EDIT: Set at this position for editing operations (of dubbing the tape). The picture sharpness cannot be adjusted in this setting.
NOISE FILTER ON:
Use this setting when playing back tapes with inferior picture quality that could be caused, for example, by repeated dubbing.
- 38 HI-FI/NORMAL MIX**
Sound is recorded on both the Hi-Fi and normal sound tracks.
OFF: Normally set at this position to reproduce the better sound available from the Hi-Fi track.
ON: Both sound tracks are played back mixed together. Use this setting when playing back a cassette tape which has been insert edited or audio dubbed.
- 39 NTSC 4.43**
Normally set at this position, even when playing back NTSC system tapes.
ON: Only set at this position to dub NTSC system tapes.
This setting is needed on both the recording and playback VTR.
- 40 TAPE SELECT**
Set this switch according to the cassette tape being used so that the remaining tape time is indicated correctly.
~E195: For -E30, -60, -80, -120, -180 and -195 tapes.
E240: For -E240 tape.
E260: For -E260 tape.
- 41 Shuttle Ring**
With the Shuttle Ring, the playback speed can be adjusted step by step in both forward and reverse directions.
- 42 Jog Dial**
The Jog Dial makes it easy to locate any desired frame with utmost precision.
- 43 Jog/Shuttle**
Press this button to switch over to the jog and the shuttle operation.

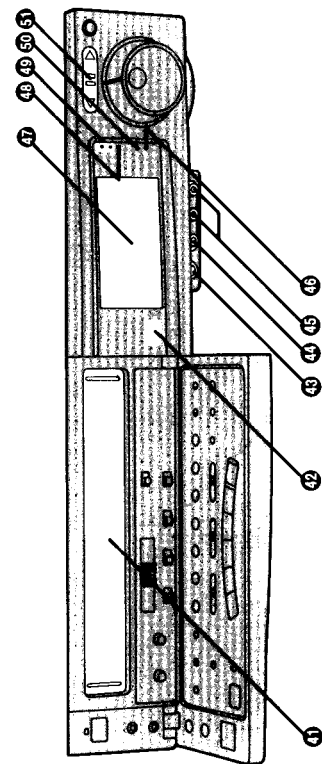


- ① **Cassette Compartment**
- ② **Infra-red Remote Control Receiver Window**
Receives the signals from the remote controller.
- ③ **SYNC. EDIT**
Connecting to a VHS/VHS-C Movie equipped with Synchro Edit Function.
- ④ **VIDEO IN (AV3)**
For connecting the video cable of a video camera or a second video recorder.
- ⑤ **AUDIO IN (AV3)**
For connecting the audio cable(s) of a video camera, a hi-fi stereo system or a second video recorder.
- ⑥ **Audio Dubbing Indicator**
- ⑦ **Multi-Function Display**
- ⑧ **Audio Level Meter**
- ⑨ **Timer Programme Number**
- ⑩ **Channel Display**
- ⑪ **VTR Indicator**
- ⑫ **Cassette-in Indicator**
- ⑬ **Tape Running Display**
- ⑭ **VPS Indicator**
- ⑮ **Timer Recording Indicator**
- ⑯ **Double Speed Indicator**
- ⑰ **Recording Indicator**
- ⑱ **OTR Indicator**
- ⑲ **Position Indicator**
- ⑳ **Date Display**
- ㉑ **Write Indicator**
- ㉒ **Remaining Tape Time Indicator**
- ㉓ **Audio Output Mode Indicators**
- ㉔ **Tape Speed Indicator**
- ㉕ **Counter Mode Indicator**
- ㉖ **Repeat Indicator**
- ㉗ **Search Indicator**
- ㉘ **Clock/Counter Display**
- ㉙ **MESECAM Indicator**
- ㉚ **Indicator Lamps for Bilingual and Stereo Reception**
When receiving a TV programme, the type of sound system in which it is broadcast is automatically indicated.
- ㉛ **Insert Editing Indicator**
- ㉜ **Jog/Shuttle Indicator**
This indicator lights up when the Jog/Shuttle Button is pressed.

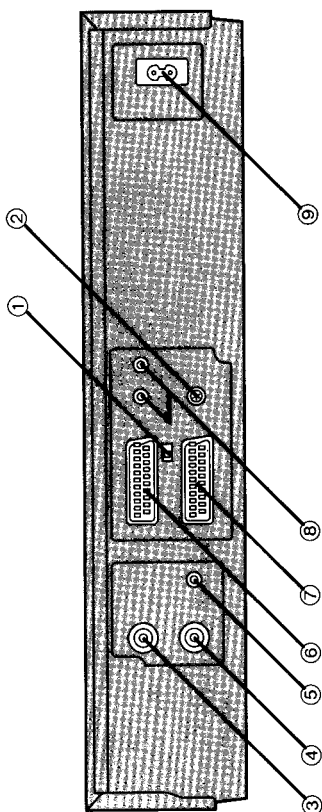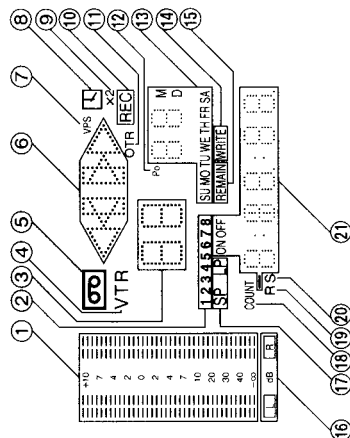


Rear Panel

- ① **TEST SIGNAL**
The test signal is transmitted on channel 36.
- ② **EDIT**
By connecting the optional Editing Controller (VW-EC300E/VW-EC310E) to this socket, such editing functions as Assemble Editing, Insert Editing and Audio Dubbing can be performed more quickly and efficiently between two VTRs or between a VTR and a camera recorder.
- ③ **RF OUT**
Use this to connect to the aerial terminal on a TV set.
- ④ **RF IN**
Use this to connect an external aerial.
- ⑤ **CH ADJ.**
Tape playback picture, etc. is viewed on channel 36 but if it is occupied by local station, channel assignment can be adjusted in the range of ± 4 ch.
- ⑥ **AV1**
This 21 pin scart terminal carries input and output signals for both picture and sound. TV sets equipped with a similar socket can be connected here.
- ⑦ **AV2**
This 21 pin scart terminal carries only input signals for both picture and sound.
- ⑧ **AUDIO OUT**
Use these to connect the sound to a stereo audio system.
- ⑨ **AC IN ~**



Infra-Red Remote Controller

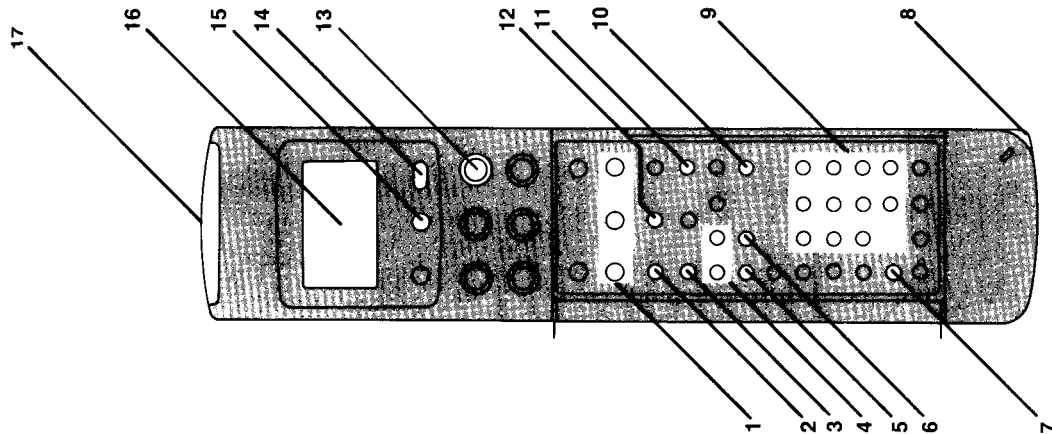

Infra-Red Remote Controller

1 SEARCH

Press the Search Button to activate the Search Function, and the VTR changes over to the Still Playback mode.

When the "+" Button is now pressed once, the tape will be played back at 1/30th of normal playback speed. At every further press of the "+" Button, the playback speed will be increased step by step.

• By pressing the "-" Button, the playback speed can be changed in the reverse direction (Still Playback—Reverse Slow Motion Playback—Reverse Playback—Double Speed Reverse Playback—Review Playback).

2 CLOCK/COUNTER

This button is used to switch between the display of the clock and the tape counter.

The numbers on the tape counter only change for recorded segments of the tape.

3 MONITOR

Keep this button depressed during playback to watch TV broadcast.

• When the VTR is connected to the TV set via 21 pin scart cable, this function does not work.

4 INDEX

For the index search function.

5 REPEAT

For the Repeat Playback function.

6 ZERO STOP

For the ZERO STOP function.

7 VPS

The Video Programme System (VPS) is a very convenient system which assures that the TV programmes you have programmed for timer recording will be recorded exactly from beginning to end, even if the actual broadcasting time differs from the scheduled time due to delayed start or extension of the programme duration. Also, if a programme is interrupted and, for example, some special news are inserted, the recording will also be interrupted automatically and resumed when the programme continues.

8 Bar Code Reading Section

After the Bar Code Reader is turned on, the tip lights in red.

9 Ten Key

• for selecting the programme positions

MO-SA

9: (9) SU MO-SA

19: (19) → (1) → (9) →

• for the Timer Search function

• for the Index Search function

• for programming of timer recording

10 TIME SEARCH

For the time search function.

11 INPUT SELECT

Press this button to select the A1~A3 external recording source.

A1: Through the 21 pin AV1 socket.

A2: Through the 21 pin AV2 socket.

A3: Through the Audio Video IN3 sockets. (AV3)

12 TAPE REMAIN

Press this button during playback or recording to have the approximate remaining tape time displayed.

"REMAIN" is lit while the remaining tape time is displayed.

• When using a VHS-C videocassette in this VTR, the remaining tape time indication may not be correct or this indication may not appear at all.

13 STILL ADV

Press this button during still playback. Each time you press this button, the still picture is advanced.


14 TRANSMIT

Press this button to transmit to the VTR data that has been set on the remote controller by either manual means or by bar codes.

15 SCANNER ON/OFF

To turn the Bar Code Reader on and off.

16 Display

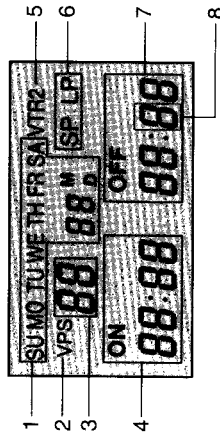

- 1 Date Display
- 2 VPS Indicator
- 3 Programme Position Display
- 4 Start Time Display
- 5 Remote Control Mode Indicator
- 6 Tape Speed Indicator
- 7 End Time Display
- 8 Check Indicator

17 Infra-red Transmitter

The programming data are transmitted from here to the VTR.

Infra-Red Remote Controller

Power source for the remote controller


The remote controller is powered by 2 UM3 or R6 size batteries. The life of the batteries is about one year, although this depends on the frequency of use.

Precautions for battery replacement


- Load the new batteries with their polarity (+ and -) aligned correctly.
- Do not apply heat to the batteries, or an internal short-circuit may occur.
- If you do not intend to use the remote controller for a long period of time, remove the batteries and store them in a cool and dry place.
- Remove spent batteries immediately and dispose of them.
- Do not use an old and a new battery together, and never use an alkaline battery with a manganese battery.

Loading the batteries




Remove the battery compartment lid.

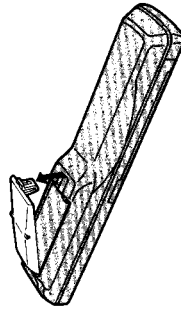

Place the batteries in the battery compartment according to the polarity indicated inside the battery compartment.

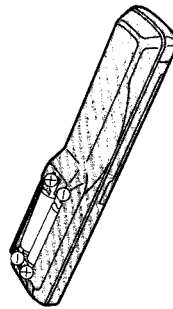

Replace the lid.

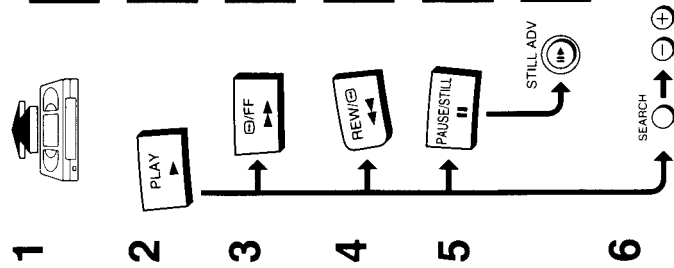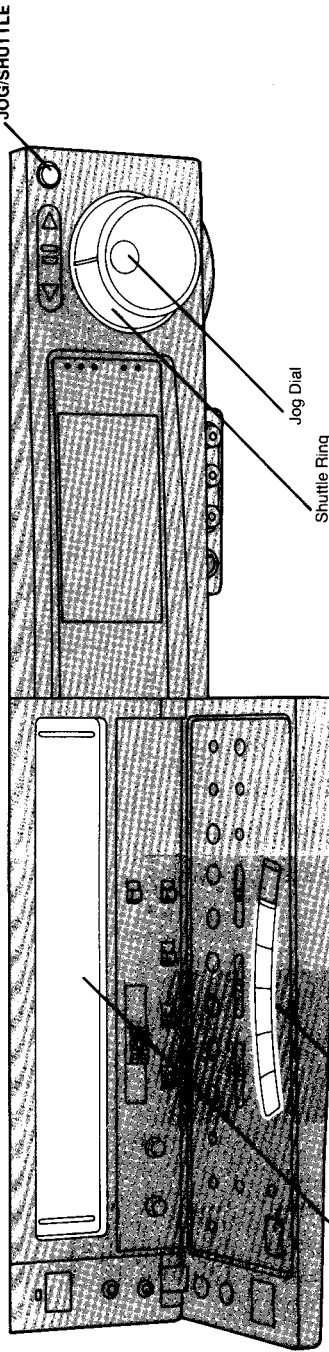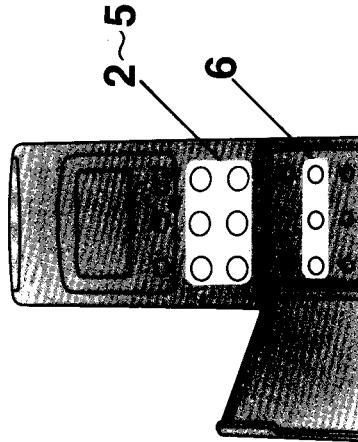

Introduction

The playback controls allow you to view at normal speed, to search for a specific scene with the tape moving faster than normal to freeze into a still picture, to advance this still picture frame by frame, and to view in slow-motion.

Operations

- 1 Insert a recorded cassette tape.
 • If it has already been inserted, press VTR to turn the unit on.
 Turn on the TV and select 21 pin scart terminal input or station number which has been tuned to channel 36 for VTR playback.
- 2 Start viewing the picture by pressing **PLAY**.
- 3 To search for a specific scene while viewing the picture, press and hold down **FF** to search ahead.
 For longer Cue playback, quickly press the button to start the Cue playback. To change back to normal playback, press **PLAY**.
- 4 To search for a specific scene while viewing the picture, press and hold down **REW** to search back.
 For longer Review playback, quickly press the button to start the Review playback. To change back to normal playback, press **PLAY**.
- 5 To interrupt playback for a still picture, press **PAUSE/STILL**.
 To continue the normal playback, press **PLAY** or this button again.
 To advance one frame of the still picture, press **STILL ADV**.



- 6 To activate the Search Function, press **SEARCH**, and adjust the playback or the reverse playback speed as necessary by pressing **+** or **-**.
 To change back to normal playback, press **PLAY**.

Jog/Shuttle

- 1 During any playback mode, press **JOG/SHUTTLE**, and the VTR drops into still mode.
- 2 Using the Shuttle Ring, select the desired playback speed in both forward and reverse directions.
- 3 Using the Jog Dial, locate the desired picture exactly.

Notes:

- If Cue or Review playback continues for more than 10 minutes, the VTR will automatically switch over to the normal playback mode. If the Still and Slow playback continues for more than 5 minutes, the VTR will automatically switch over to the stop mode.
- In Cue and Review playback, noise bars and distortions can occur on the screen. However, this is not a malfunction.
- The sound will be played back only during normal playback.
- Audio reproduction of linear (conventionally recorded) stereo tapes will be monaural when played back on the FM Hi-Fi video recorders.
- In "LP" mode only:
 1. During any playback mode other than normal playback, the picture may contain some noise bars or vibration, the colour may be unstable or colourless.
 2. When playing back a tape which was recorded on another VTR, it may be necessary to adjust the Tracking Control. In some cases the picture quality may still be inferior. This is due to limitation of format.
- PAL/MESECAM
 - During Playback
 - PAL: When playing back a tape recorded in the PAL system
 - MESECAM: When playing back a tape recorded in the MESECAM system
- Even after the VTR has been set to the stop mode, its head cylinder will rotate for about 20 minutes so that the playback picture will appear promptly on the TV screen.

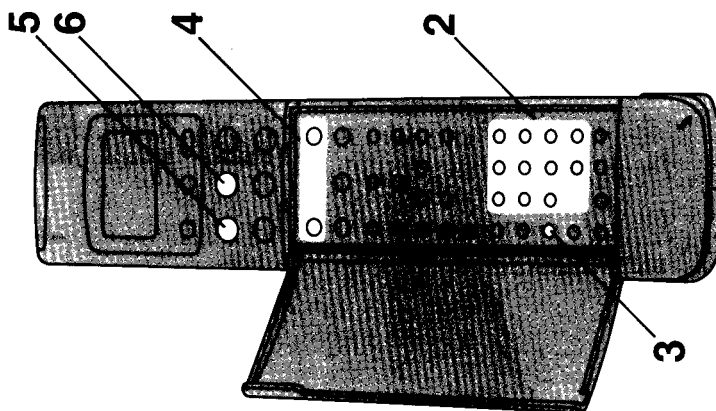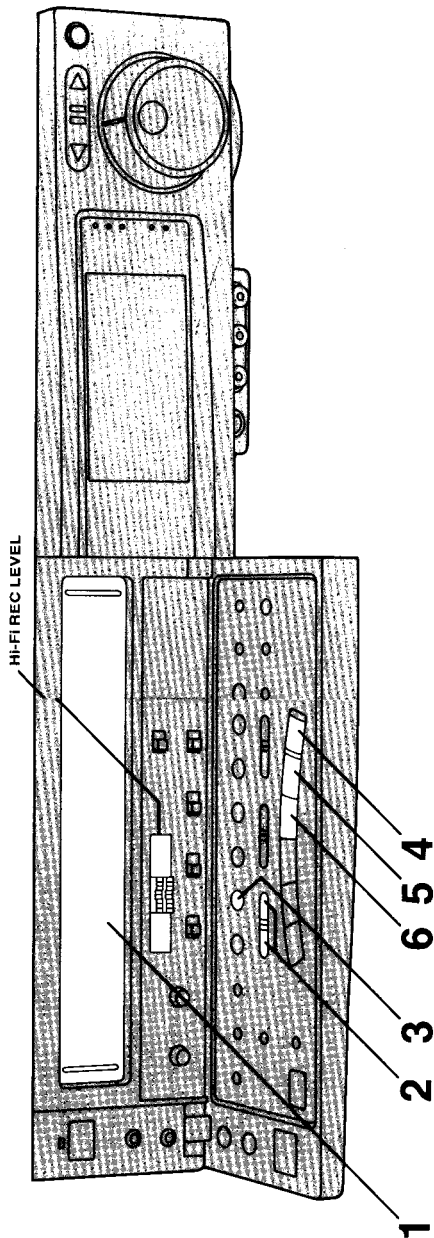

Introduction

You can record a TV programme without turning on the TV, and you can record one TV programme while viewing another.

Operations

- 1 Insert a cassette tape with an intact erasure prevention tab.
 • If it has already been inserted, press **VTR** to turn the unit on.
- 2 Select the required TV station on the VTR by pressing **▼ ▲**.
- 3 Select the tape speed **SP** or **LP**.
- 4 Start recording by pressing **REC**.
 • When a video cassette with broken out tab is inserted, the "REC" indication will flash, and an alarm sound will be produced to indicate that recording is not possible.
- 5 To interrupt recording, press **PAUSE/STILL**, and press again to continue recording.
 • If you leave the VTR in the pause mode for more than 5 minutes, the VTR will automatically switch over to the stop mode to protect the tape and the video heads.
- 6 To stop recording, press **STOP**.

Recording one TV programme while viewing another

- 1 Use the on-the-spot recording operations.
- 2 Select the TV programme on your TV set you wish to view at the present time on the TV set.


Adjustment of the Hi-Fi Audio Recording Level

Setting the **HI-FI REC LEVEL** to the centre "5" position (click stop) assures satisfactory audio recording results in most cases. When using the VTR as a Hi-Fi audio recorder or when producing your own video tapes, it may be desirable to adjust the **HI-FI REC LEVEL** to some other position.


(It is recommended to adjust so that peaks in the audio level reach about +4 dB.)

- The sound to be recorded on the "normal" audio track will be adjusted automatically.

Erasure Prevention Tab




To prevent accidental erasure

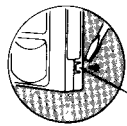

Break off the tab with a screwdriver.

To record again

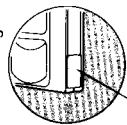

Cover the hole with adhesive tape.

Introduction

The VTR incorporates a number of automatic features for easy operation.

1 Repeat Playback

To repeat playback from the beginning of tape to the end of the recorded segment, press **REPEAT**.

2 ZERO STOP

To fast forward or rewind to the counter 0:00.00, Press **ZERO STOP**.

Automatic switching on

When a cassette is inserted, the VTR turns itself on automatically.

Automatic playback

When a cassette without an erasure prevention tab is inserted, the VTR starts playback automatically.

Automatic rewinding


When the tape reaches its end during recording (except for OTR and timer recording) or playback, it will automatically be rewound to the beginning.

Automatic switching off and ejection

When the VTR is switched off, an inserted cassette can be ejected simply by pressing **EJECT**. The VTR will eject the cassette and automatically turn itself off again.

Automatic head cleaning

This VTR automatically removes tape particles and dust from the video heads to ensure continuously superior picture quality. While the head cleaner is working, some mechanical noise can be heard from the VTR, this not being a malfunction.

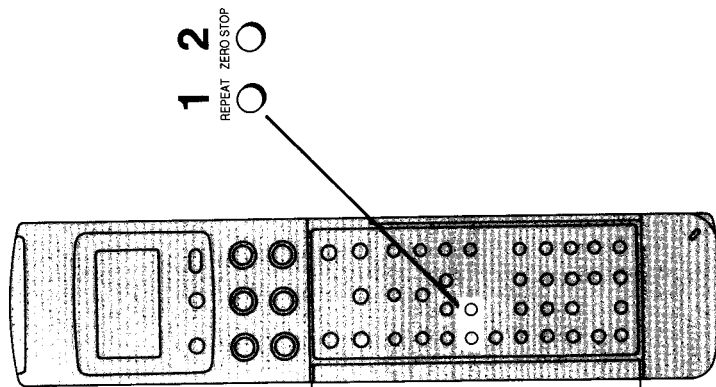

Introduction

OTR allows you to quickly set up the VTR to record a single programme starting within the next 24 hours.

Operations

- 1 Insert a cassette tape with an intact erasure prevention tab.
 - If it has already been inserted, press VTR to turn the unit on.
- 2 Select the required TV station on the VTR by pressing $\vee \wedge$.
- 3 Select the tape speed SP or LP.
- 4 Set the starting time by pressing **ON**.
 - When a video cassette with broken out tab is inserted, the "60" indication will flash, and an alarm sound will be produced to indicate that recording is not possible.
 - If you want the recording to start immediately, omit this step.
- 5 Set the ending time by pressing **OFF**.
After 4 seconds, the display will automatically change back to the starting time indication.
 - The VTR will automatically switch off, when the OTR is completed. To turn the VTR on again, press **VTR**.

Notes:

- To cancel an OTR setting, press **VTR**.
- It is possible to change the OTR starting time or the ending time before the recording starts.
- It is possible to change the OTR ending time during recording.
- Make sure that the OTR Function (One-Touch Timer Recording) does not overlap a programmed timer recording. An OTR always takes precedence over a timer recording.


To confirm the OTR ending time before the recording starts

Press **PROG/CHECK** once.


When this button is pressed twice, the display will change to the clock indication mode.

To confirm the present time during recording

Press **PROG/CHECK**.

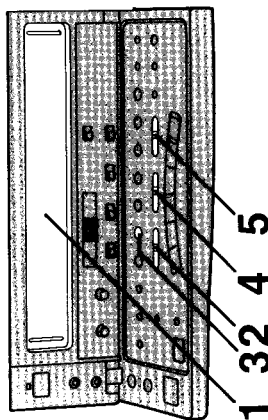


For example:
OTR recording of a TV Station 1 from 20:02 to 20:30.

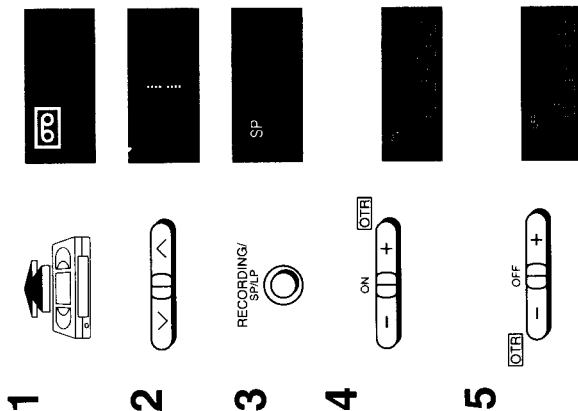

Timer Recording

Timer Recording

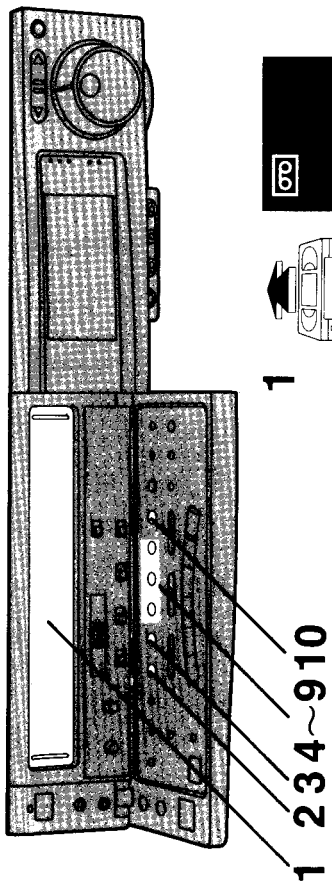

1 2 3 4 ~ 9 10

Introduction

Up to 8 programmes can be recorded over the following month by setting the timer.
This can also handle recording of daily and weekly programmes.

The daily recording can be set according to 3 patterns:
Monday to Friday
Monday to Saturday
Sunday to Saturday

For Example:

Programming a timer recording for a TV programme that will be broadcast on Wednesday, October 27, from 20:02 to 21:30, on programme position (channel) 1, on timer Programme number 1.
(Present date = October 10, 1999)

Operations

- 1 Insert a cassette tape with an intact erasure prevention tab.
• If it has already inserted, press VTR to turn the unit on.
- 2 Select the programme number by pressing **PROG/CHECK**.

- 3 Select the recording speed by pressing **RECORDING SP/LP**.

- 4 Select the TV station by pressing **TRACKING/V-LOCK** + or - and memorize by pressing **NEXT**.

- 5 Set the date by pressing **TRACKING/V-LOCK** + or - and memorize by pressing **NEXT**.
• For daily recording, select one of the three different daily patterns by pressing **TRACKING/V-LOCK** + or -.

- For weekly recording, select the day by pressing **TRACKING/V-LOCK** + or -.

- 6 Set the starting time hour by pressing **TRACKING/V-LOCK** + or - and memorize by pressing **NEXT**.

- 7 Set the starting time minute by pressing **TRACKING/V-LOCK** + or - and memorize by pressing **NEXT**.

- 8 Set the ending time hour by pressing **TRACKING/V-LOCK** + or - and memorize by pressing **NEXT**.

- 9 Set the ending time minute by pressing **TRACKING/V-LOCK** + or -.

- There is no need to press **NEXT**.

- Repeat steps 2 to 9 for the other programmes.

- 10 Activate timer recording by pressing **TIMER REC**.

- "TR" is displayed and the VTR is set in the standby mode so that it cannot be operated manually.
- If you want to operate the VTR manually, press **TIMER REC**.

To reactivate the timer press this button again.

Confirming the timer settings

Select the programme number to be checked by pressing **PROG/CHECK**.

The preset channel and start and ending times of the timer recording will be indicated for about 12 seconds.

Cancelling the timer settings

- Release from the standby mode by pressing **TIMER REC**.
- Select the programme number to be cancelled by pressing **PROG/CHECK**.
- Press **CANCEL**.

Turning VPS function On and Off

Press **AFC/VPS** in any of the operation steps 3 to 9.

- If the actual broadcasting times of timer recordings overlap (regardless of whether they are VPS-controlled), the recording that starts first has always priority, and the recording of the later beginning programme will start only after the first timer recording has finished.


- When the VPS signal drops out because the broadcast signal is weak, or when a broadcasting station does not transmit a regular VPS signal, the timer recording will be performed in the normal mode (without VPS) even if it was programmed for VPS.

Note:

If a timer recording is not performed to the end (not enough tape or cancelled by the user), the programmed timer recording data will be cancelled from the memory at 4 a.m. two days later.

However, if the Timer Record Function is activated or an OTR recording is being performed at that time, the programmed timer recording data will be cancelled at 4 a.m. the next day.

Using the Remote Controller

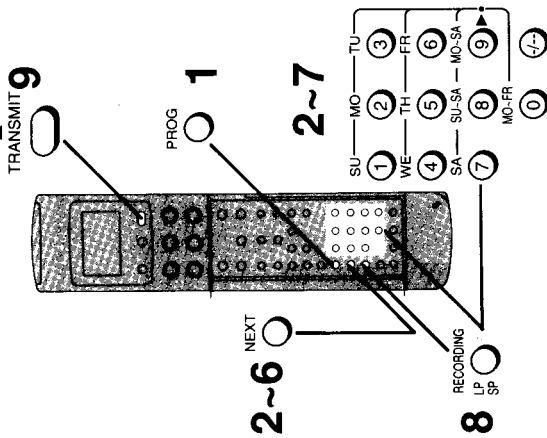

How to select the programme position (channel)

To select a figure between 1 and 9, press the numeric button corresponding to the number.

To select a 2-digit figure, first press the "1/2" button and then press the two corresponding numeric buttons.

How to set the Date and the Starting & Ending Times for Timer Recording

To select a figure between 0 and 9, first press the numeric button "0" and then press the numeric button corresponding to the number.

To select a 2-digit figure, press the two corresponding numeric buttons one after the other.

2 0 — 2
15 1 — 5
30 3 — 0

• The second button must be pressed within 5 seconds after the first button.

Operations

1 Start programming by pressing **PROG**.

The input field for the programme position on the display of the remote control unit flashes.

2 Enter the programme position and then press **NEXT**.

3 Enter the date and then press **NEXT**.

Timer Recording Every Day at the Same Time

For this timer function, several groups of days can be selected.

(A) Daily recording from Sunday to Saturday

(B) Daily recording from Monday to Saturday

(C) Daily recording from Monday to Friday

(A) MO-SA 9 — 8

(B) MO-SA 9 — 9

(C) MO-SA 9 — 0

MO-SA 9 — 0

MO-SA 9 — 0

MO-SA 9 — 0

MO-SA 9 — 0

MO-SA 9 — 0

MO-SA 9 — 0

MO-SA 9 — 0

MO-SA 9 — 0

MO-SA 9 — 0

MO-SA 9 — 0

MO-SA 9 — 0

MO-SA 9 — 0

MO-SA 9 — 0

MO-SA 9 — 0

MO-SA 9 — 0

MO-SA 9 — 0

MO-SA 9 — 0

MO-SA 9 — 0

MO-SA 9 — 0

MO-SA 9 — 0

MO-SA 9 — 0

MO-SA 9 — 0

MO-SA 9 — 0

MO-SA 9 — 0

MO-SA 9 — 0

MO-SA 9 — 0

MO-SA 9 — 0

MO-SA 9 — 0

MO-SA 9 — 0

MO-SA 9 — 0

MO-SA 9 — 0

MO-SA 9 — 0

MO-SA 9 — 0


MO-SA 9 — 0

MO-SA 9 — 0

MO-SA 9 — 0

For Example:

When programming a timer recording for a programme that will be broadcast on channel position 45 on the 3rd of the month, from 20:02 to 21:30.

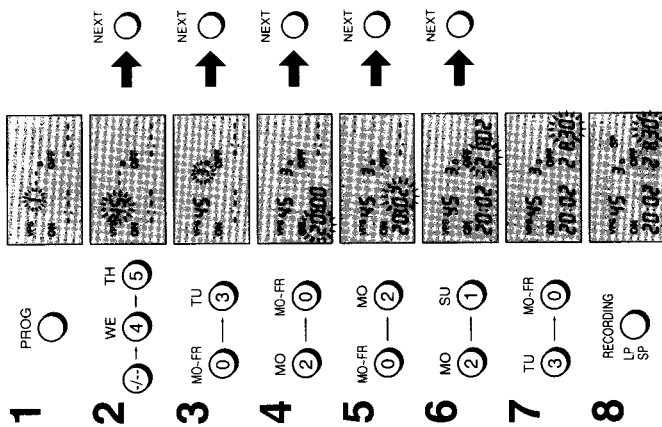

Note:

If no operation is performed on the Remote Controller for more than 25 seconds, it will automatically switch over to the power-saving standby condition and the indications on the Display will disappear. In this case, the data which have not yet been transmitted to the VTR will be cancelled.

Turning Timer On and Off

After programming a timer recording, the Timer Recording Indicator "TR" lights up and the VTR can no longer be used for recording and playback. To make it possible to use the VTR, turn off **TIMER REC** ("TR").

To reactivate the timer, press this button again.

TIMER REC

Timer Recording from External Picture/Sound Source

If Timer Recording is performed by a unit connected to the 21 pin scart terminals or Audio Video in sockets, press **INPUT SELECT** to select the A1, A2 or A3 indicator for the programme position.

A1: Through the 21 pin AV1 socket.

A2: Through the 21 pin AV2 socket.

A3: Through the Audio Video IN3 sockets (AV3)

INPUT SELECT

INPUT SELECT

INPUT SELECT

INPUT SELECT

INPUT SELECT

INPUT SELECT

INPUT SELECT

INPUT SELECT

INPUT SELECT

INPUT SELECT

INPUT SELECT

INPUT SELECT

INPUT SELECT

INPUT SELECT

INPUT SELECT

INPUT SELECT

INPUT SELECT

INPUT SELECT

INPUT SELECT

INPUT SELECT

INPUT SELECT

INPUT SELECT

INPUT SELECT

INPUT SELECT

INPUT SELECT

INPUT SELECT

INPUT SELECT

INPUT SELECT

INPUT SELECT

INPUT SELECT

INPUT SELECT

INPUT SELECT

INPUT SELECT

INPUT SELECT

INPUT SELECT

INPUT SELECT


INPUT SELECT

INPUT SELECT

INPUT SELECT

Search Function

VHS Index Search System

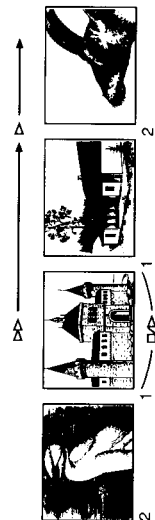

For example:
Searching for the 2nd recorded segment.

Operation

Start to index search and select the 2nd recorded segment by pressing **INDEX** twice.




- For reverse direction, press **INDEX** .
- After finding the specific recorded segment, playback starts.

Recording of Index Signals

While recording an index signal, the indication "WRITE" lights up for a few seconds. Index signals will be recorded automatically at the start of recording. It is also possible to record an index signal by pressing **REC** during recording to mark your own reference point.

Notes:

- The Search function can only count the addresses correctly, if the index signals are spaced at least 3 minutes in the SP mode and 5 minutes in the LP mode.
- If there are unrecorded parts on the tape, or if recordings have repeatedly been made on the same tape portion, the Search function may not work correctly.

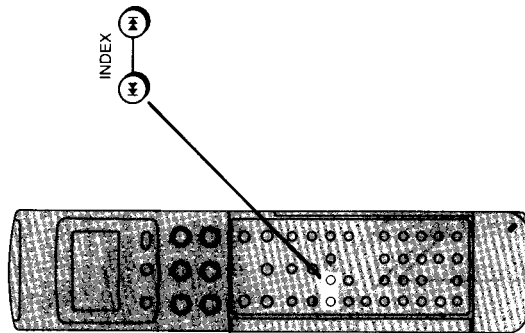


Introduction

It is very easy to find the beginning of each recording, because a special index signal is recorded at the start of each recorded segment on the tape. Up to 20 index signals can be searched for in both directions.

Preparation

Set the VTR in the normal playback or stop mode.

Time Search

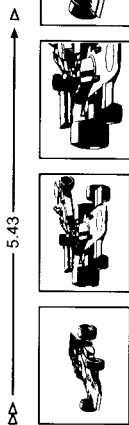

For example:
Searching for the recording 5 min. and 43 sec. after the start of playback.

Introduction


It is easy to search forwards or backwards along the tape by a specific amount of playback time to locate a scene or skip programme items of secondary interest.

Preparation

Insert a recorded cassette tape and set the VTR in the stop mode.


Operations

- 1 Set to time search by pressing **TIME SEARCH**.
- 2 Enter the 5 min. and 43 sec. by pressing Ten Key.




3 Start searching by pressing **FF** or **REW**.

The playback starts after rewinding or fast forwarding to the tape position of the designated time.

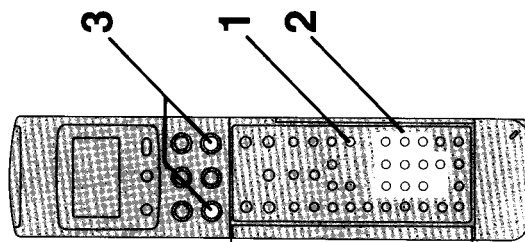

Connect a Movie Camera or another VTR to this VTR as shown.

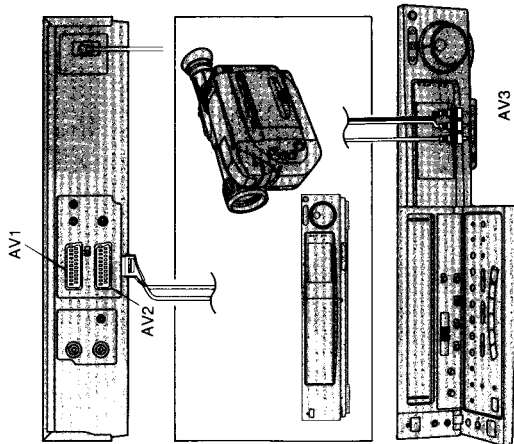

The description here applies when the unit has been connected to AV1. When AV2 or 3 is used, press the INPUT SELECT button to select the respective connection. All other operations are the same as when the connection is made to AV1.

Synchronized Editing between the VTRs


When editing from another VTR equipped with Synchro Edit Socket, synchronized start and stop of both VTRs can be activated from this VTR.

Note:

- Set **NOISE FILTER/EDIT** to OFF for ordinary use of the VTR.
- To copy the NTSC tape, see page 1-18.
- PAL/MESECAM
- During AV Signal Input
- PAL: When receiving PAL signals
- MESECAM: When receiving SECAM signals

Copy Editing

This function is used to make duplicate.

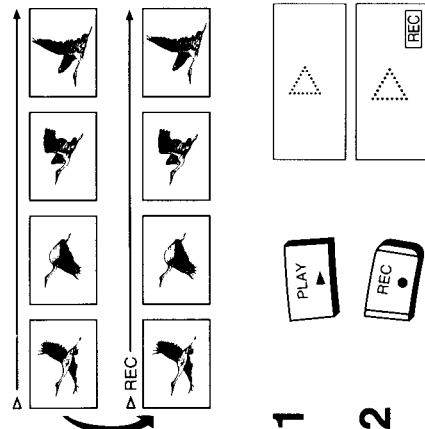

Preparation

Insert the recorded tape in the already connected video source, and a blank tape into this VTR and select AV1 by pressing **INPUT SELECT**. Set **NOISE FILTER/EDIT** to EDIT.


Operations

- 1 Play back the recorded tape on the Video source.
- 2 Copy the tape by pressing **REC** on this VTR.

Assembly Editing

It can be used to make up an Edited tape from several other recordings or video sources.

A new scene can be added to the end of a previous one, providing a clean edit without noise.

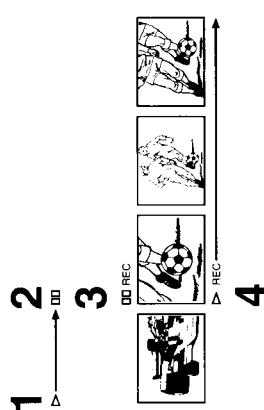


Preparation

Insert a recorded cassette tape with an intact erasure prevention tab, and select the video source required by pressing **INPUT SELECT** to set AV1. Set **NOISE FILTER/EDIT** to EDIT.

Operations


- 1 Search for the end of the previously recorded segment by pressing **PLAY**.
- 2 At the end point, press **PAUSE/STILL**.
- 3 Set for the new recording by pressing **REC**.
- 4 Start the new recording by pressing **PAUSE/STILL** again.

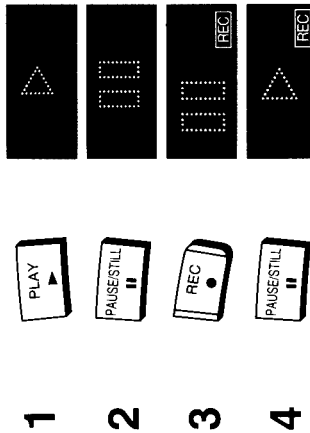

Insert Editing

It is used to substitute one scene for another providing a noise free Edit to the picture at both the Edit IN and OUT points.

Insert Editing cannot be used on blank sections of tape. In this case use Assemble Editing first.

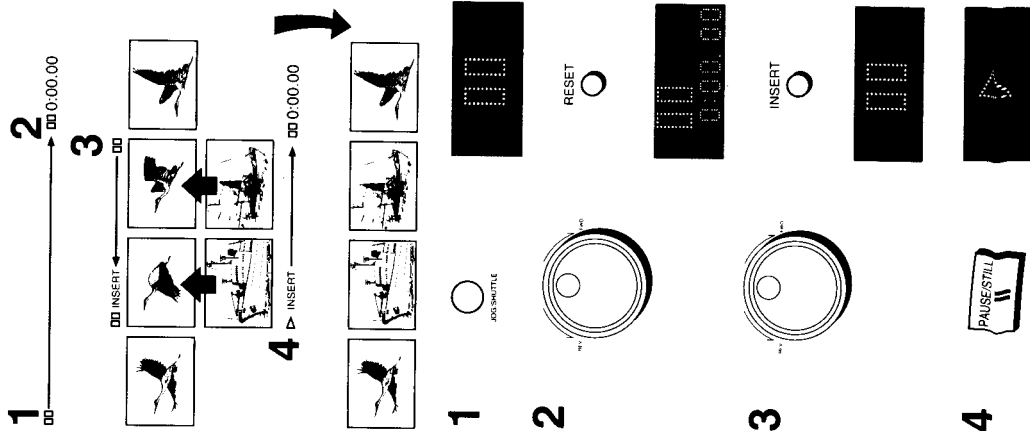

Preparation


Insert a recorded cassette with an intact erasure prevention tab, and select the video source required by pressing **INPUT SELECT** to set AV1.
Set **NOISE FILTER/EDIT** to EDIT.

Operations

- 1 Press **JOG/SHUTTLE**.
- 2 Use the Shuttle Ring and the Jog Dial to search for the point where you want the editing to end (end point), and set the counter to 0:00:00 by pressing **RESET**.
- 3 Use the Shuttle Ring and the Jog Dial to search for the point where you want the editing to start (start point), and press **INSERT**.
(The Insert Editing Indicator lights up.)
If you want to replace the sound on the "normal" audio track, too, press **AUDIO DUB**.
(The Audio Dubbing Indicator lights up.)
- 4 Start insert editing by pressing **PAUSE/STILL**, and the inserted new recording will stop in the still playback mode when the counter reaches 0:00:00.

Audio Dubbing

It is used to add the back ground music etc.

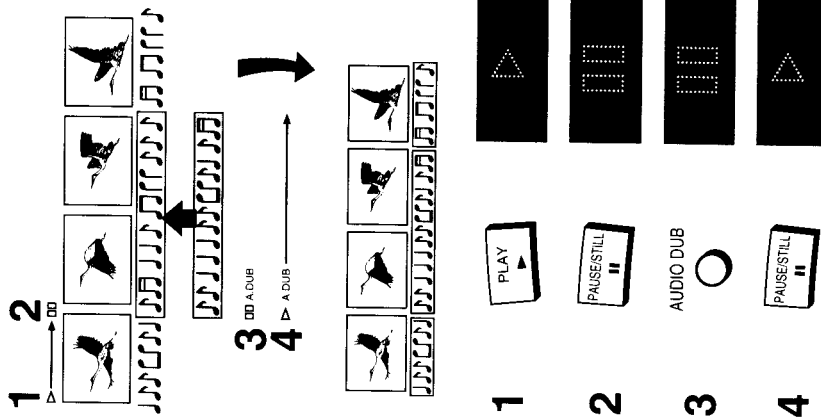

Preparation

Insert a recorded cassette with an intact erasure prevention tab, and select the audio source required by pressing **INPUT SELECT** to set AV1.

Operations

- 1 Search for the starting point at which you want to record new sound by pressing **PLAY**.
- 2 At the beginning of the point press **PAUSE/STILL**.
- 3 Set for audio dubbing by pressing **AUDIO DUB**.
(The Audio Dubbing Indicator lights up.)
- 4 Start recording the new sound by pressing **PAUSE/STILL**.
Stop recording by pressing **STOP**.

Note:

The new sound will be recorded on the normal sound track of the tape, and the original sound will remain on the Hi-Fi sound track. Only monaural sound recording is possible on the normal sound track.
To hear the new sound, select the normal sound track by pressing **AUDIO OUT**.
To hear the new sound and original sound mixed together, set **HI-FI/NORMAL MIX** to ON.


Bar Code Operation

Scanner Preparation


Operating the Remote Controller
This remote controller also operates as a digital-scanning bar code reader.

Press **SCANNER ON/OFF** to turn it on.
If the remote controller is not operated within 25 seconds (within 4 minutes when setting the clock time), it will automatically switch over to the power-saving standby condition and the lamp will go off. (In this condition, if bar codes have already been read but not yet transmitted to the VTR, the data will be cancelled.)
When the lamp is not lit, press **SCANNER ON/OFF** to turn it on again.

Reading the bar codes

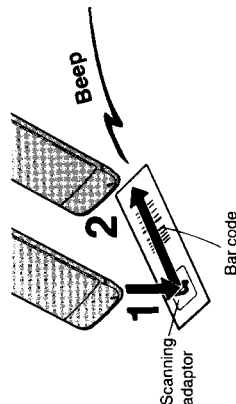

- 1 Fit the remote controller to the scanning adaptor.
- 2 Trace the bar code quickly in the direction of the arrow, ensuring that you trace it completely past the last bar. The "Beep" sound indicates that the bar code has been read completely.

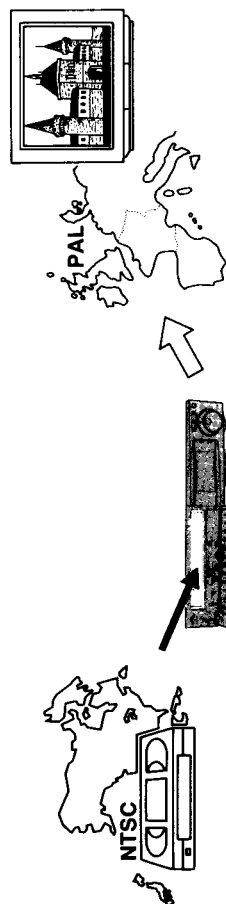

NTSC Playback

- 1 **NTSC4.43** OFF ☐ ON ☒ **PLAY**
- 2

Operations

- 1 Set **NTSC 4.43** to OFF.
- 2 Insert the **NTSC** cassette tape and play back by pressing **PLAY**.

Note:

- NTSC is the TV broadcasting system used in U.S.A., Japan, and some other countries.
- PAL is another TV broadcasting system used in Germany and many other parts of the world.
- This VTR will not replay or Record tapes on the SECAM broadcasting system.
- This system is a modified version of the PAL broadcasting system to allow most European TV's to reproduce a colour picture when an NTSC tape is replayed on this VTR. However due to the system change, the picture may shrink, roll or not reproduce colour on some Televisions.
- During playback of NTSC recordings, the Tape Counter does not function correctly.

NTSC Editing

Connect this to another VTR which has **NTSC 4.43** Switch. Ensure **NOISE FILTER/EDIT** is set to **EDIT**.


- 1 **NTSC4.43** OFF ☐ ON ☒
- 2 **NTSC4.43** OFF ☐ ON ☒

Operations

- 1 Set **NTSC 4.43** to ON for both VTRs. Then, start recording same as page 1-16, 1-17.
- 2 Set back the **NTSC 4.43** to OFF.

When the Bar Codes Cannot be Read
Although the lamp in the tip of the Bar Code Reading Section lights up:
• No figures appear in the Display
• No beep sounds is heard;
The tip of the Bar Code Reading Section is probably clogged with dirt.

Cleaning

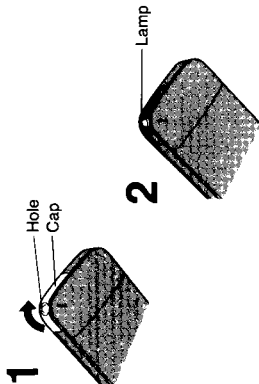

- 1 Remove the cap of the Bar Code Reading Section.
• Remove dirt and dust from the hole of the cap.
- 2 Gently wipe the tip of the lamp with a soft cloth.
• Reattach the cap by inserting it until it clicks with a click.


Remote Control Modes

Adjust the remote control mode of the Digital Scanner to the same remote control mode (VTR 1 or VTR 2) as selected on the VTR itself.

When Remote Control Mode "VTR 2" is selected on the VTR

- Trace the "VTR 2" bar code on the Programming Sheet.
- "VTR 2" will appear in the Bar Code Reader Display.
- When the "VTR 1" bar code is traced, the "VTR 2" indication will disappear and the remote control mode is changed back to "VTR 1".


REMOTE MODE

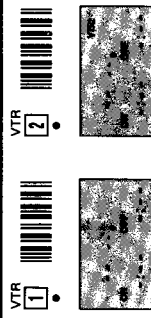

Note: There is no indication on the display for "VTR 1".

Storing TV Broadcasts

Read in the required data successively by tracing the bar codes.

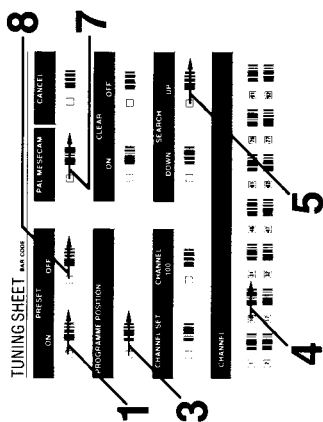


Operations

- Trace the bar code "PRESET ON".
• If no operations are performed within more than 4 minutes, the Digital Scanner will automatically turn itself off.
- Press **TRANSMIT** to transmit to the VTR.
- Trace the bar code "PROGRAMME POSITION".
- Trace the bar code for the programme position (channel) that you want to tune to a station.
- Trace the bar code "SEARCH UP" or "SEARCH DOWN".
- Press **TRANSMIT** to transmit to the VTR.
• The channel will be tuned automatically.
• At every push of the button, the next channel will be tuned.
- When the Indication in the Multi-Function Display does not show the correct broadcasting system ("1" = PAL; "2" = MESECAM) for the station to be tuned, trace and transmit the bar code PAL/MESECAM to select the correct broadcasting system.
- Trace the bar code "PRESET OFF".
- Press **TRANSMIT**.

Setting the Clock

Read in the following data successively by tracing bar codes 1 to 6 on the programming sheet.

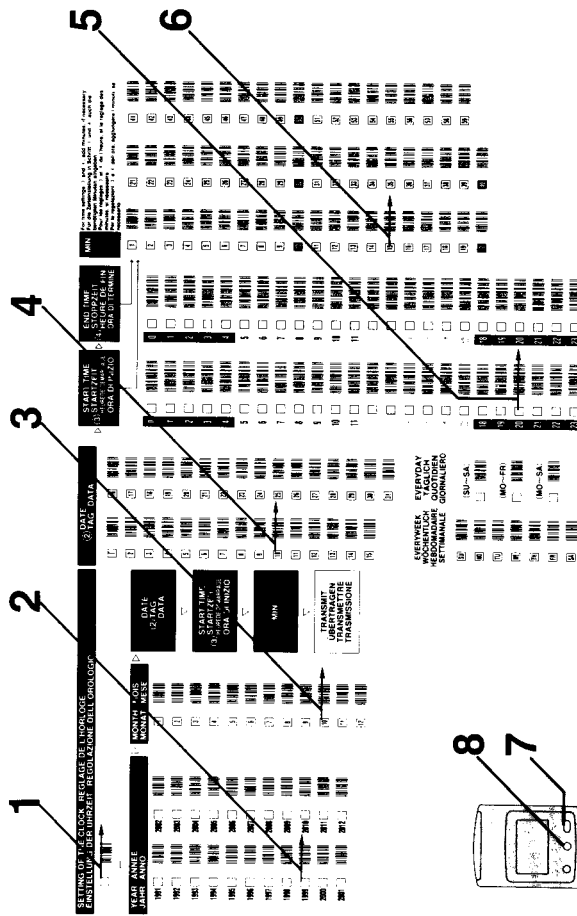

For Example: Set the clock for Sunday, October 10, 1999, 20:15.

Preparation

Turn on the VTR and the remote controller.

Operations

- Trace the bar code **SETTING OF THE CLOCK**.
- Trace the bar code for the year (**YEAR**).
- Trace the bar code for the month (**MONTH**).
- Trace the bar code for the day of the month (**DATE**).

5 Trace the bar code for the hour (**START TIME**).

- The repeated beep sound indicates correct bar code reading and readiness for transmitting the data to the VTR.

6 Trace the bar code for the minute (**MIN**).

- The beep sound will be heard again.

7 To transmit the data to the VTR, point the remote controller at the reception window on the VTR and press **TRANSMIT**.

- The transmitted data appears on the display, and a beep sound confirms proper reception.

8 To turn off the remote controller, press **ON/OFF** again.
• If the Remote Controller is left with no operation performed for more than 4 minutes, it will automatically switch over to the power-saving standby condition and the lamp in the reading tip goes out. In this case, bar codes that have already been read (but not yet transmitted to the VTR) will be cancelled.


Timer Recording

Setting Timer Recordings from Bar Codes

Successively scan the data for the programme channel, day, starting time and ending time by tracing bar codes 1 to 7 on the programming chart.

For Example:

When programming a timer recording for a programme that will be broadcast on programme position (channel) 4 on the 3rd of the month, from 20:02 to 21:30.

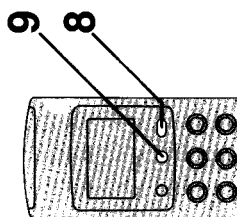

Preparation

Turn on the VTR and the remote controller.

Operations


- Trace the bar code for CHANNEL.
- Trace the bar code for DATE.

Timer Recording Every Day at the Same Time

For this timer setting, three day patterns can be selected:

- Ⓐ Daily recording from Sunday to Saturday
- Ⓑ Daily recording from Monday to Friday
- Ⓒ Daily recording from Monday to Saturday

(SU~SA) (MO~FR) (MO~SA)



Timer Recording at the Same Time on the Same Day

Every Week

Trace the bar code for the day of the week in the EVERYWEEK column.
For example, SU (Sunday):

EVERYWEEK
WOCHENTLICH
HEBDOMADAIRE
SETTIMANALE



- Trace the bar code for START TIME.
- Trace the bar code for MIN.
- Trace the bar code for END TIME.
 - The repeated beep sound indicates readiness for data transmission to the VTR.
- Trace the bar code for MIN.
 - The beep sound will be heard again.
- Trace the bar code for RECORDING according to the desired tape speed.
 - The beep sound will be heard again.
- To transmit the data to the VTR, point at the reception window on the VTR and press **TRANSMIT**.
 - The transmitted data appears on the display of the VTR and a beep sound confirms proper reception.
- Programming a Series Timer Recordings
 - Trace the CANCEL bar code.
 - Repeat the required steps 1 to 8 for each timer recording.
 - To turn off the remote controller press **SCANNER ON/OFF**.

Turning the Timer on and off

After programming a timer recording, the timer recording indicator "☐" lights up, and the VTR can no longer be used for normal recording and playback. To make it possible to use the VTR, trace the **TIMER ON/OFF** bar code and transmit to the VTR (the timer recording indicator "☐" will go out). To reactivate the timer again, trace the **TIMER ON/OFF** bar code again and transmit to the VTR (the "☐" indicator will light again).

TIMER ON/OFF



Timer Recording from an External Signal Source

If a timer recording is to be made from a signal source that is connected to the 21 pin scart terminal, the "AV" bar code in the CHANNEL column must be traced for the programme.

- AV 1: AV1 socket
- AV 2: AV2 socket
- AV 3 can not be selected.



Checking Timer Recording Settings

The VTR must be turned on, or with the timer recording indicator "☐" lit.

- Trace the CHECK bar code.
- Transmit the data to the VTR.
 - The programmed data will be displayed for about 12 seconds in the display panel.
 To check the settings for the next timer recording, press **TRANSMIT**.

CHECK / VERIFICATION
PRÜFEN / CONTROLLO



Cancelling Timer Recording Data

The data for the timer recording must first be displayed on the panel.

- Trace the CHECK bar code.
- Transmit the data to the VTR.
- Trace the CANCEL bar code.
- Transmit the data to the VTR.

The programmed timer recording will be cancelled and " _ _ " dashes will appear on the display panel.

CANCEL - ANNULLAZIONE
LOSCHEN / CANCELLAZIONE



Turning the VPS Function on and off

If the VTR is equipped with the VPS function, the VPS function is automatically activated when the Digital Scanner On/Off Switch is set to ON, or when the CANCEL bar code is traced. To cancel the VPS function, trace the bar code VPS ON/OFF. To activate the VPS function again, trace the bar code VPS ON/OFF again.

VPS ON/OFF



SECTION 2 ADJUSTMENT PROCEDURES

2-1. DISASSEMBLY METHOD

2-1-1. DISASSEMBLY FLOW CHART

This flow chart indicates disassembly steps of the cabinet parts and the circuit boards in order to find the necessary items for servicing. When reassembling, perform the steps in the reverse order.

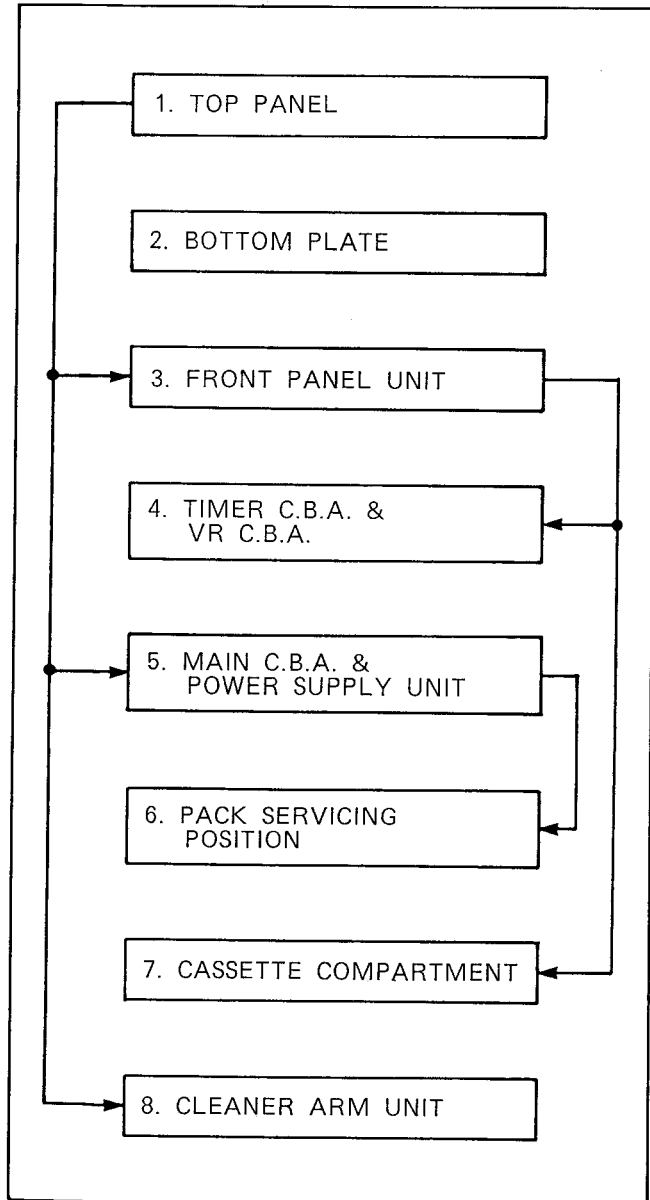


Fig. D1

2-1-2. DETAIL DISASSEMBLY METHOD

1. REMOVAL OF THE TOP PANEL

Remove...4 Screws(A)

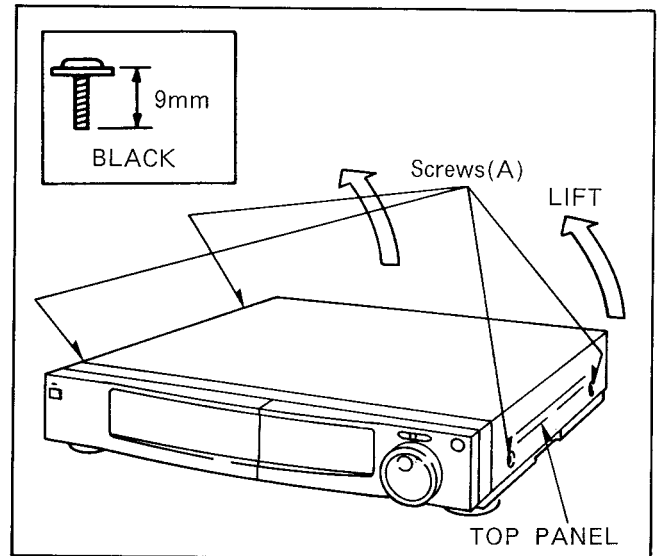


Fig. D2

2. REMOVAL OF THE BOTTOM PLATE

Remove...6 Screws(B)

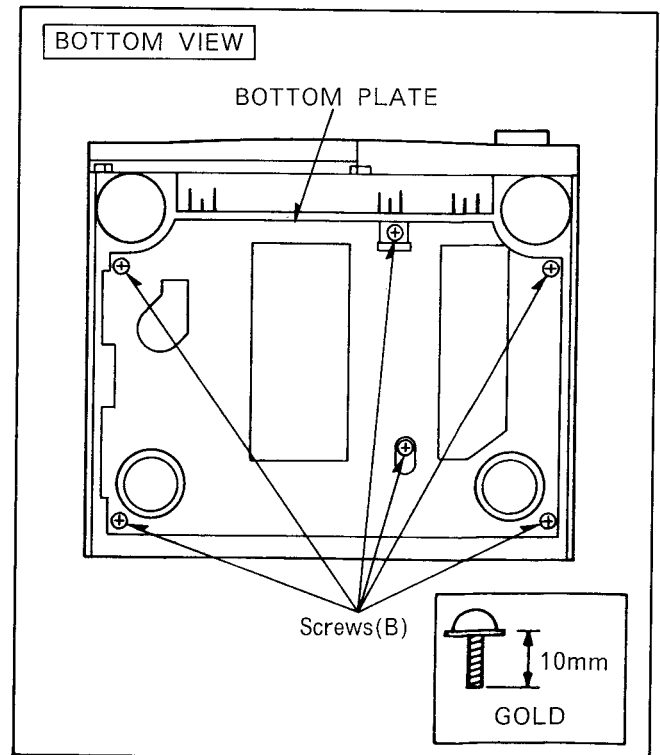


Fig. D3

3. 1 8. REMOVAL OF THE CLEANER ARM UNIT

1. Hook the Spring Arm(R) to lower side of Hook(S).
2. Unlock the locking portion(T) and then remove the Cleaner Arm Unit.

NOTE:

- (1) Perform the steps in the reverse order when reassembling.
- (2) When replacing Upper Cylinder, replace the Cleaner Arm Unit at the same time.

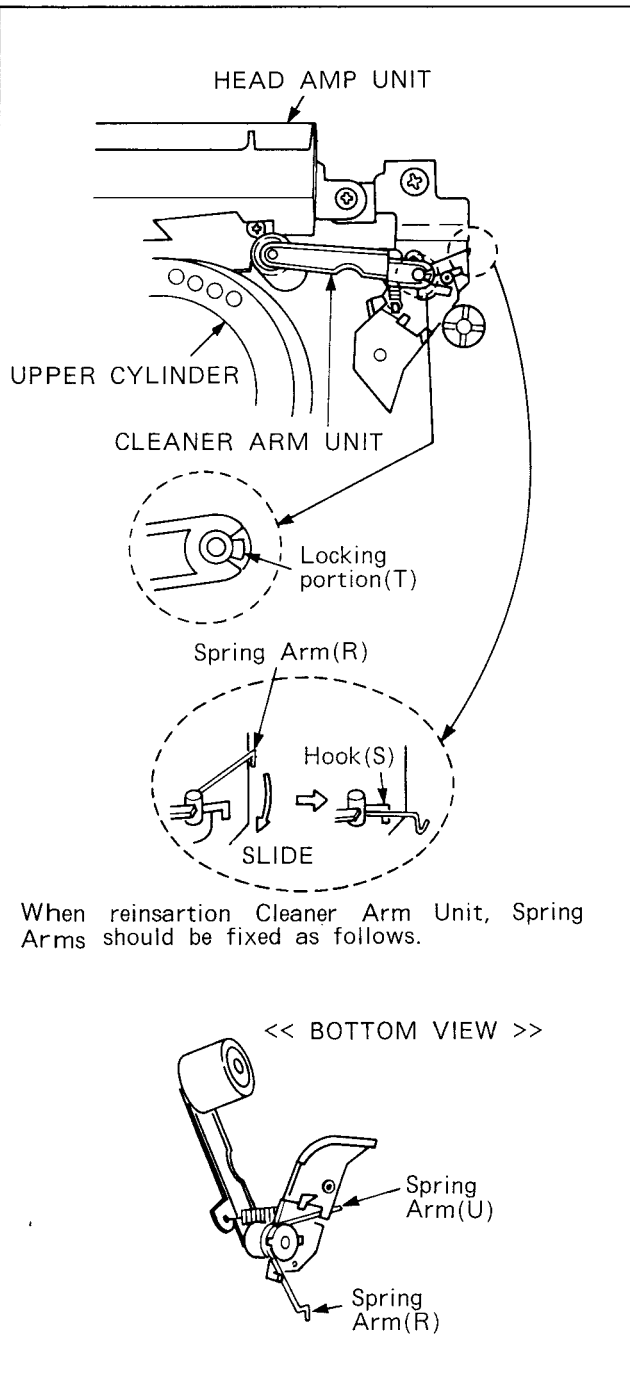


Fig. D11

2-2. MECHANICAL ADJUSTMENT PROCEDURES

This mechanical chassis is the same as G1(G-Rev.) Mechanical Chassis. Therefore please refer to the Service Manual G1(G-Rev.) Mechanical Chassis(Order No. VRD8901M101).

2-2-1. TAPE INTERCHANGEABILITY ADJUSTMENT

CAUTIONS:

To make a Adjustment Mode for Tape Interchangeability, connect a Cut Jumper Wire as shown in Fig. M1.
(Auto Tracking is fixed to centre position.)

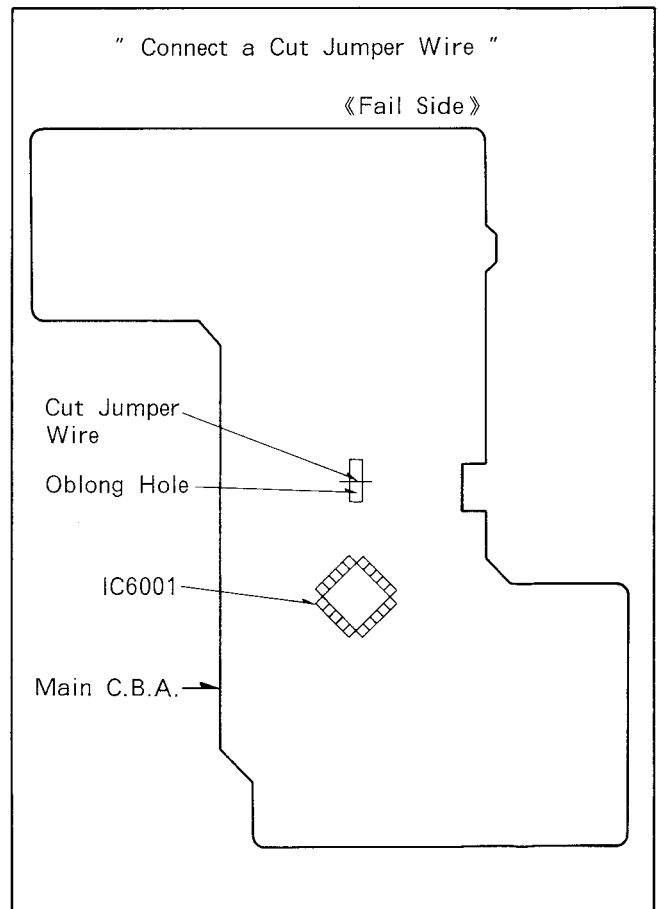


Fig. M1 Adjustment Mode

2-3. ELECTRICAL ADJUSTMENT PROCEDURES

This section provides complete electrical adjustment procedures which may be required for electric circuits of VHS Video Cassette Recorder.

2-3-1. TEST EQUIPMENTS

To perform the electrical adjustments completely, following equipments are required.

1. Dual-Trace Oscilloscope. (More than 35 MHz)
Voltage Range : 0.005-5V/div
Frequency Range : DC-35MHz
Probes : 10:1
2. Frequency Counter.
Frequency Range : 0-10MHz
Probes : 1:1
3. Vacuum Tube Volt Meter. (V.T.V.M.)
4. Video Sweep Generator.
5. Sine Wave Generator.
6. Video Pattern Generator.
7. VHS Alignment Tape. (VFJ8125H3F)
8. VHS Blank Tape.
9. Monitor.
10. Plastic Tip Driver.

2-3-2. PREPARATION

During adjustments, set each selector as follows when no indication on each procedures.

PICTURE VR.....Centre Fix
Hi-Fi REC LEVEL VR.....Center Fix
TAPE SELECT SW.....E195 Side
NOISE FILTER EDIT SW...OFF
Hi-Fi/NORMAL MIX SW...OFF
NTSC 4.43 SW.....OFF
TEST SIGNAL SW(REAR)...OFF
CHANNEL.....A1/A2/A3
(Set to signal input terminal number)
AUDIO OUTPUT SELECT....HiFi MODE

2-3-3. HOW TO READ ADJUSTMENT PROCEDURES

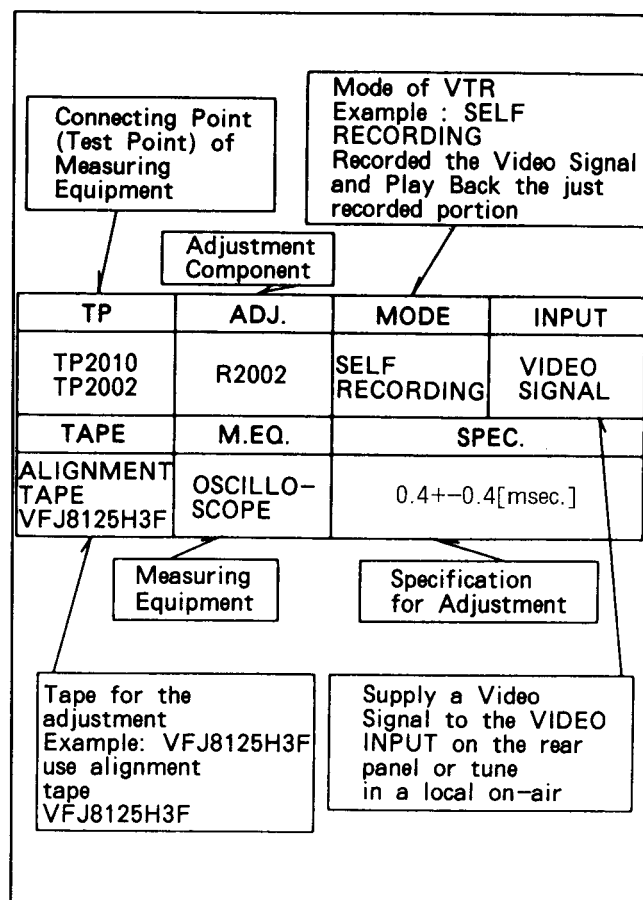


Fig. E1

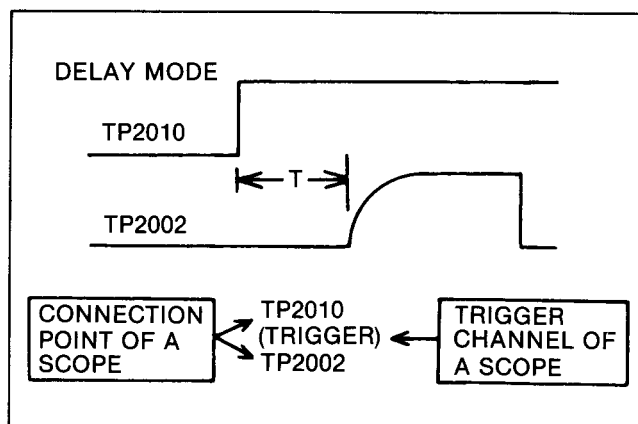


Fig. E2

2-3-4. ADJUSTMENT

SERVO SECTION

1. PG SHIFTER ADJUSTMENT

TP	ADJ.	MODE	INPUT
TL2001 PP3902-2	VR2001	PLAY BACK	
TAPE	M. EQ.	SPEC.	
ALIGNMENT TAPE VFJ8125H3F	OSCILLO- SCOPE	7.0±0.5 (H)	

1. Connect the oscilloscope to TL2001(H.SW) and PP3902-2(V.OUT).
2. Playback the alignment tape.
3. Adjust VR2001 so that the phase difference between falling edge of Head SW Pulse and V-Sync becomes $7.0 \pm 0.5(H)$.

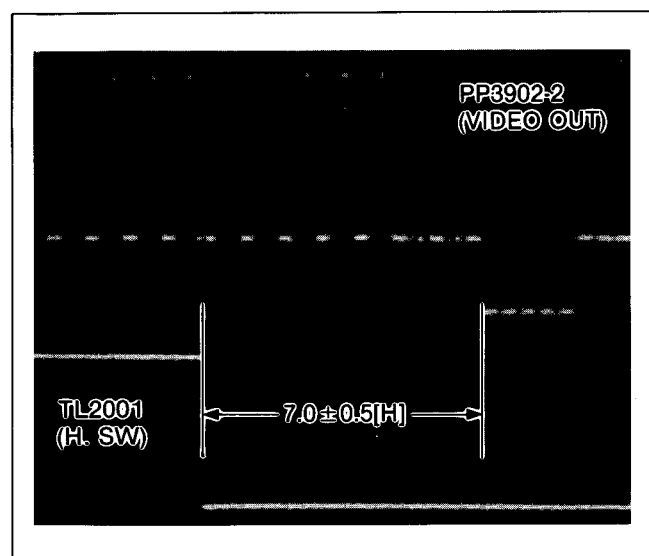


Fig. E3

2. SLOW TRACKING ADJUSTMENT (SP and LP mode)

TP	ADJ.	MODE	INPUT
MONITOR SCREEN	VR2011 (SP) VR2006 (LP)	SLOW	COLOUR BAR
TAPE	M. EQ.	SPEC.	
SELF RECORDED TAPE (SP/LP)	MONITOR TV	A = B (A + B)/V < 1/6	

1. Connect a cut jumper wire as shown in Fig.E4.
2. Record the colour bar signal in SP(LP) mode for few time and playback the just recorded portion.
3. Place the unit in the slow mode by Shuttle Ring and then press the Tracking "+" and "-" buttons at the same time.

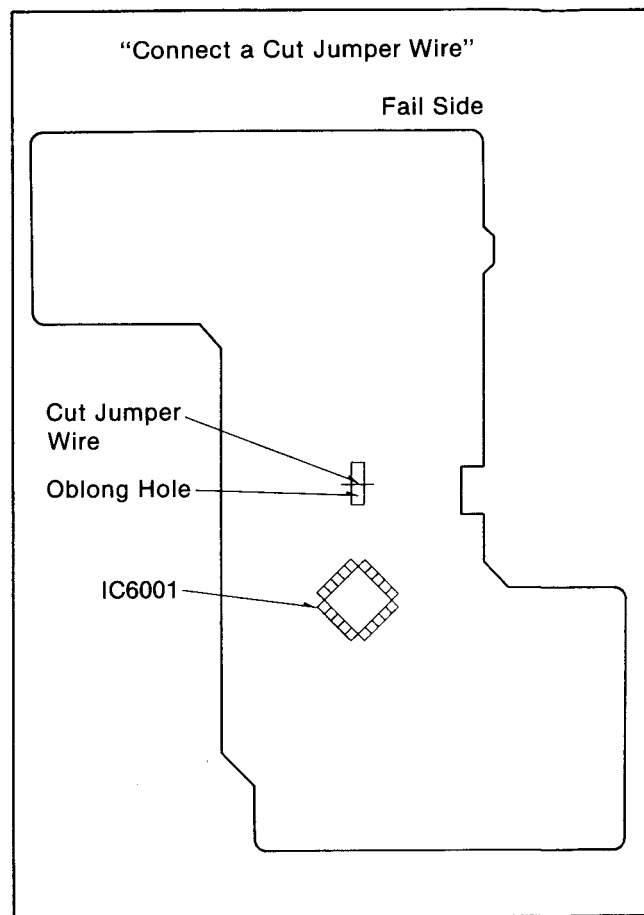


Fig.E4

4. Adjust VR2011(SP) (VR2006(LP)) so that the noise bar on the monitor screen becomes minimum. (Detail specifications are shown in Fig. E5)
5. Disconnect a jumper wire.

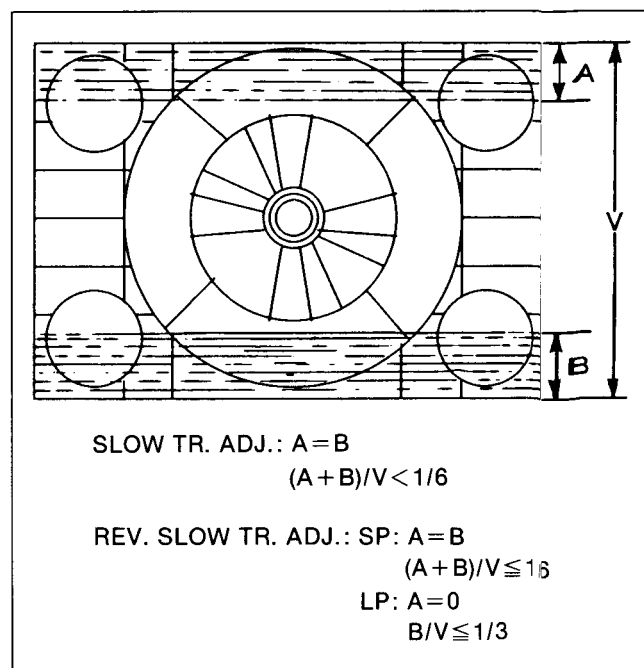


Fig. E5

3. REVERSE SLOW TRACKING ADJUSTMENT (SP and LP mode)

TP	ADJ.	MODE	INPUT
MONITOR SCREEN	VR2019 (SP) VR2018 (LP)	REVERSE SLOW	COLOUR BAR
TAPE	M. EQ.	SPEC.	
BLANK TAPE	MONITOR TV	SP: $A=B$ $(A+B)/V \leq 1/6$ LP: $A=0$ $B/V \leq 1/3$	

1. Connect a cut jumper wire as shown in Fig.E4.
2. Record the colour bar signal in SP(LP) mode for few time and playback the just recorded portion.
3. Place the unit in the reverse slow mode by Shuttle Ring and then press the Tracking "+" and "-" buttons at the same time.
4. Adjust VR2019(SP) (VR2018(LP)) so that the noise bar on the monitor screen becomes minimum. (Detail specifications are shown in Fig. E5)
5. Disconnect a jumper wire.

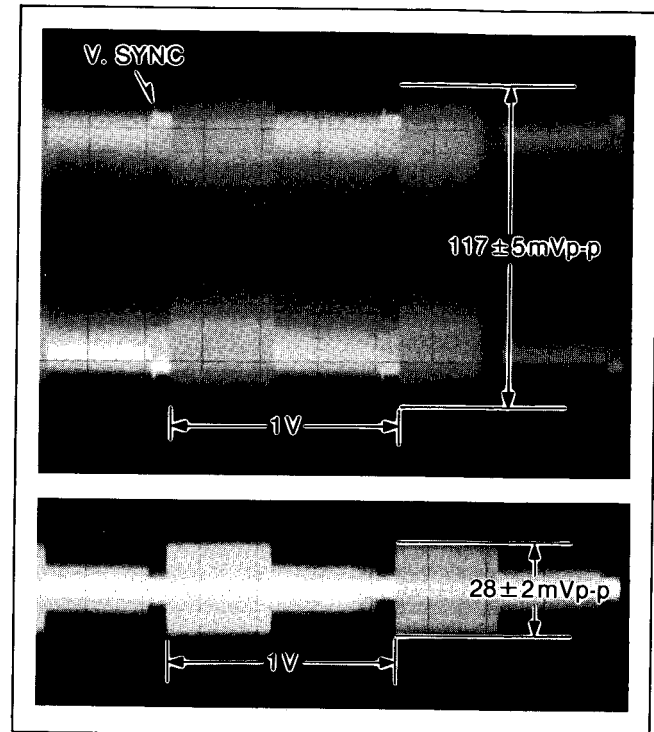


Fig. E6

LUMINANCE & CHROMINANCE SECTION

4. RECORDING CURRENT ADJUSTMENT

TP	ADJ.	MODE	INPUT
TP507 (HOT) TP508 (GND)	VR3001 (Y) VR8001 (C)	SP RECORDING	COLOUR BAR
TAPE	M. EQ.	SPEC.	
BLANK TAPE	OSCILLOSCOPE	Y: 117 ± 5 (mVp-p) C: 28 ± 2 (mVp-p)	

1. Record the colour bar signal.
2. Connect the oscilloscope to TP507(HOT) and TP508(GND).
3. Adjust VR3001(Y) so that the luminance level becomes 117 ± 5 mVp-p.
4. Supply +5V DC to Pin 6 of Luminance & Chrominance Pack C.B.A. to reduce luminance component.
5. Adjust VR8001(C) so that the chrominance level becomes 28 ± 2 mVp-p.

5. VIDEO FREQUENCY RESPONSE ADJUSTMENT

TP	ADJ.	MODE	INPUT
PP3902-2	VR3012 (SP) VR3013 (LP)	SP/LP PLAYBACK (SELF RECORDED)	VIDEO SWEEP SIGNAL
TAPE	M. EQ.	SPEC.	
BLANK TAPE	OSCILLOSCOPE/ VIDEO SWEEP GENERATOR	0.1MHz: 2.0MHz= 100%: 90~110%	

Note:

Set the markers of the sweep generator to 0.1MHz and 2.0MHz and supply the video sweep signal (200mVp-p) to Line In terminal.

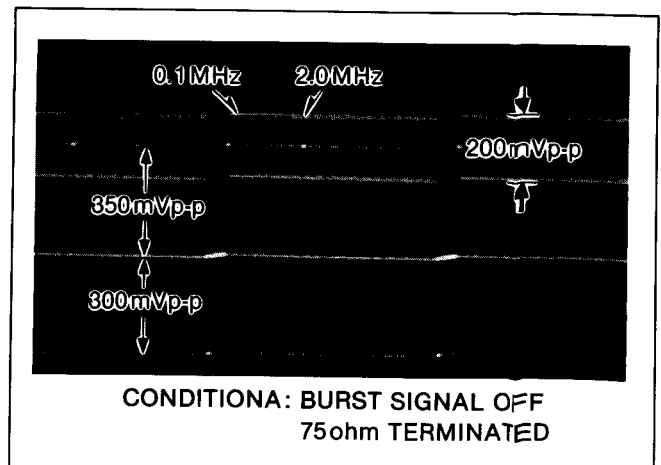


Fig. E7

1. Connect a jumper wire between pin 7 of Luminance & Chrominance Pack C.B.A. and GND.
2. Record the Video Sweep Signal in SP (LP) mode for few time and playback the just recorded portion.
3. Connect the oscilloscope to PP3902-2.
4. Adjust VR3012 (SP) (VR3013 (LP)) so that the frequency response (level) becomes 90~110% at 2MHz portion by comparing with 0.1MHz portion.

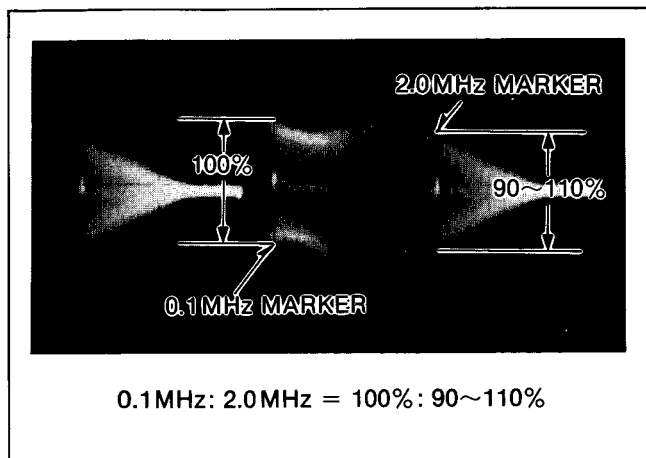


Fig. E8

6. Y-NR BLANCE ADJUSTMENT

TP	ADJ.	MODE	INPUT
IC302-(17)	VR301	LP RECORDING	COLOUR BAR
TAPE	M. EQ.	SPEC.	
BLANK TAPE	OSCILLOSCOPE	MINIMIZED AS POSSIBLE (Less than 50mVp-p)	

Note:

Connect the capacitor(1500pF) between IC302-17 and GND as shown in Fig.E9.

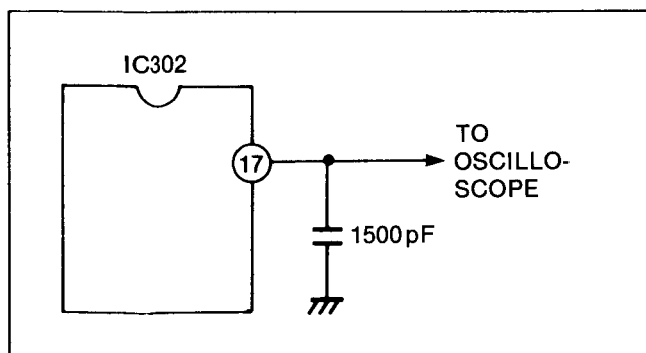


Fig.E9

1. Connect the oscilloscope to IC302-17.
2. Record the colour bar signal in LP mode.
3. Adjust VR301 so that the waveform becomes minimum as follows.
4. Disconnect the capacitor.

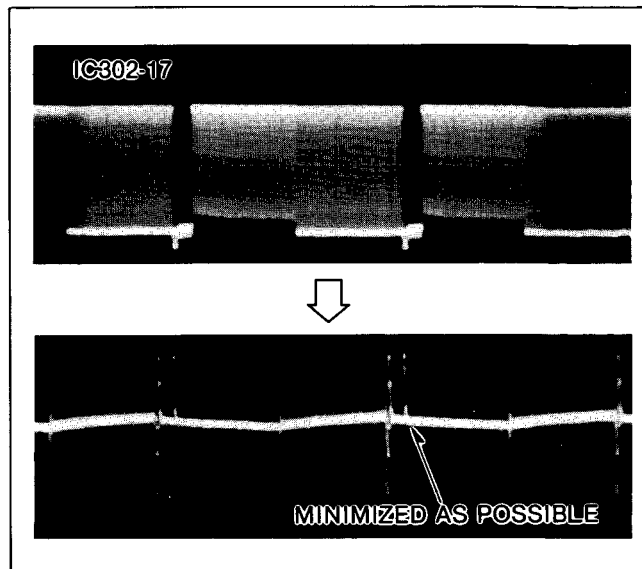


Fig.E10

7. CHROMA RECURSIVE ADJUSTMENT

TP	ADJ.	MODE	INPUT
IC302-(17)	VR802 VR801	SP PLAYBACK	COLOUR BAR
TAPE	M. EQ.	SPEC.	
BLANK TAPE	OSCILLOSCOPE	MINIMIZED AS POSSIBLE	

1. Record the colour bar signal in SP mode for few time and playback the just recorded portion.
2. Connect the oscilloscope to IC302-17.
3. Adjust VR801 and VR802 alternately so that the chrominance signal becomes minimum as follows.

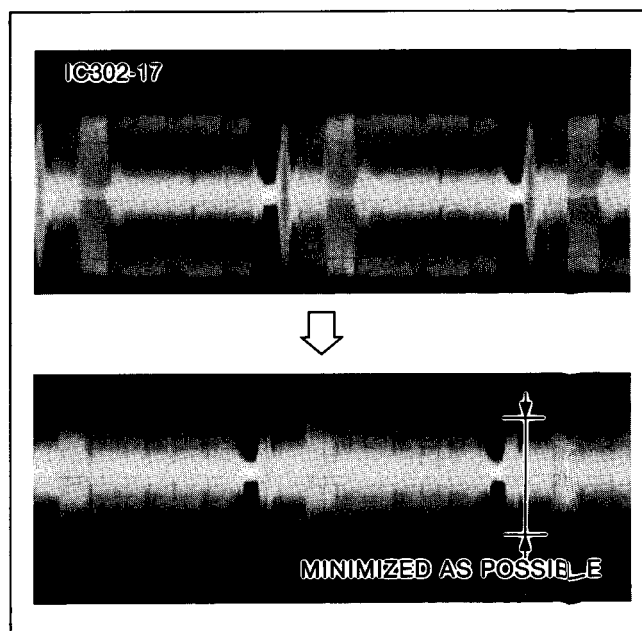


Fig. E11

8. ARTIFICIAL NTSC AFC FREE RUN ADJUSTMENT

TP	ADJ.	MODE	INPUT
IC801-(9)	VR803	STOP	SINEWAVE 8kHz -10dB (316mV)
TAPE	M. EQ.	SPEC.	
	FREQUENCY COUNTER/ SINEWAVE GENERATOR	15735 ± 100 (Hz)	

1. Supply +5V DC to IC801-27.
2. Supply the sinewave (8kHz/-10dB) to Video Line In terminal.
3. Connect the frequency counter to IC801-9.
4. Turn VR803 fully to clockwise or counter-clockwise which is maximum frequency side.
5. Adjust VR803 so that the frequency becomes 15735±100Hz.

AUDIO SECTION

9. AUDIO BIAS CURRENT ADJUSTMENT

TP	ADJ.	MODE	INPUT
P4001-4 (HOT) PS4001-6 (GND)	VR4001	SP RECORDING	
TAPE	M. EQ.	SPEC.	
BLANK TAPE	V.T.V.M	2.9 ± 0.1 [mVrms]	

1. Place the unit in SP Recording mode.
2. Connect the V.T.V.M. to P4001-4 (HOT) and PS4001-6 (GND).
(Do not use long cable for connection.)
3. Adjust VR4001 so that the V.T.V.M. level becomes 2.9±0.1mVrms.

Hi-Fi AUDIO SECTION

10. Hi-Fi E-E LEVEL ADJUSTMENT

TP	ADJ.	MODE	INPUT
LINE OUT	VR4512	STOP	1kHz, -10dB AUDIO SIG.
TAPE	M. EQ.	SPEC.	
BLANK TAPE	SINEWAVE GENERATOR/ V.T.V.M.	380~420 [mVrms]	

1. Select the STEREO mode by pressing the Audio Out button on the Door Panel. (Both Left and Right indicators on the FIP are lit.)
2. Supply the sinewave (1kHz/-10dB) to Audio Input (L) terminal.

3. Connect the V.T.V.M. to Audio Output (L) terminal.
4. Adjust VR4512 so that the level becomes 380 - 420 mVrms.

11. CARRIER FREQUENCY ADJUSTMENT

TP	ADJ.	MODE	INPUT
IC4501-34 (L) IC4501-47 (R)	VR4501 (L) VR4509 (R) VR4551 (L) VR4552 (R)	SP RECORDING	
TAPE	M. EQ.	SPEC.	
BLANK TAPE	FREQUENCY COUNTER	NTSC-L: 1.3 ± 0.003 [MHz] NTSC-R: 1.7 ± 0.003 [MHz] PAL-L : 1.4 ± 0.003 [MHz] PAL-R : 1.8 ± 0.003 [MHz]	

1. Place the unit in SP Recording mode.
2. Set the NTSC 4.43 SW on the Front Panel to ON position.
3. Connect the frequency counter to IC4501-34.
4. Adjust VR4501 so that the frequency becomes 1.3±0.003MHz.
5. Connect the frequency counter to IC4501-47.
6. Adjust VR4509 so that the frequency becomes 1.7±0.003MHz.
7. Set the NTSC 4.43 SW on the Front Panel to OFF position.
8. Connect the frequency counter to IC4501-34.
9. Adjust VR4551 so that the frequency becomes 1.4±0.003MHz
10. Connect the frequency counter to IC4501-47.
11. Adjust VR4552 so that the frequency becomes 1.8±0.003MHz.

12. DEVIATION ADJUSTMENT

TP	ADJ.	MODE	INPUT
BETWEEN VR4502 and R4511 (L) BETWEEN VR4507 and R4561 (R)	VR4502 (L) VR4507 (R)	SP RECORDING	1kHz, -10dB AUDIO SIG.
TAPE	M. EQ.	SPEC.	
BLANK TAPE	V.T.V.M./ SINEWAVE GENERATOR	120 [mVrms]	

1. Set the NTSC 4.43 SW on the Front Panel to OFF position.
2. Set the output level of the Signal Generator to 1kHz/-10dB and supply it to both Audio Input terminals (L) and (R).
3. Adjust the recording level (Line output) with Hi-Fi Rec Level VR on the Front Panel so that the both audio outputs (L) and (R) are 400mVrms (V.T.V.M.).
4. Connect the V.T.V.M. between VR4502 and R4511.
5. Adjust VR4502 so that the level becomes 120mVrms.
6. Connect the V.T.V.M. between VR4507 and R4561.
7. Adjust VR4507 so that the level becomes 120mVrms.

13. FM B.P.F. ADJUSTMENT

TP	ADJ.	MODE	INPUT
IC4501-33 (L) IC4501-48 (R)	VR4550	PLAYBACK	1.608MHz 400mVp-p SINEWAVE SIG.
TAPE	M. EQ.	SPEC.	
ALIGNMENT TAPE (VFJ8125H3F)	OSCILLO- SCOPE/ SINEWAVE GENERATOR	L ch = R ch	

1. Set the NTSC 4.43 SW to OFF position.
2. Disconnect P551 (from Main C.B.A. to Head AMP Pack)
3. Set the output of the Signal Generator to 1.608MHz/400mVp-p and supply it to PS4003-8.
4. Playback the alignment tape.
5. Connect the oscilloscope to IC4501-33 and 48.
(Connect the GND terminal for oscilloscope to GND of FM Pack to reduce the noise.)
6. Adjust VR4550 so that the Lch(pin 33) and Rch(pin 48) are the same level.
7. After this adjustment, connect P551.

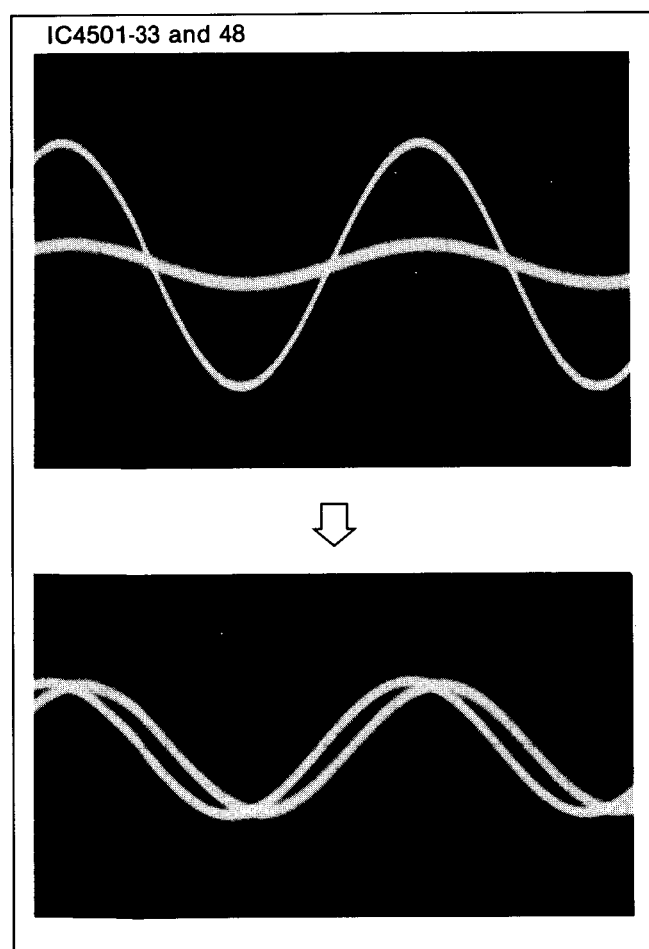


Fig. E12

TIMER SECTION

14. LEVEL METER SENSITIVITY ADJUSTMENT

TP	ADJ.	MODE	INPUT
LEVEL METER ON THE FRONT PANEL	VR7501	STOP	1 kHz, -10dB AUDIO SIG.
TAPE	M. EQ.	SPEC.	
		0 [dB] INDICATOR ON THE AUDIO LEVEL METER JUST LIGHTS UP	

1. Select the STEREO mode by pressing the Audio Out button on the Door Panel. (Both Left and Right indicators on the FIP are lit.)
2. Set the output level of the Signal Generator to 1kHz/-10dB and supply it to both Audio Input terminals (L) and (R).
3. Adjust the recording level (Line output) with Hi-Fi Rec Level VR on the Front Panel so that the both audio outputs (L) and (R) are 400mVrms (V.T.V.M.).
4. Adjust VR7501 so that the 0dB of the Level Meter on the FIP just lights up.

15. TIMER REFERENCE CLOCK ADJUSTMENT

TP	ADJ.	MODE	INPUT
TL7501	C7501	STOP	
TAPE	M. EQ.	SPEC.	
	UNIVERSAL COUNTER	7812.5 ± 0.015 [μsec]	

1. Connect the universal counter to TP7501.
2. Adjust C7501 so that the frequency becomes 7812.5 ± 0.015us.

Memo:

SECTION 3

ABBREVIATIONS & BLOCK DIAGRAMS

3-1. ABBREVIATIONS

443NT [L]	4.43 NTSC ①	BIL. [H]	BILINGUAL ⑥
A. COMP	AUDIO COMPONENT SIGNAL	BIL/M1 [L]	BILINGUAL ①
A. COMPO	AUDIO COMPONENT SIGNAL	BS CLOCK	BS CLOCK
A. D.P [L]	AUDIO DUBBING PAUSE ①	BS DATA	BS DATA
A. D/L [L]	AUDIO DUBBING PAUSE ①	BS LCH IN	BS L CHANNEL INPUT
A. DEF [S]	AUDIO DEFEAT	BS MIX [H]	BS MIX ⑥
A. DEF [S] [L]	AUDIO DEFEAT	BS MON [H]	BS MONITOR ⑥
A. DUB P [L]	AUDIO DUBBING PAUSE ①	BS MONI [H]	BS MONITOR ⑥
A. DUB [H]	AUDIO DUBBING ⑥	BS RCH IN	BS R CHANNEL INPUT
A. ERASE	AUDIO ERASE	BS VIDEO	BS VIDEO SIGNAL
A. H. SW	AUDIO HEAD SWITCHING PULSE	BS VIDEO/BS1	BS VIDEO SIGNAL
A. HEAD [R]	AUDIO HEAD (REC)	BS [H]	BS ⑥
A. HEAD [W]	AUDIO HEAD (PLAY)	BS. LEVEL	BS LEVEL
A. IN [L]	AUDIO INPUT (L)	BS. M [H]	BS MONITOR ⑥
A. IN [R]	AUDIO INPUT (R)	BS/VTR [H]	BS/VTR ⑥
A. MUT [H]	AUDIO MUTE ⑥	BUS CLK	BUS CLOCK
A. MUTE [H]	AUDIO MUTE ⑥	BUS LSN	BUS LISTEN
A. OUT [L]	AUDIO OUTPUT (L)	BUS TLK	BUS TALK
A. OUT [R]	AUDIO OUTPUT (R)	BUZZER	BUZZER
A. RF OUT	AUDIO RF SIGNAL OUTPUT	CAP EC	CAPSTAN TORQUE CONTROL
A/VS/S. DATA	AV SW/SERIAL DATA	CAP M GND	CAPSTAN MOTOR GND
AC ONLINE	AC ONLINE	CAP. ET	CAPSTAN TORQUE CONTROL
AC. O/EE. H	AC ONLINE/EE ⑥	CAP. FG1	CAPSTAN FG1 PULSE
AFC S C	AFC S CURVE	CAP. FG2	CAPSTAN FG2 PULSE
AFC [S]	AFC S CURVE	CAS. SW	CASSETTE SW
AFC. DEF	AFC DEFEAT	CCN	PLAYBACK CONTROL SIGNAL (-)
ARFC OUT	AUDIO RF SIGNAL OUTPUT	CCP	PLAYBACK CONTROL SIGNAL (+)
ART. V	ARTIFICIAL VERTICAL SYNC SIGNAL	CHM	CONTROL SIGNAL (+)
ART. V. MM	ARTIFICIAL VERTICAL SYNC SIGNAL MONO MULTI	CHP	CONTROL SIGNAL (-)
ART. V/H/N	ARTIFICIAL VERTICAL SYNC SIGNAL ⑥/NORMAL	CINEM [L]	CINEMA ①
AT. V/H/N	ARTIFICIAL VERTICAL SYNC SIGNAL	CINEMA [L]	CINEMA ①
ATSW/TEST/NOR/SE	TEST/NORMAL/SERVICE	CINEMA/MIX	CINEMA/MIX
AUDIO IN [L]	AUDIO INPUT (L)	CKL	RATCH LOCK
AUDIO IN [R]	AUDIO INPUT (R)	CKS	SHIFT LOCK
AUDIO OUT [L]	AUDIO OUTPUT (L)	CL	CLOCK
AUDIO OUT [R]	AUDIO OUTPUT (R)	CLK	CLOCK
AUDIO SELECT [H]	AUDIO SELECT ⑥	CLK (C.G)	CLOCK
AUDIO. L	AUDIO (L)	CLOCK. IN	CLOCK INPUT
AUDIO. R	AUDIO (R)	CLP	CLAMP
AV CNT	AV CONTROL	COL/B/W/NOR	COLOUR/BLACK & WHITE/NORMAL
AV CTL	AV CONTROL	COLOR [H]	COLOUR ⑥
AV CTL/S. CLK	AV CONTROL/SERIAL CLOCK	CONV	CONVERTOR
AV. C.M.	AV CONTROL MODE	CS	CHIP SELECT
AVCNT/METER. R	AV CONTROL/LEVEL METER (R)	CTL GND	CONTROL GND
AVSW/METER. L	AV SW/LEVEL METER (L)	CTL HEAD [+]	CONTROL HEAD (+)
B MODE. H	B MODE ⑥	CTL HEAD [-]	CONTROL HEAD (-)
B.G.P	BURST GATE PULSE	CTL [+]	CONTROL HEAD (+)
BACKUP 5V	BACK UP 5V	CTL [-]	CONTROL HEAD (-)
BAND. U.E.	BAND U	CUE BIAS	CUE BIAS
BANDVL. D	BAND VL	CURRENT LIM	CURRENT LIMMETER
BI/MI [L]	BILINGUAL/MIX ①	CYL ET	CYLINDER TORQUE CONTROL
BIL	BILINGUAL	CYL GND	CYLINDER GND
BIL [L]	BILINGUAL ①	D.F.M. REC [H]	DELAIED FM RECORDING ⑥
		D. FM REC [L]	DELAIED FM RECORDING ①
		D. GND	DIGITAL GND


D. REC [H]	DELAYED RECORDING ⑥	H. SYNC	HORIZONTAL SYNC
D4/S. LED	D4/STILL LED	H. AMP. SW	HEAD AMP SW PULSE
D4/STILLED	D4/STILL LED	H. P <R>	HEAD PHONE (R)
DAC [CLK]	TUNER DAC (CLOCK)	H. P <L>	HEAD PHONE (L)
DAC/FSCS	TUNER DAC/FS CHIP SELECT	H. P GND	HEAD PHONE GND
DAREC [H]	DELAYED AUDIO RECORDING ⑥	H. P OUT [L]	HEAD PHONE OUTPUT (L)
DATA	DATA	H. P OUT [R]	HEAD PHONE OUTPUT (R)
DECODER [L]	DECODER (L)	H. SW	HEAD SW PULSE
DECODER [R]	DECODER (R)	HEAD PHONE [L]	HEAD PHONE (L)
DEW	DEW	HEAD PHONE [R]	HEAD PHONE (R)
DEW SNS	DEW SENSOR	HEAD SW	HEAD SW
DFMRE [H]	DELAYED FM AUDIO RECORDING ⑥	HEATER [+]	HEATER (+)
E. REC 5V	EXCEPT RECORDING 5V	HEATER [-]	HEATER (-)
EC	ERROR TORQUE CONTROL	HSS	HORIZONTAL SYNC SIGNAL
ECR	ERROR TORQUE CONTROL	HTR [+]	HEATER (+)
	REFERENCE VOLTAGE	HTR [-]	HEATER (-)
EDT TRIG [L]	EDIT TRIGGER ①	I RFE	REFERENCE CURRENT
EDIT [H]	EDIT ⑥	ICL	CONTROL AGC CIRCUIT
EE [H]	EE ⑥	IF	INTERMEDIATE FREQUENCY
EE [H]/INS [M]	EE ⑥/INSERT ⑥	IN SELA1	INPUT SELECT A1 POSITION
EE. VV. TR	EE/VV/TRICK PLAY	IN SELA2	INPUT SELECT A2 POSITION
EJECT. PO	EJECT POSITION	IN SELA3	INPUT SELECT A3 POSITION
EJECT/VDET	EJECT/REVERSE SLOW LOCK	INS L/R [L]	INSERT Lch/Rch ①
ENV. SEL	ENVELOPE SELECT	INS. [H]	INSERT ⑥
ENVE. OUT	ENVELOPE OUTPUT	INSEL A1	INPUT SELECT A1 POSITION
ENVE. SEL	ENVELOPE SELECT	INSEL A2	INPUT SELECT A2 POSITION
ENV SELECT	ENVELOPE SELECT	INSERT	INSERT
EP [H]	LP ⑥	INSERT [H]	INSERT ⑥
EP/LP [H]	LP ⑥	IO CS	INPUT/OUTPUT CHIP SELECT
EP/LP/SP	LP/SP	JOG1	JOG1
EP/SS [H]	LP/SLOW/STILL/STOP ⑥	JOG S3 LED/FOWRD	JOG LED/FORWARD LED
EPROMCS	EPROM CHIP SELECT	JOG/F. LED	JOG LED/FORWARD LED
EX. REC 5V	EXCEPT RECORDING 5V	JSB [H]	JSB ⑥
FF/REW [L]	FIRST FORWARD/REWIND ①	JST. CLCK	JUST CLOCK
FG1 IN	FG1 PULSE INPUT	JST. CLK	JUST CLOCK
FG2 IN	FG2 PULSE INPUT	JST. CLOCK	JUST CLOCK
FILTER ADJUSTMEN	FILTER ADJUSTMENT	L. OUT	Lch OUTPUT
FLY ERASE [H]	FLYING ERASE HEAD ON ⑥	L. CH [H]	Lch ⑥
FLY ON [H]	FLYING ERASE E HEAD ON ⑥	L. CH [L]	Lch ①
FLY. E [H]	FLYING ERASE HEAD ON ⑥	LED (MAIN)	LED (MAIN)
FM MUT [H]	FM AUDIO MUTE ⑥	LED (STEREO)	LED (STEREO)
FM MUTE [H]	FM AUDIO MUTE ⑥	LED (SUB)	LED (SUB)
FM OUT [L]	FM OUTPUT (L)	LED CKL	LED SERIAL CLOCK
FM OUT [R]	FM OUTPUT (R)	LED CKS	LED SERIAL CLOCK
FM PACK OUT [L]	FM PACK OUTPUT (L)	LED DATA	LED SERIAL DATA
FM PACK OUT [R]	FM PACK OUTPUT (R)	LINE IN 1 [L]	LINE INPUT 1 (L)
FM/BS SEL [L]	FM/BS SELECT (L)	LINE IN 1 [R]	LINE INPUT 1 (R)
FM/BS SEL [R]	FM/BS SELECT (R)	LINE IN 2 [L]	LINE INPUT 2 (L)
FS. CLK	FS CLOCK	LINE IN 2 [R]	LINE INPUT 2 (R)
FUL. E [H]	FULL ERASE HEAD ON ⑥	LINE IN V	LINE INPUT VIDEO
FULL. E [H]	FULL ERASE HEAD ON ⑥	LINE IN [L]	LINE INPUT (L)
FULL. E. 12V	FULL ERASE 12V	LINE IN [R]	LINE INPUT (R)
GND [A]	GND (ANALOGUE)	LINE OUT [L]	LINE OUTPUT (L)
GND [TU]	GND (TUNER)	LINE OUT [R]	LINE OUTPUT (R)
GND/N. SW. 12V	GND/NON SW 12V	LP [H]	LP ⑥

LPTRI [L]	LP TRICK PLAY ①	P. OFF [L]	POWER OFF ①
Lch/A. DUB	Lch/AUDIO DUBBING	PAL [H]	PAL ②
M GND	MOTOR GND	PAL [L]/NTSC [H]	PAL ①/NTSC ②
M REG	MOTOR REGULATOR	PB ADJ OUT	PLAYBACK ADJUST OUTPUT
MAIN OUT	MAIN OUTPUT	PB OUT	PLAYBACK OUTPUT
MAIN [L]	MAIN ①	PB. H	PLAYBACK ②
MAIN/MONO	MAIN/MONAUROAL	PFG	PG/FG
MAX IN	MAXIMAM INPUT	PHOTSN +B	PHOTO SENSOR +B
MES [H]	MESECAM ②	PICT. CNT	PICTURE CONTROL
MESE [H]	MESECAM ②	PLAY LED/RVS LED	PLAY LED/REVERSE LED
MESE [L]	MESECAM ①	PLAY. PO	PLAY POSITION
METER 5V	LEVEL METER 5V	PLAY/R. LED	PLAY LED/REVERSE LED
METER [L]	LEVEL METER (L)	PLY/DEW	PLAY/DEW ②
METER [R]	LEVEL METER (R)	POWER OFF [L]	POWER OFF ①
METER. L/AVS	LEVEL METER (L)	PREROLL [H]	PREROLL ②
METER. R/AVC	LEVEL METER (R)	PWRFAIL	POWER FAILURE DETECT
MI/BI [L]	MIX ②/BILIGUAL	R. CH [H]	Rch ②
MIC GND	MIC GND	R. CH [L]	Rch ①
MIC IN	MIC INPUT	R. ST	RESET
MIC IN [L]	MIC INPUT (L)	R/S/F	REVERSE ②/STOP ③/FORWARD ①
MIC IN [R]	MIC INPUT (R)	RCH [H]	Rch ②
MIC [H]	MIC ②	REC 12V	RECORDING 12V
MIX [H]	MIX ②	REC CHROMA	RECORDING CHROMINANCE SIGNAL
MIX [H]/CINEMA [L]	MIX ②/CINEMA SOUND ①	REC H	RECORDING ②
MIX/CINE	MIX ②/CINEMA SOUND ①	REC IN	RECORDING INPUT
MIX/CINEMA [L]	MIX ②/CINEMA SOUND ①	REC OUT [L]	RECORDING OUTPUT ①
MN. H/M. L	MONAUROAL ②/MAIN ①	REC START	RECORDING START
MN. H/MAI. L	MONAUROAL ②/MAIN ①	REC VR [C]	RECORDING VOLUME (COMMON)
MN2/MES. L	MONAUROAL 2/MESECAM ①	REC VR [L]	RECORDING VOLUME (L)
MODE SEL	AUDIO MODE SELECT	REC VR [R]	RECORDING VOLUME (R)
MODE SW	AUDIO MODE SW	REC Y	RECORDING LUMINANCE SIGNAL
MODE. S. IN	AUDIO MODE SELECT INPUT	REC [H]	RECORDING ②
MODE. S. OUT	AUDIO MODE SELECT OUTPUT	REC. C	RECORDING CHROMINANCE SIGNAL
MONO [H]	MONAUROAL ②	REC. Y	RECORDING LUMINANCE SIGNAL
MONO [H]/MAIN [L]	MONAUROAL ②/MAIN ①	REC/EE CTL	RECORDING/EE CONTROL
MONO2 [L]	MONAUROAL 2	REEL-T	REEL PULSE (TAKE-UP)
MONO2/MESE [FM(L)]	MONAUROAL 2/MESECAM (FM ①)	REEL-S	REEL PULSE (SUPPLY)
MOTOR GND	MOTOR GND	REGULATOR FILTER	REGULATOR FILTER
MUTE	MUTE	RESET	RESET
N. A. REC [L]	NORMAL AUDIO RECORDING	REV M F/R	REVIEW MOTOR
N. SW 12V	NON SW 12V		FORWARD/REVERSE
N. SW. 5. DET	NON SW 5V DETECT	REV M V1	REVIEW MOTOR V1
NICAM	NICAM	REV M V2	REVIEW MOTOR V2
NICAM [L]	NICAM ①	REV MOTOR F/R	REVIEW MOTOR
NOL [H]	PAL ②/4.43 NTSC ③/3.58 NTSC ①		FORWARD/REVERSE
NOR/SOFT [H]	NORMAL/SOFT TAPE PLAY ②	REV MOTOR V1	REVIEW MOROR V1
NORMAL [H]	NORMAL ②	REV MOTOR V2	REVIEW MOTOR V2
NR BIAS	NR BIAS	REV MOTOR [+]	REVIEW MOTOR (+)
NTSC [L]	NTSC ①	REV MOTOR [-]	REVIEW MOTOR (-)
OCH	CONTROL AGC CIRCUIT	REV. M. GND	REVIEW MOTOR GND
OUT	OUTPUT	RF. CHROMA	RF CHROMINANCE SIGNAL
P-OFF [H]	POWER OFF ②	RF OUT	RF OUTPUT
P-OFF [L]	POWER OFF ①	RF Y	RF LUMINANCE SIGNAL
P. FAIL	POWER FAILURE DETECT	RF. Y. IN	RF LUMINANCE SIGNAL INPUT
P. OFF [H]	POWER OFF ②	RF. Y. OUT	RF LUMINANCE SIGNAL OUT PUT

ROTAR. SW ROTARY RST RST [L] Rch/INST S IN S OUT S-PHOTO S-RL. PLS S. CLK S. CLK/AV S. DATA S. DATA/A S. PHOTO S. TAB [L] S/P/N SC IN SC OUT SCK SELECT SEL OUT [L] SEL OUT [R] SHUTTLE 1 SIF SLMUT [H] SLNID [+] SLNID [-] SLW TR. MM SLW TR. REF SNS. GND SOFT [H] SOFT [H]/NORMAL SOLENOID ON [L] SP [H] SP/L/SLP SSS [L] STEREO LED STEREO [H] STEREO [L] STOP. PO STOP/5V STOP1/TAPE SEL STOP1/PAL:ST STOP2. PO STOP2/S-TAB STREO [H] SUB BIAS SUB. SW SVHS CAS [L] SW. 5. DET SYNC [L] SYSCON 5V SYSTEM T-PHOTO T-RL. PLS	ROTARY SW ROTARY SW RESET RESET ① Rch/INSERT SERIAL DATA INPUT SERIAL DATA OUTPUT SUPPLY PHOTO TRANSISTOR SUPPLY REEL PULSE SERIAL CLOCK SERIAL CLOCK/AV SERIAL DATA SERIAL DATA SUPPLY PHOTO TRANSISTOR SAFETY TAB SW ON ① SECAM/PAL/NTSC SERIAL CLOCK INPUT SERIAL CLOCK OUTPUT SERIAL CLOCK SELECT SELECT OUTPUT (L) SELECT OUTPUT (R) SHUTTLE 1 SOUND INTERMEDIATE FREQUENCY INPUT SELECT MUTE ⑥ SOLENOID (+) SOLENOID (-) SLOW TRACKING MONO MULTI SLOW TRACKING REFERENCE VOLTAGE SENSOR GND SOFT TAPE PLAY ⑥ SOFT TAPE PLAY ⑥/NORMAL ⑥ SOLENOID ON ① SP ⑥ SP/LP SLOW/STILL/STOP STEREO LED STEREO ⑥ STEREO ① STOP POSITION STOP POSITION/5V STOP1 POSITION/TAPE SELECT STOP1 POSITION/PAL STOP 2 POSITION STOP 2 POSITION/SAFETY TAB SW STEREO ⑥ SUB BIAS SUB SW S-VHS CASSETTE ① SW 5V DETECT SYNC ① SYSTEM CONTROL 5V SYSTEM SW TAKE-UP PHOTO TRANSISTOR TAKE-UP REEL PULSE	T. BUSCLK T. BUSLSN T. BUSTLK T. END [L] T. PHOTO TAPE END [L] TAPE END [L]/CAM TEST TPZ TRIC [L] TRICK [L] TRK. ENV TU. AUDIO TU. GND TU. V. IN TU. VIDEO TUN NOR IN TUN R TUN. AUDIO IN TUNER 12V TUNER L TUNER V IN TUNER [L] TUNER [N] TUNER [R] TUNER. 12 TUOFF [H] TV. AUDIO TV/VTR TXTON [L] U. REG45V UNREG UNREG19V V. REF V. EE [H] V. EE [L] VCO REF VD. IN VD. OUT VIDEO EE [L] VIDEO IN VIDEO OUT VM VM DOWN [L] VSS VTR [H] VTR. 12V X IN X OUT	TIMER BUS CLOCK TIMER BUS LISTEN TIMER BUS TALK TAPE END ① TAKE-UP PHOTO TRANSISTOR TAPE END ① TAPE END ①/CAMERA PAUSE TEST MODE TRAPEZOIDAL WAVE CIRCUIT TRIC PLAY ① TRIC PLAY ① AUTO TRACKING ENVELOPE DETECT TUNER AUDIO TUNER GND TUNER VIDEO SIGNAL INPUT TUNER VIDEO TUNER NORMAL INPUT TUNER AUDIO (R) TUNER AUDIO INPUT TUNER 12V TUNER AUDIO (L) TUNER VIDEO SIGNAL INPUT TUNER AUDIO (L) TUNER AUDIO (NORMAL) TUNER AUDIO (R) TUNER 12V TUNER OFF ⑥ TV AUDIO TV/VTR TEXT ON ① UNREGULATOR 45V UNREGULATOR UNREGULATOR 19V REFERENCE VOLTAGE VIDEO EE ⑥ VIDEO EE ① RERERENCE OSCILLATER VIDEO SIGNAL INPUT VIDEO SIGNAL OUTPUT VIDEO EE ① VIDEO SIGNAL INPUT VIDEO SIGNAL OUTPUT MOTOR VOLTAGE MOTOR VOLTAGE DOWN ① VERTICAL SYNC SIGNAL VTR ⑥ VTR 12V OSCILLATOR INPUT OSCILLATOR OUTPUT
--	--	---	--

3-2. LUMINANCE & CHROMINANCE BLOCK DIAGRAM



MAIN SIGNAL PATH IN REC MODE MAIN SIGNAL PATH IN PLAYBACK MODE


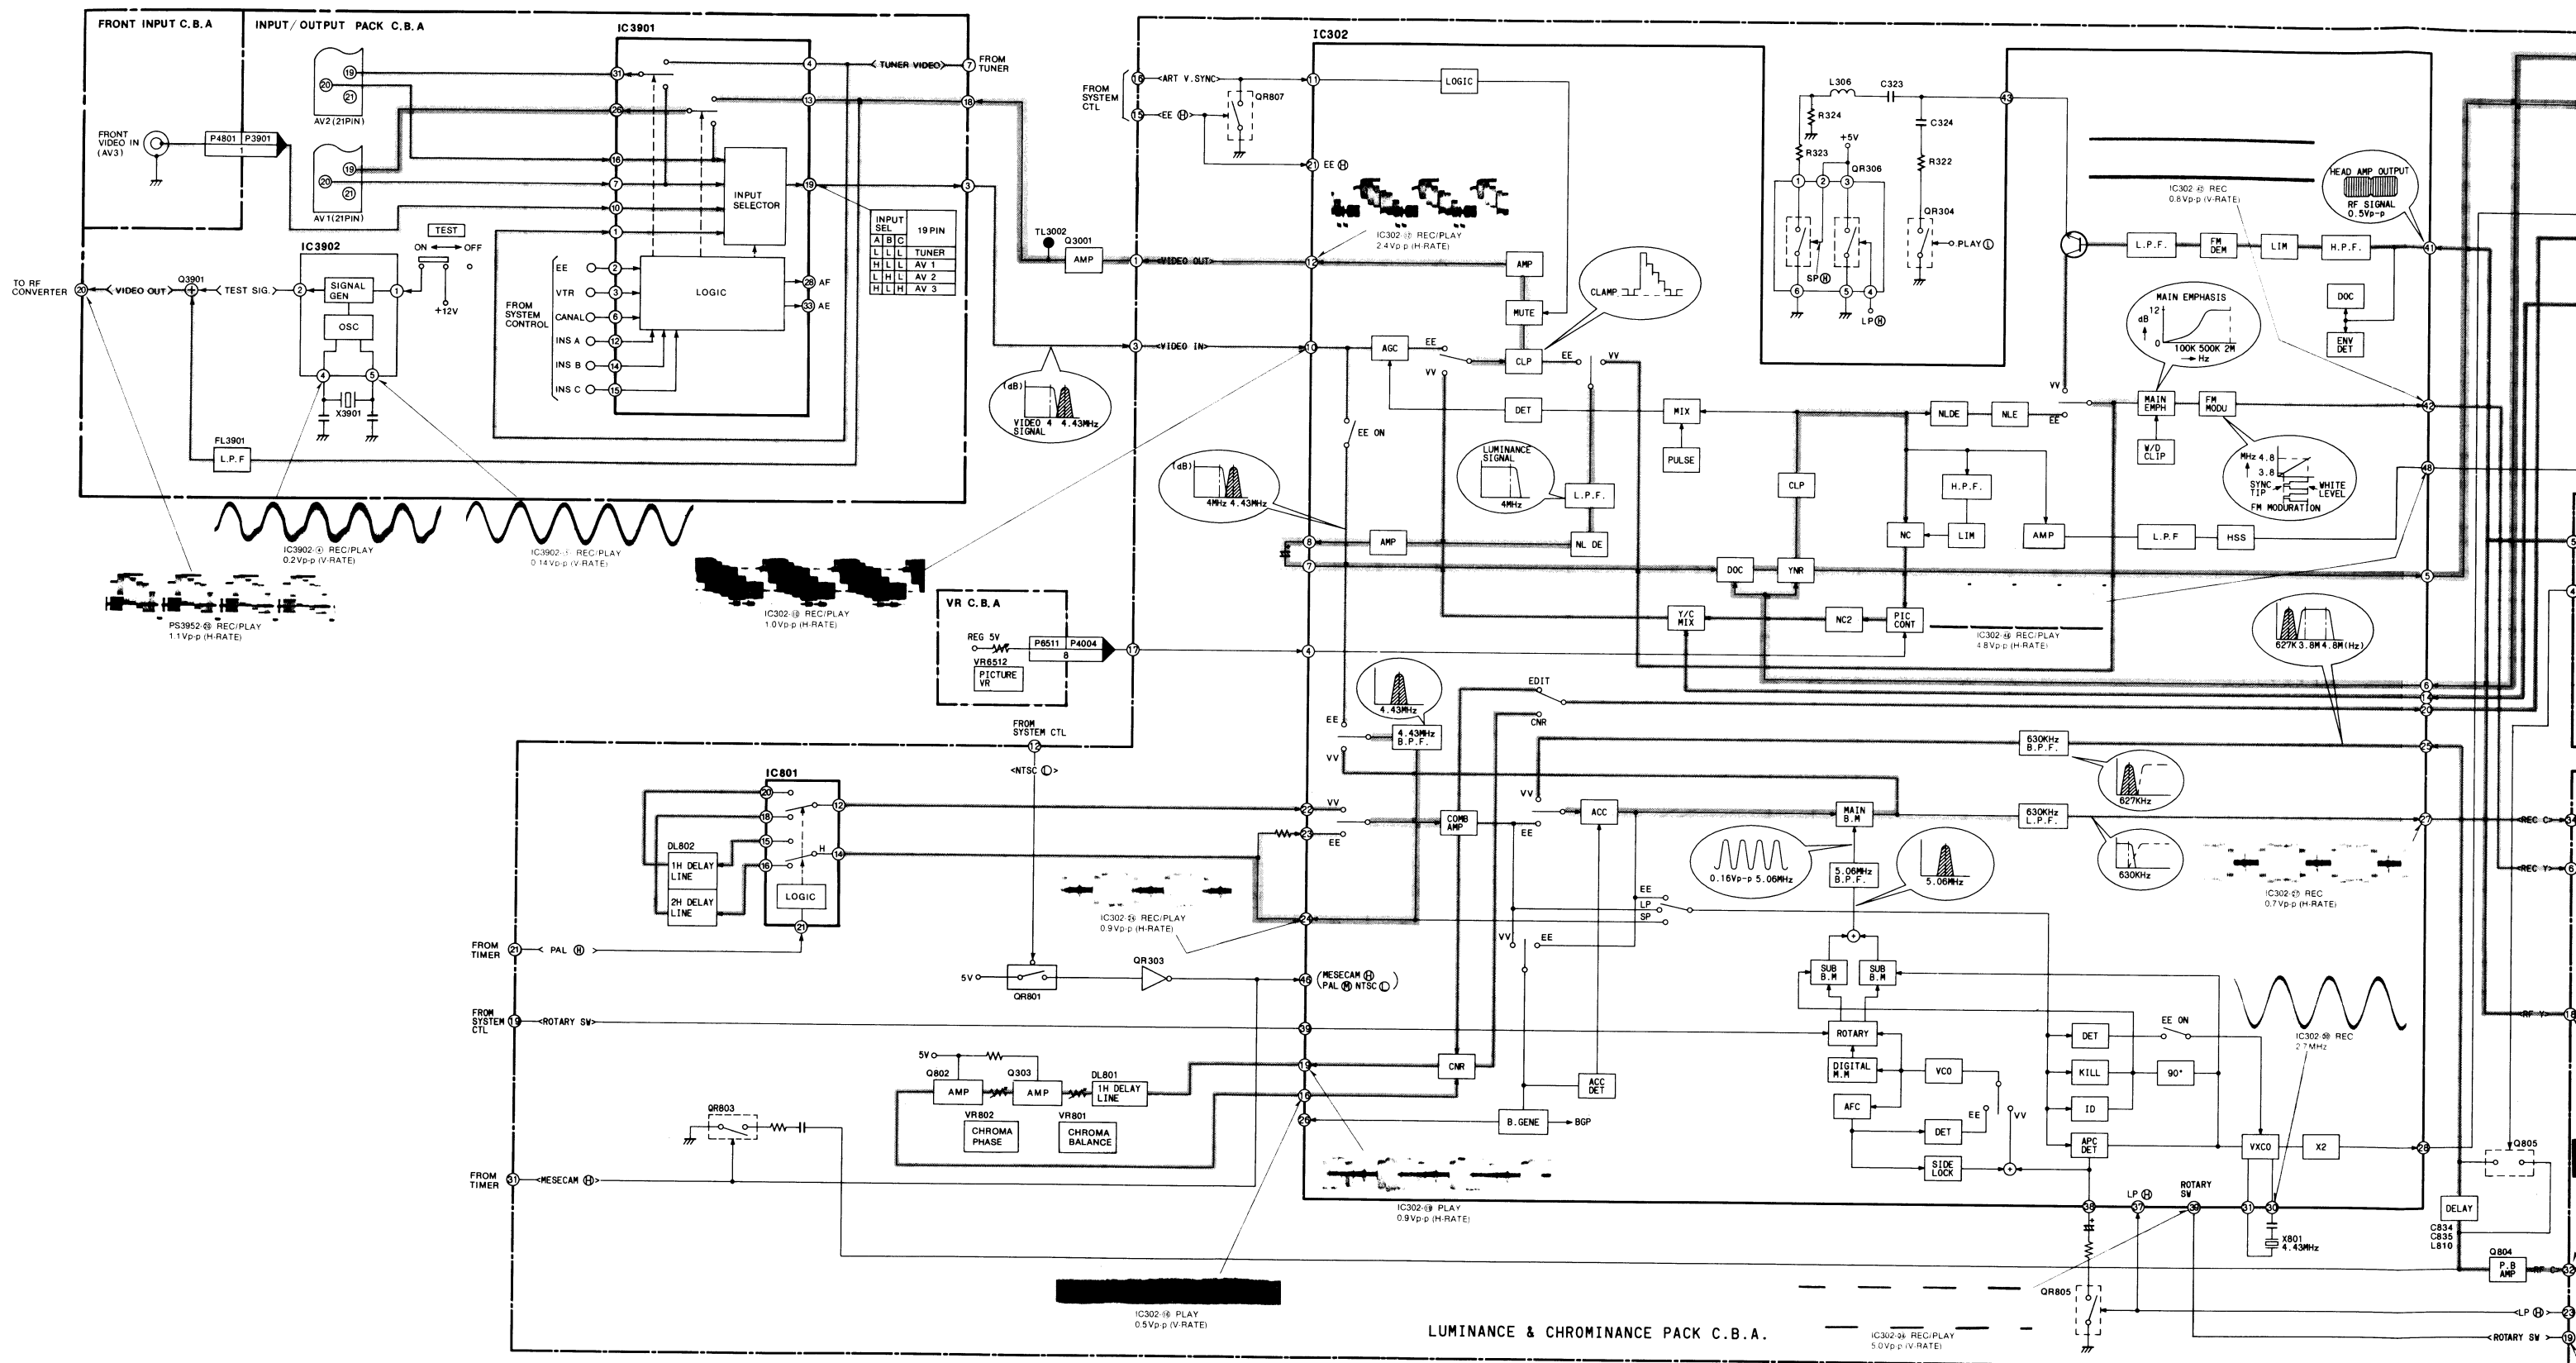


3-3. Hi-Fi AUDIO BLOCK DIAGRAM




MAIN SIGNAL PATH IN REC MODE


MAIN SIGNAL PATH IN PLAYBACK MODE

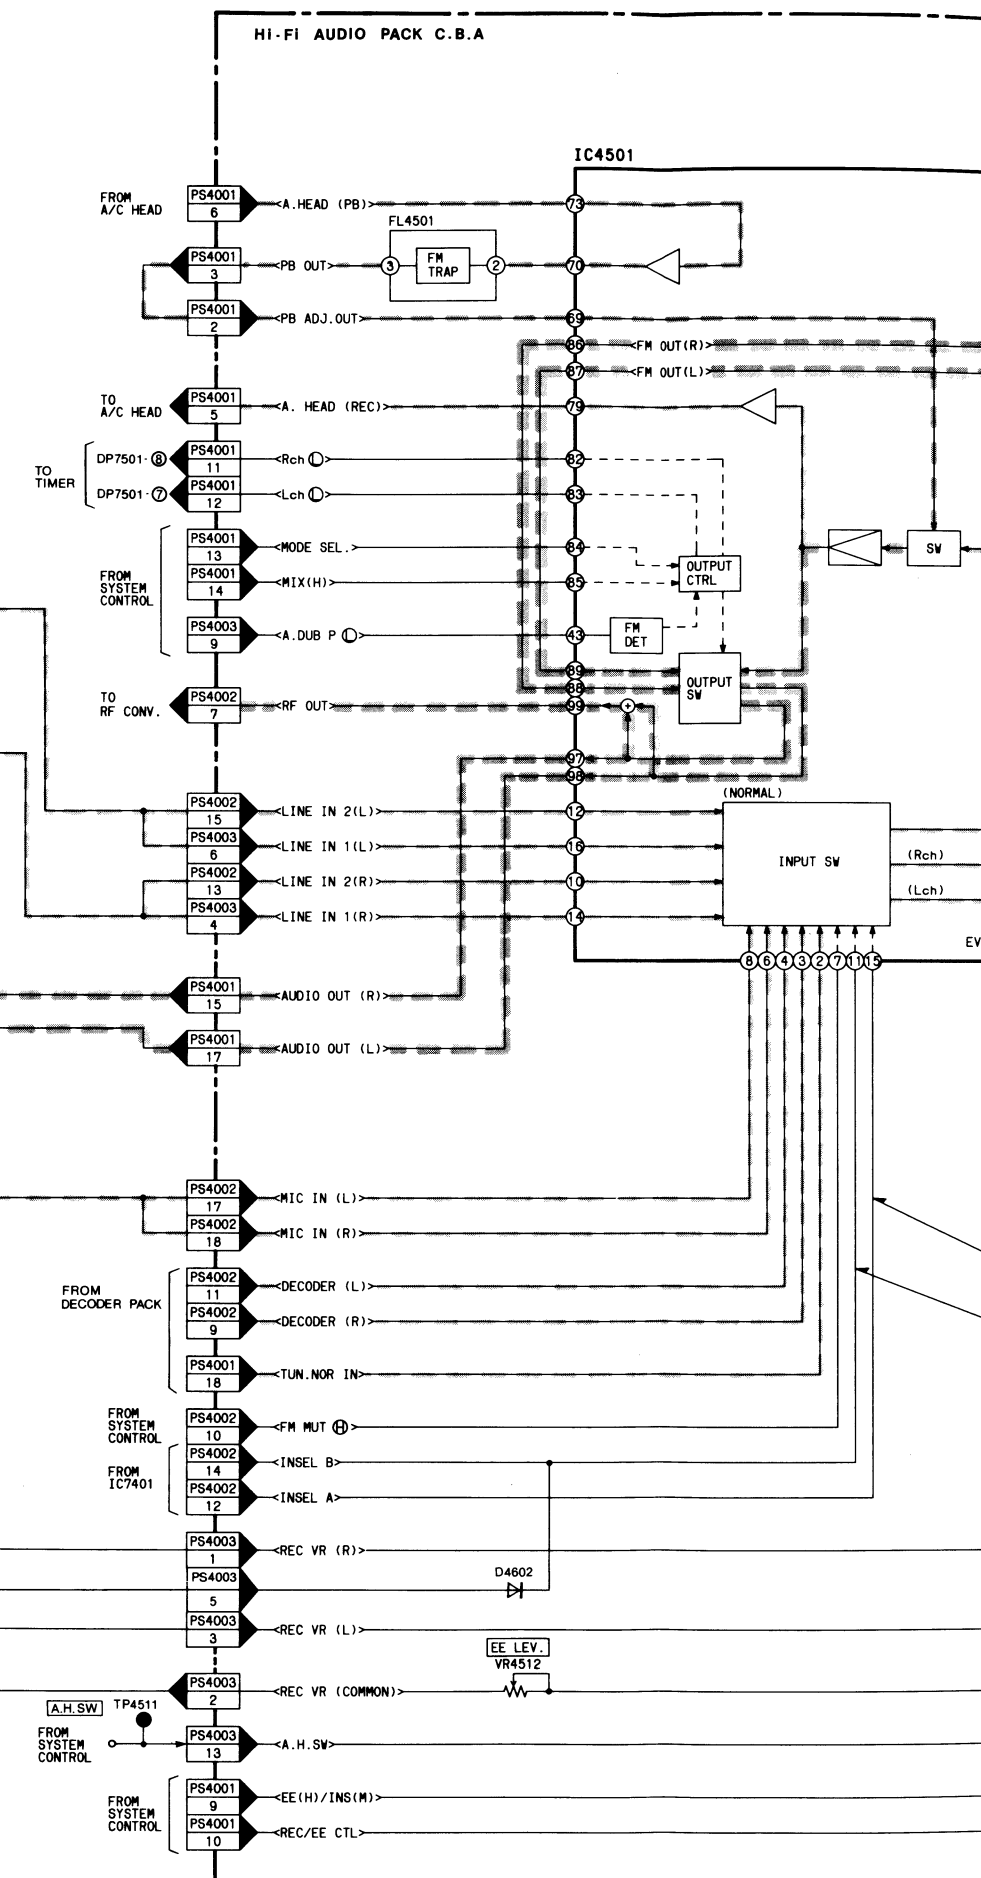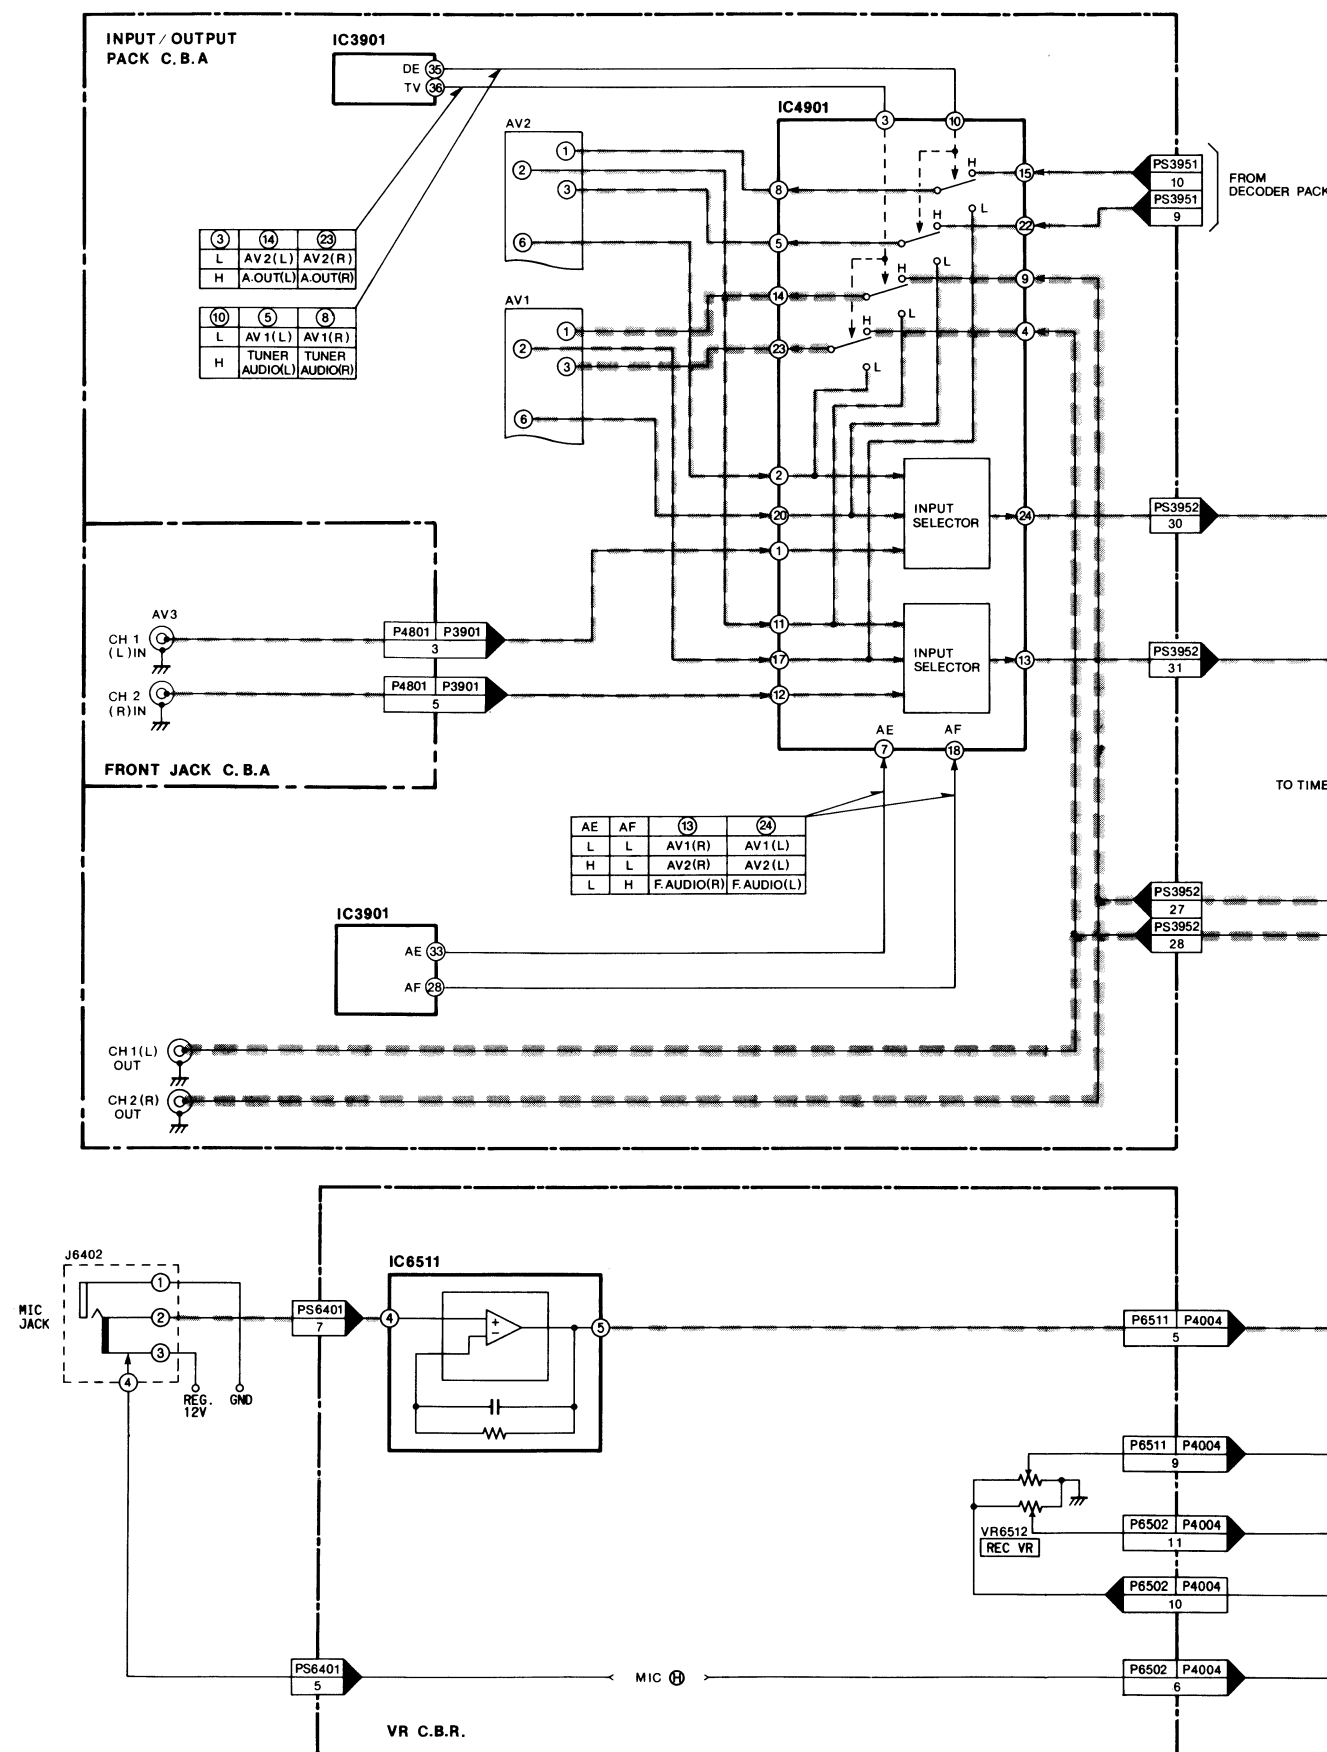

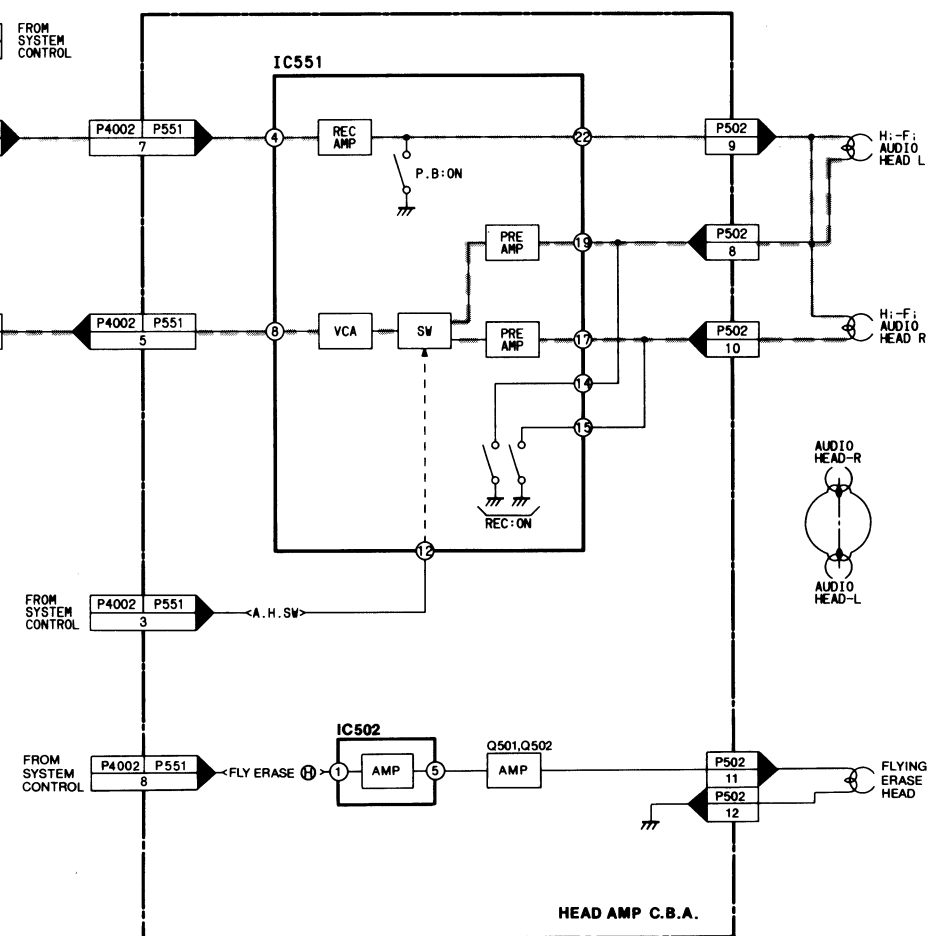
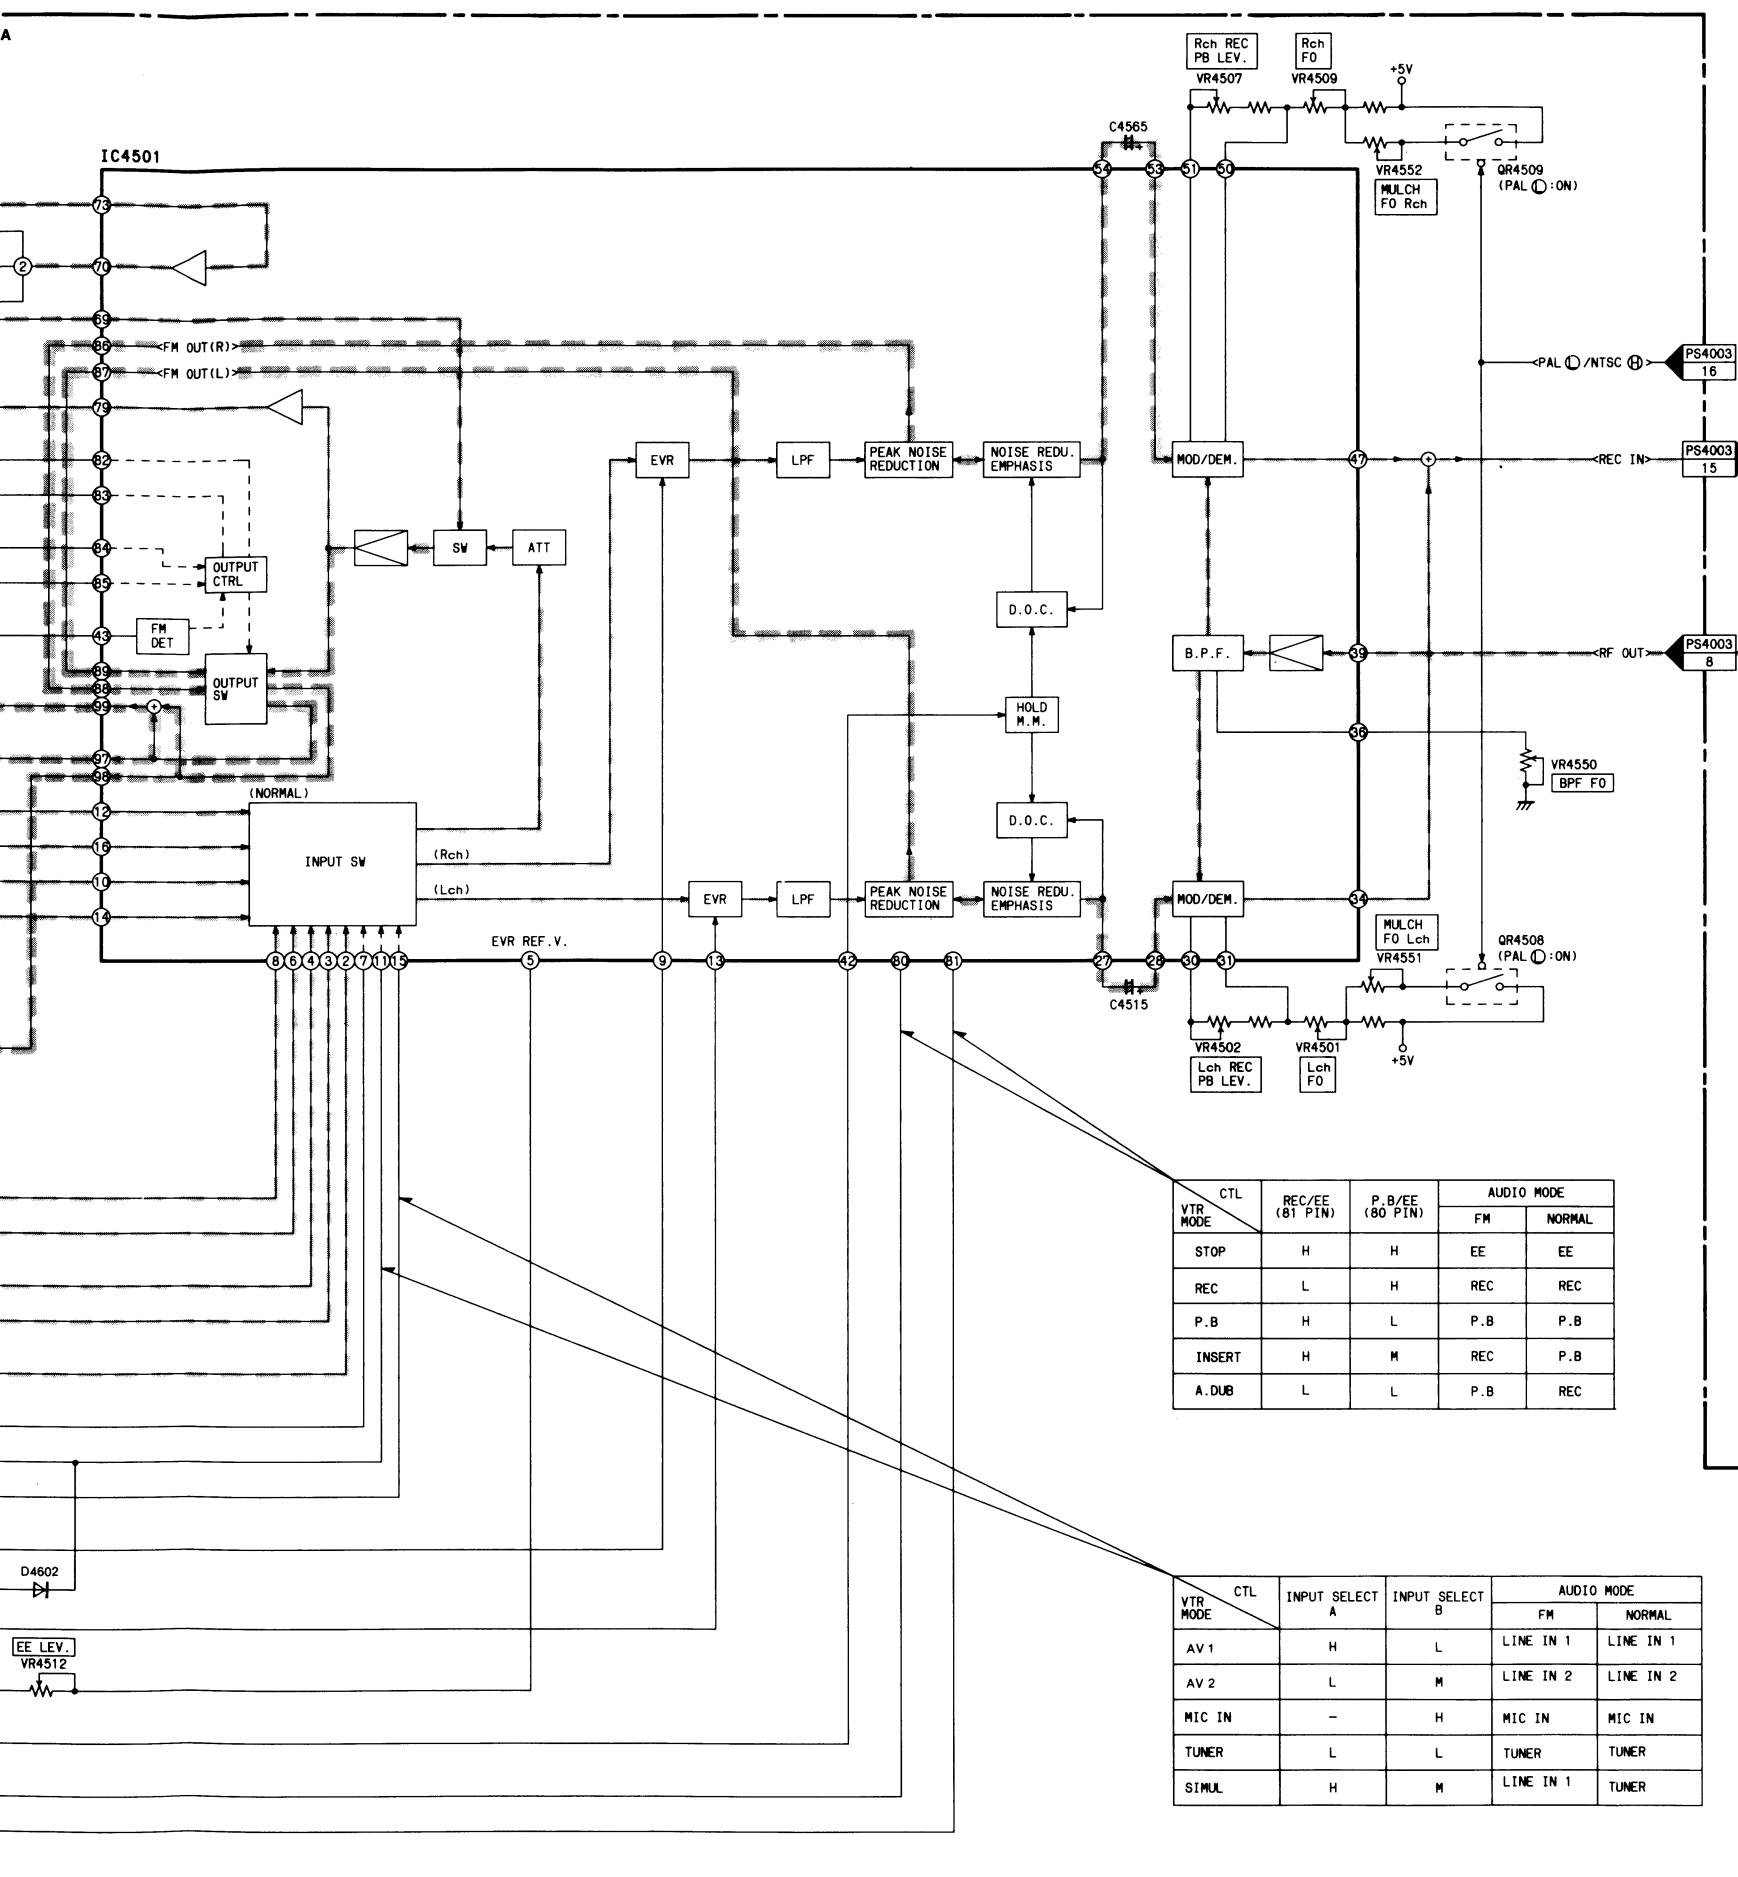


3-4. SYSTEM CONTROL & SERVO BLOCK DIAGRAM

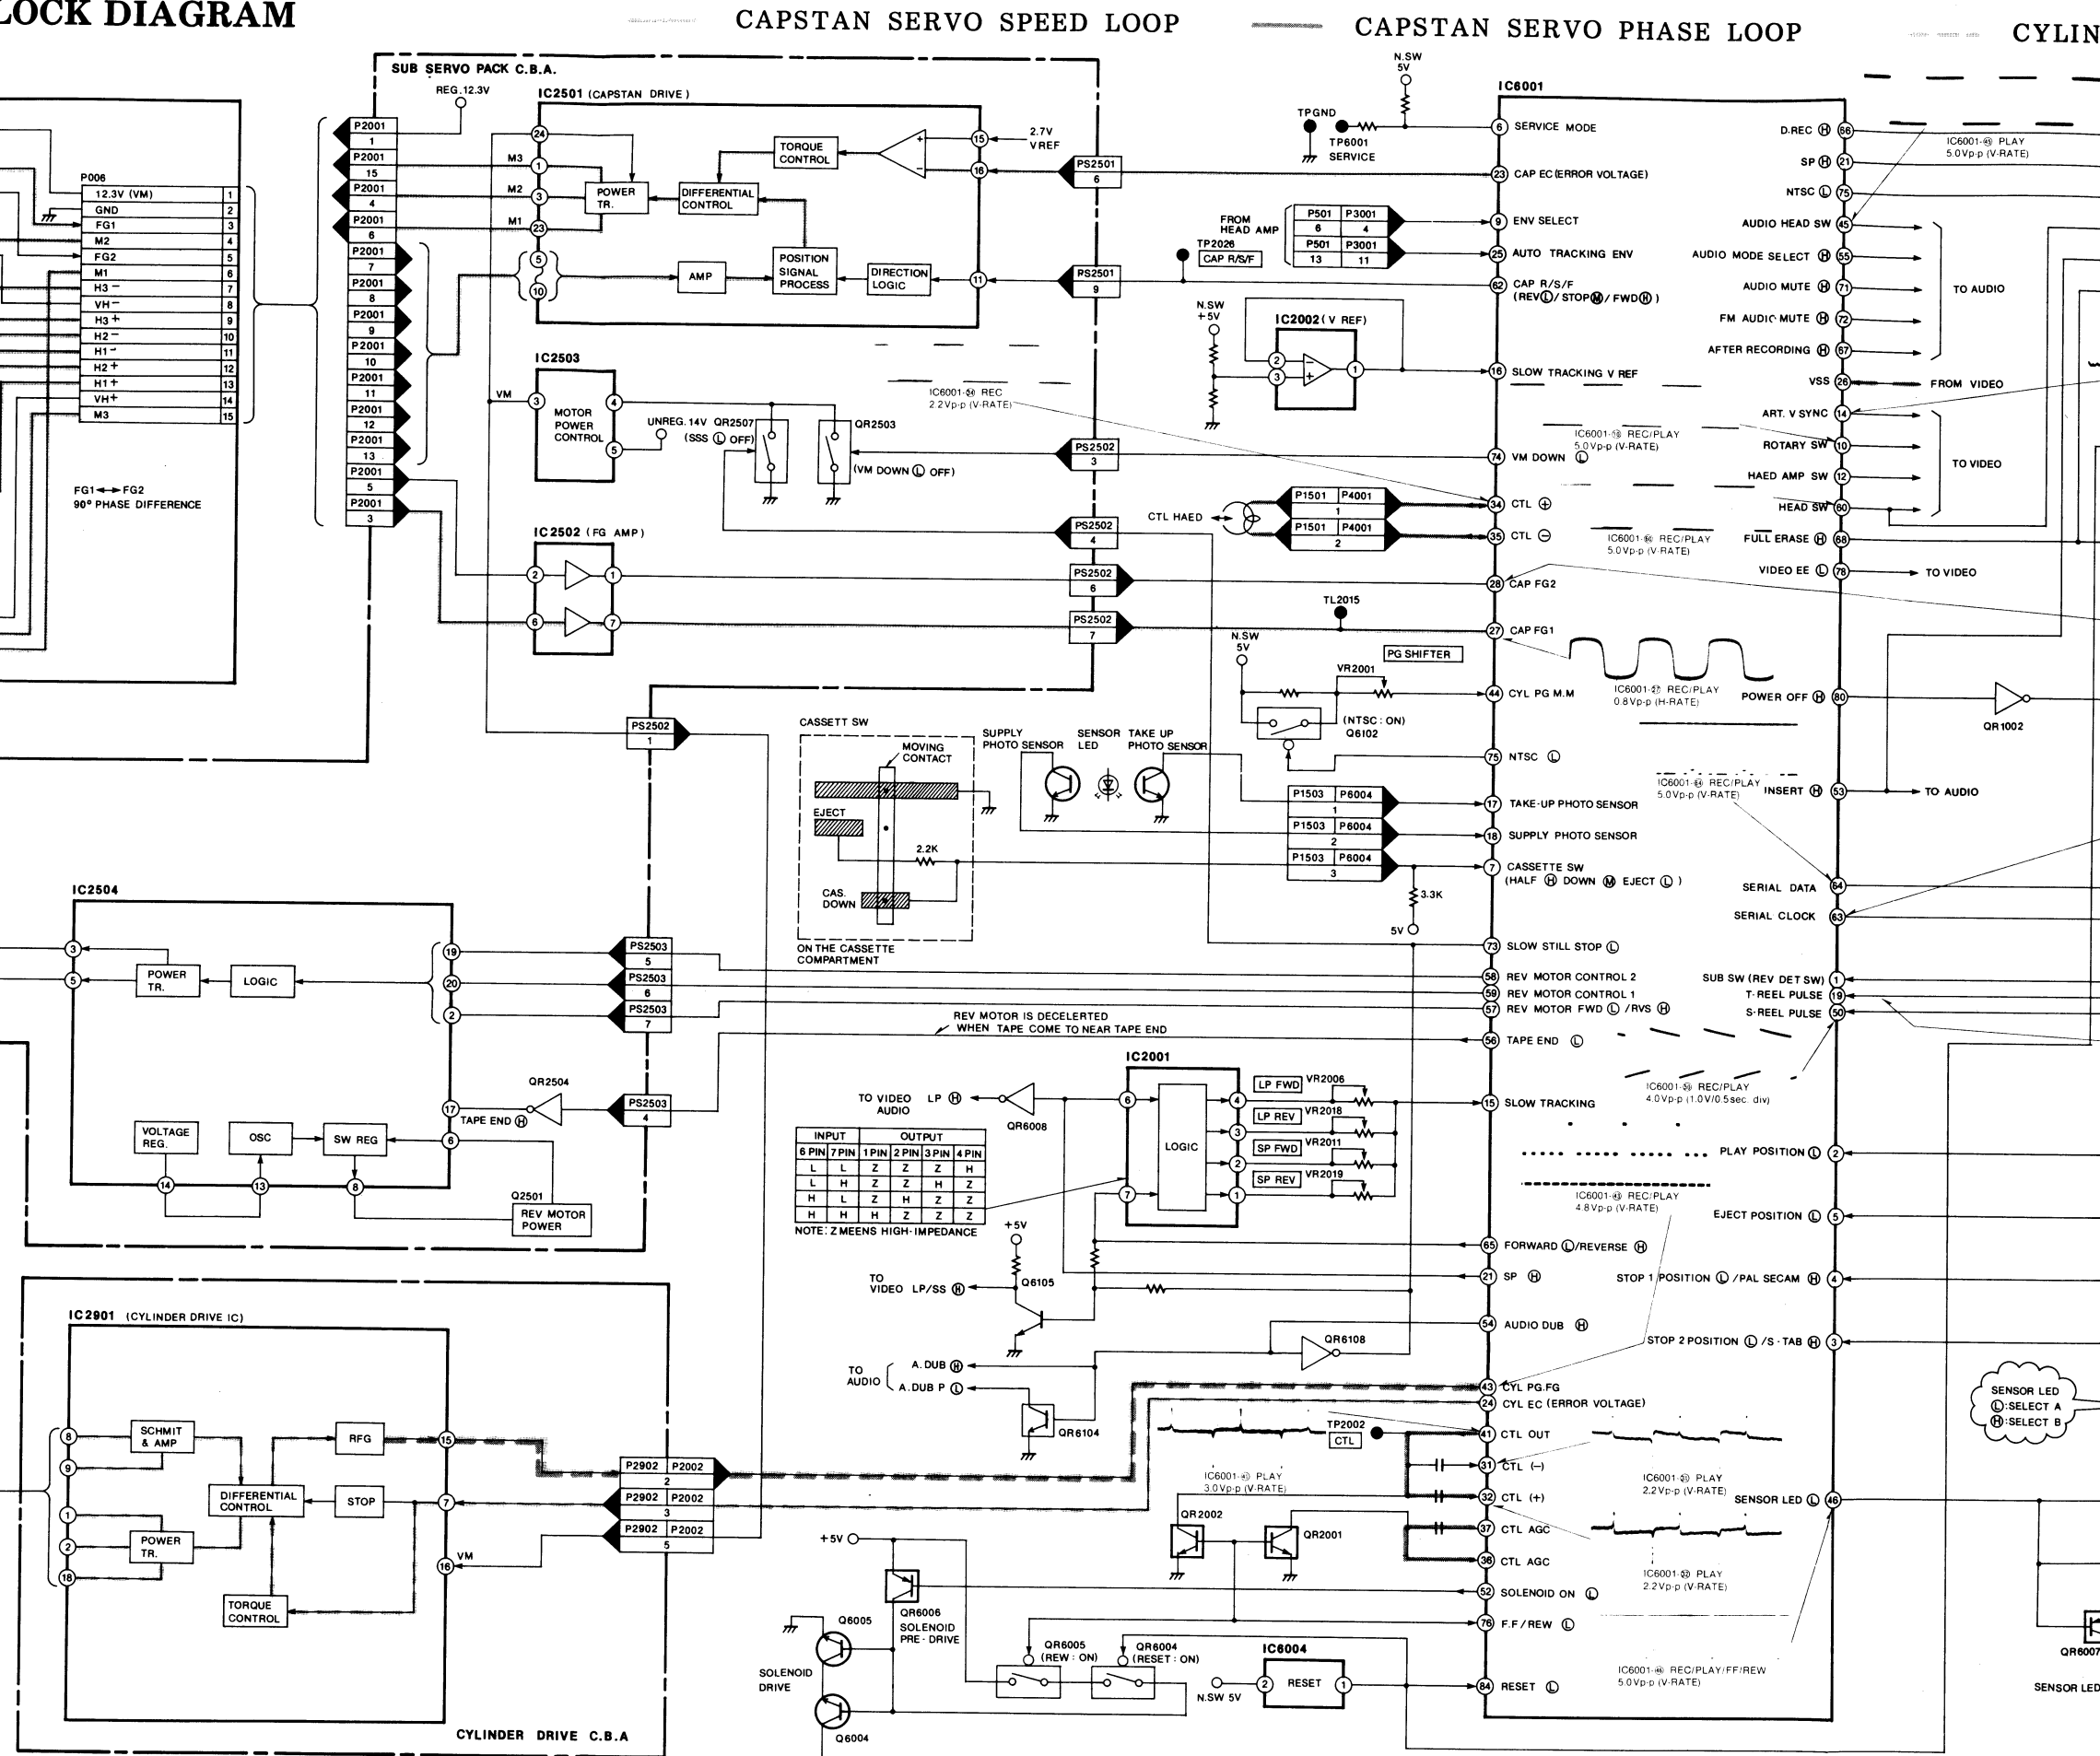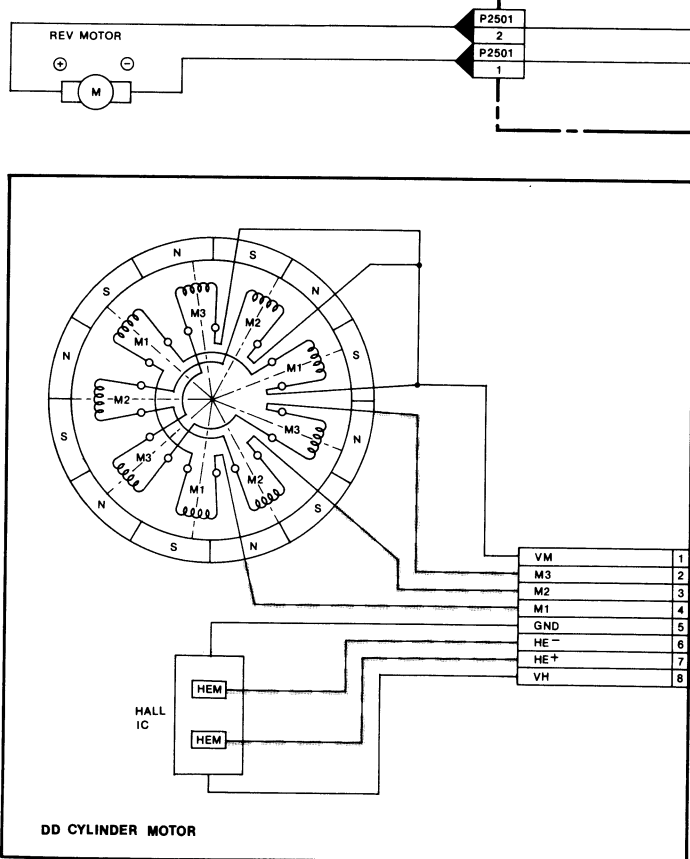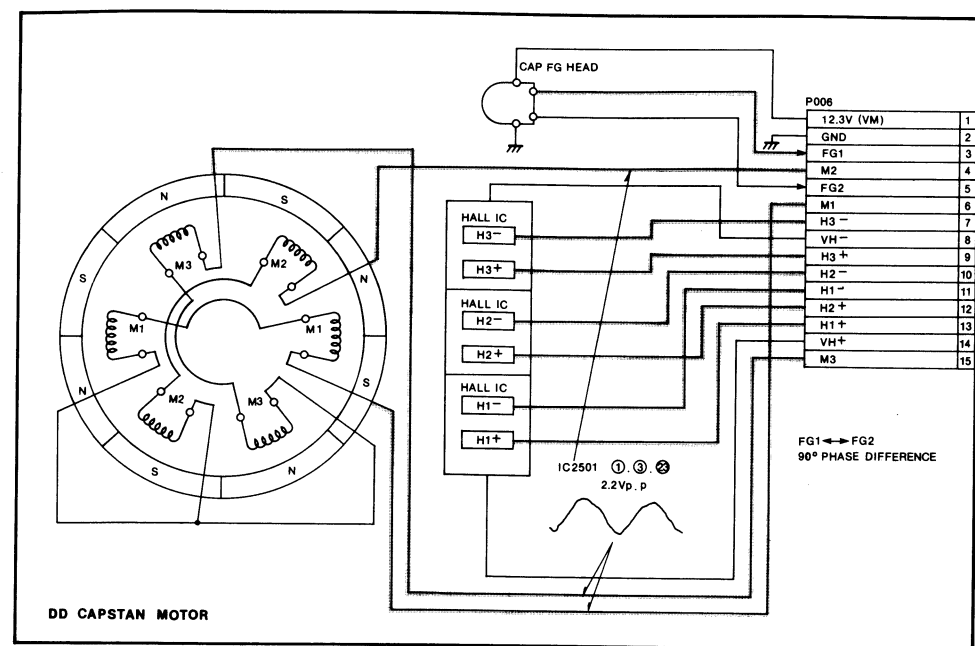

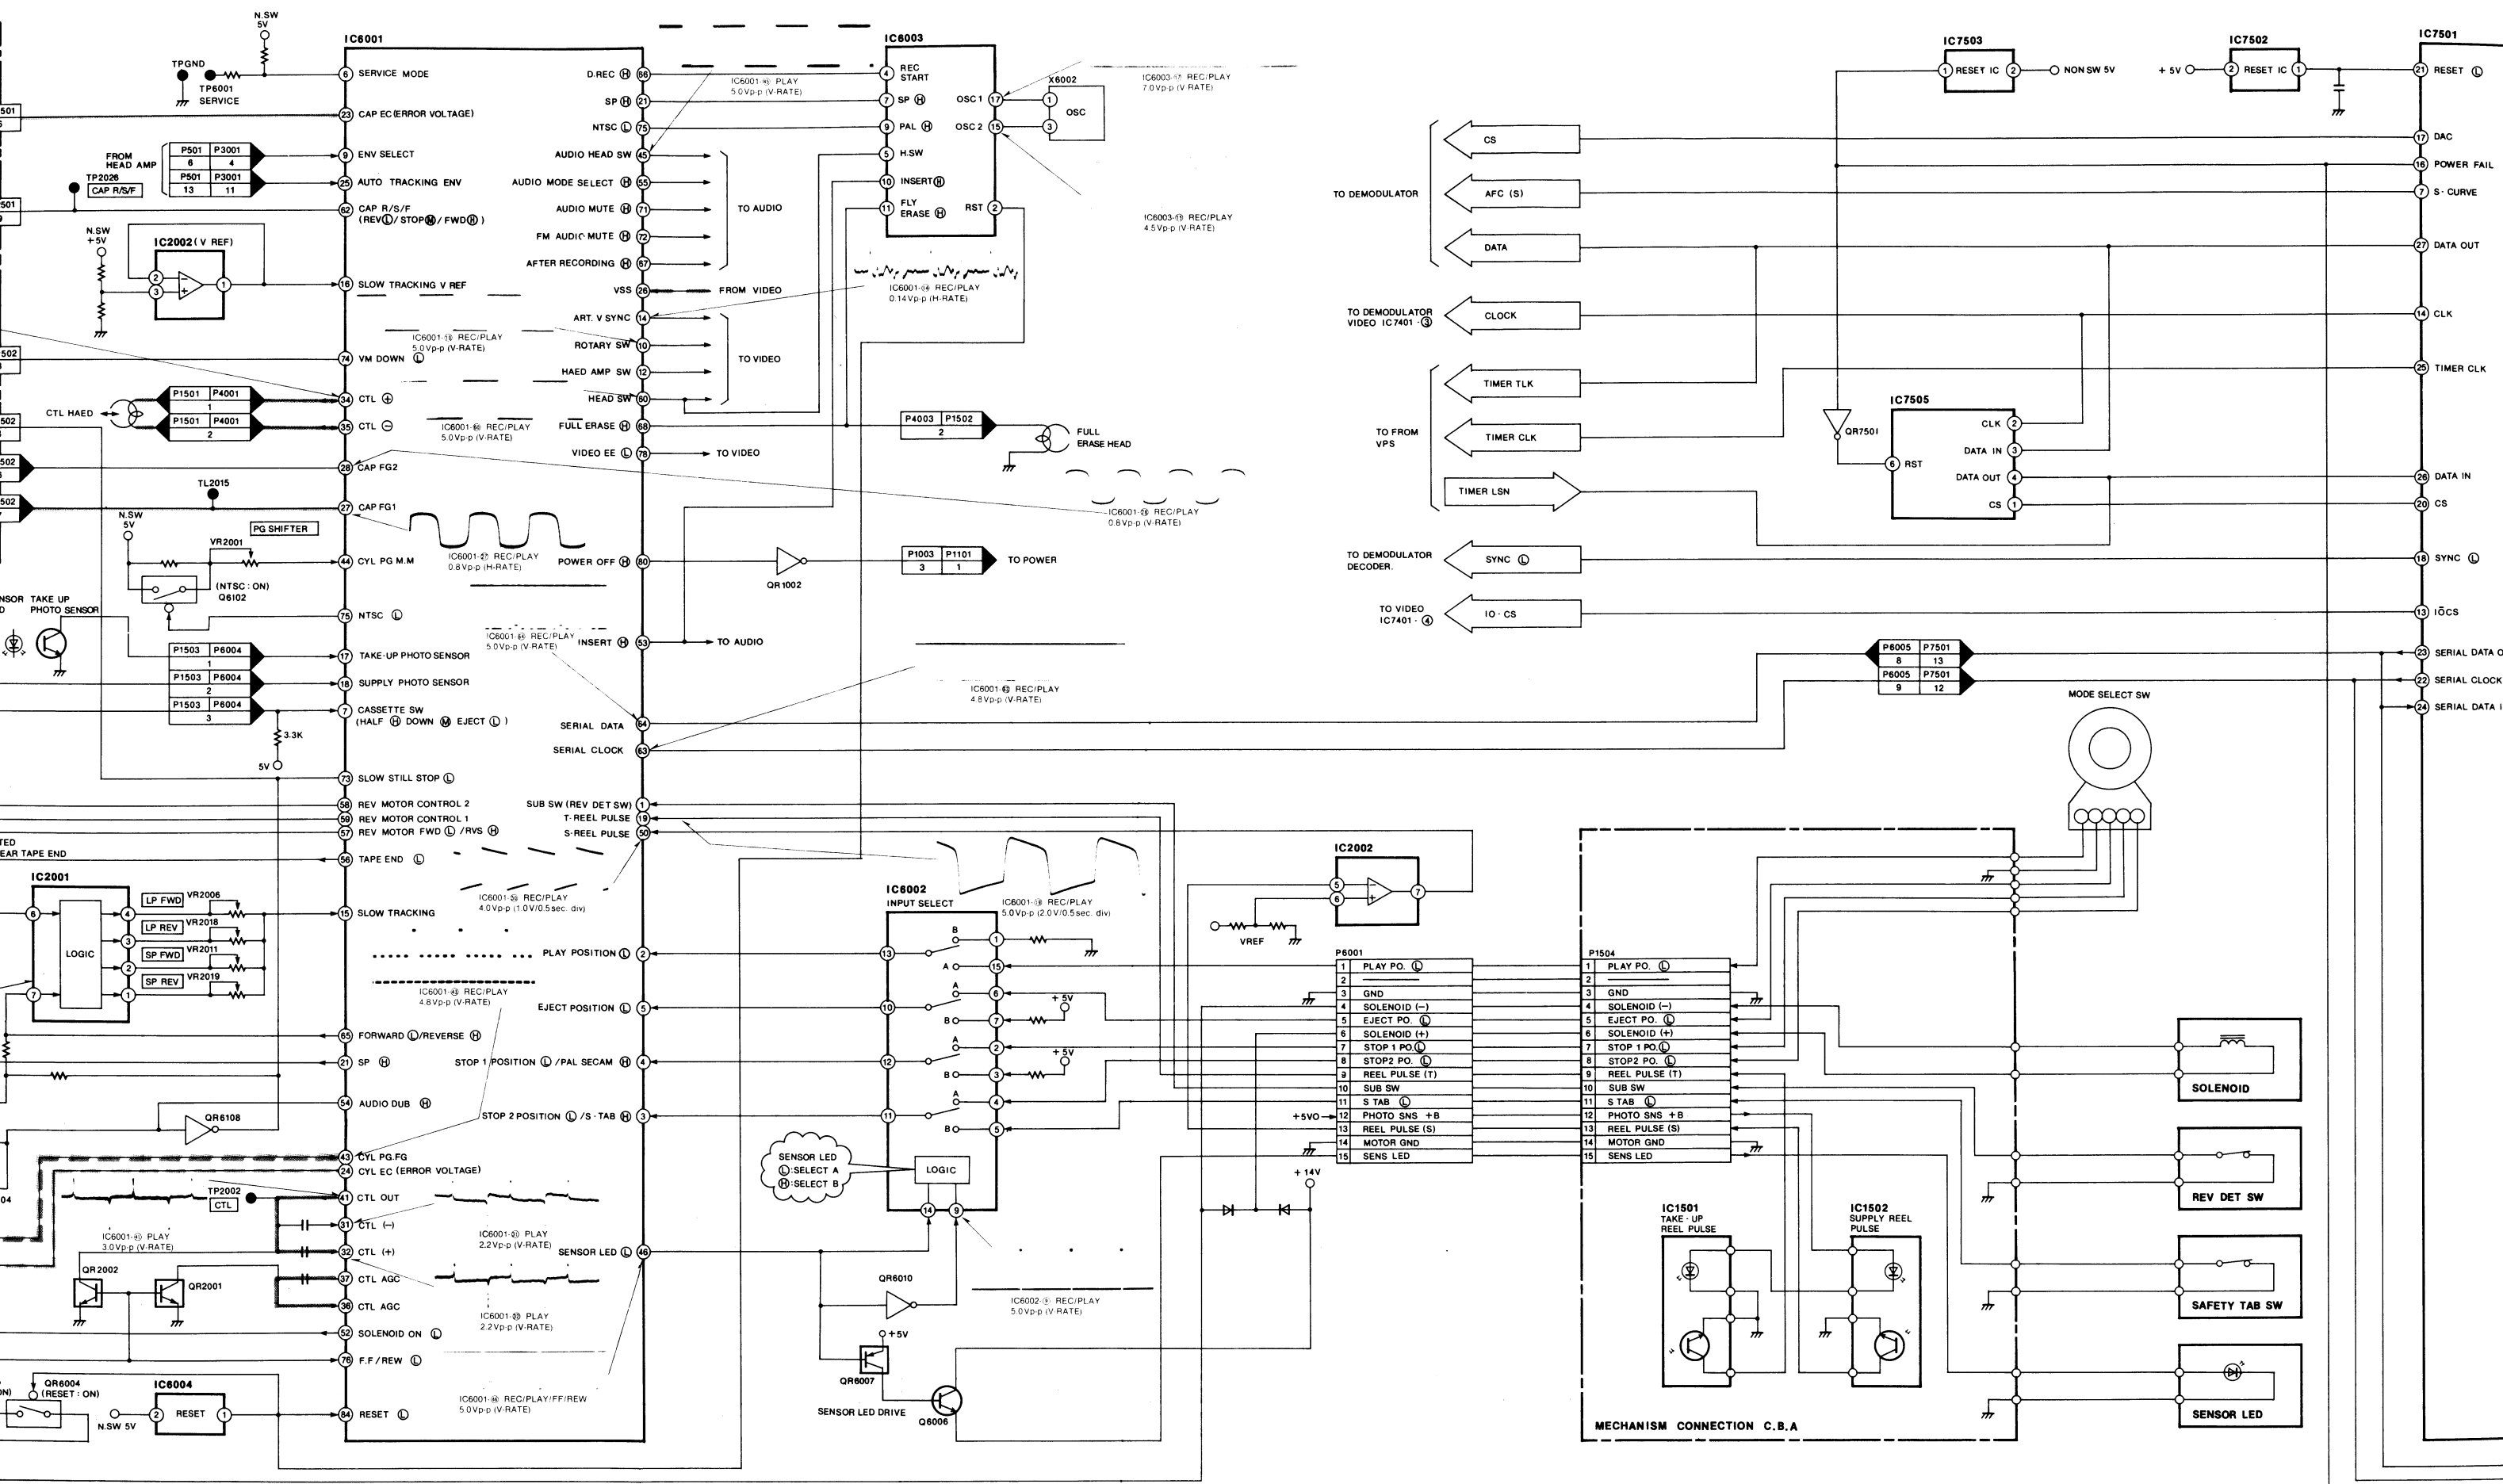


CYLINDER SERVO PHASE LOOP

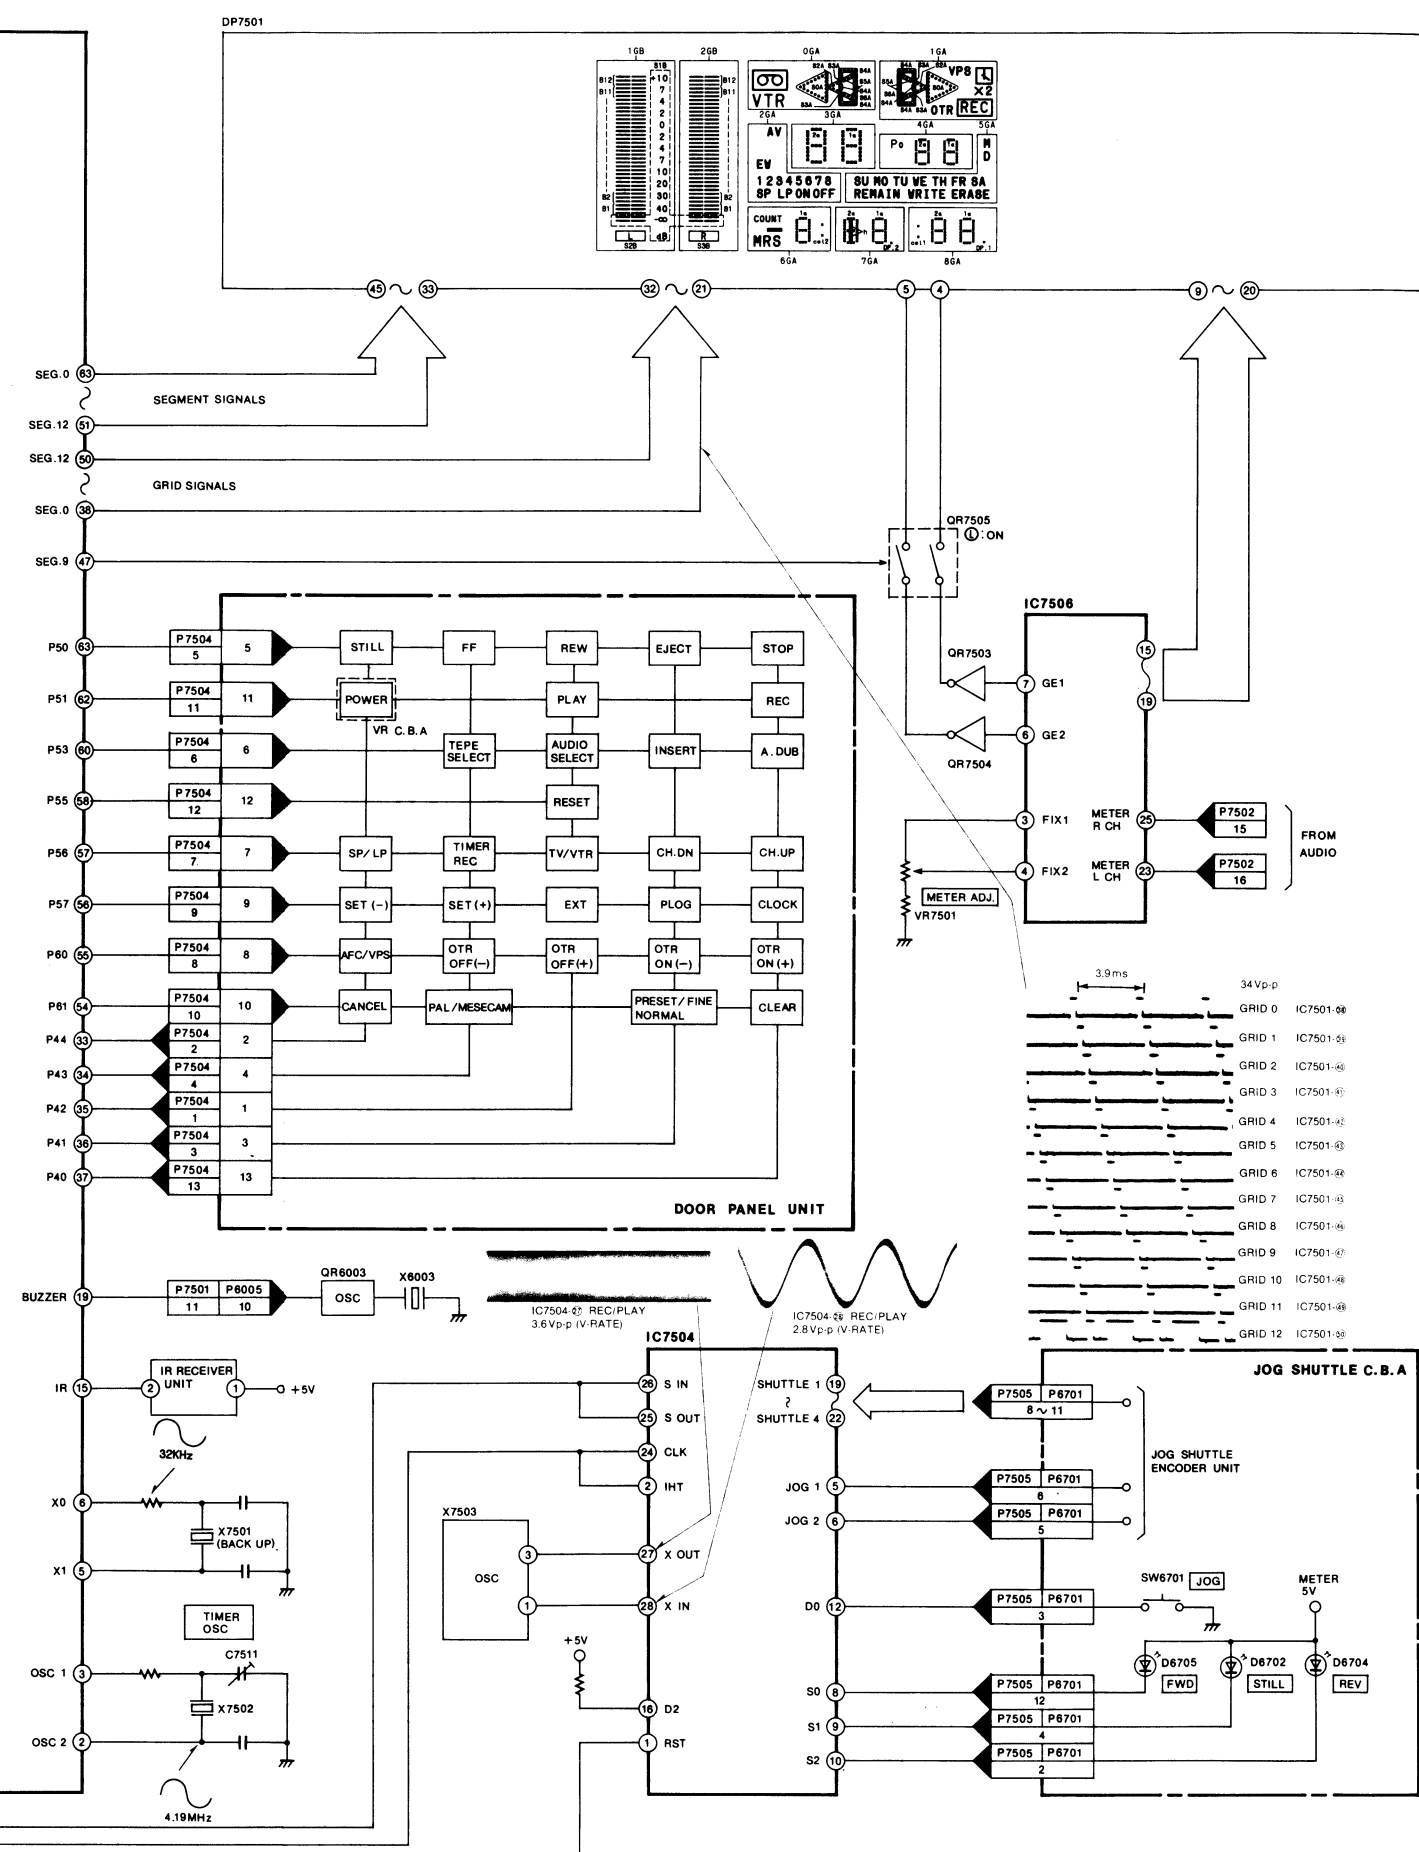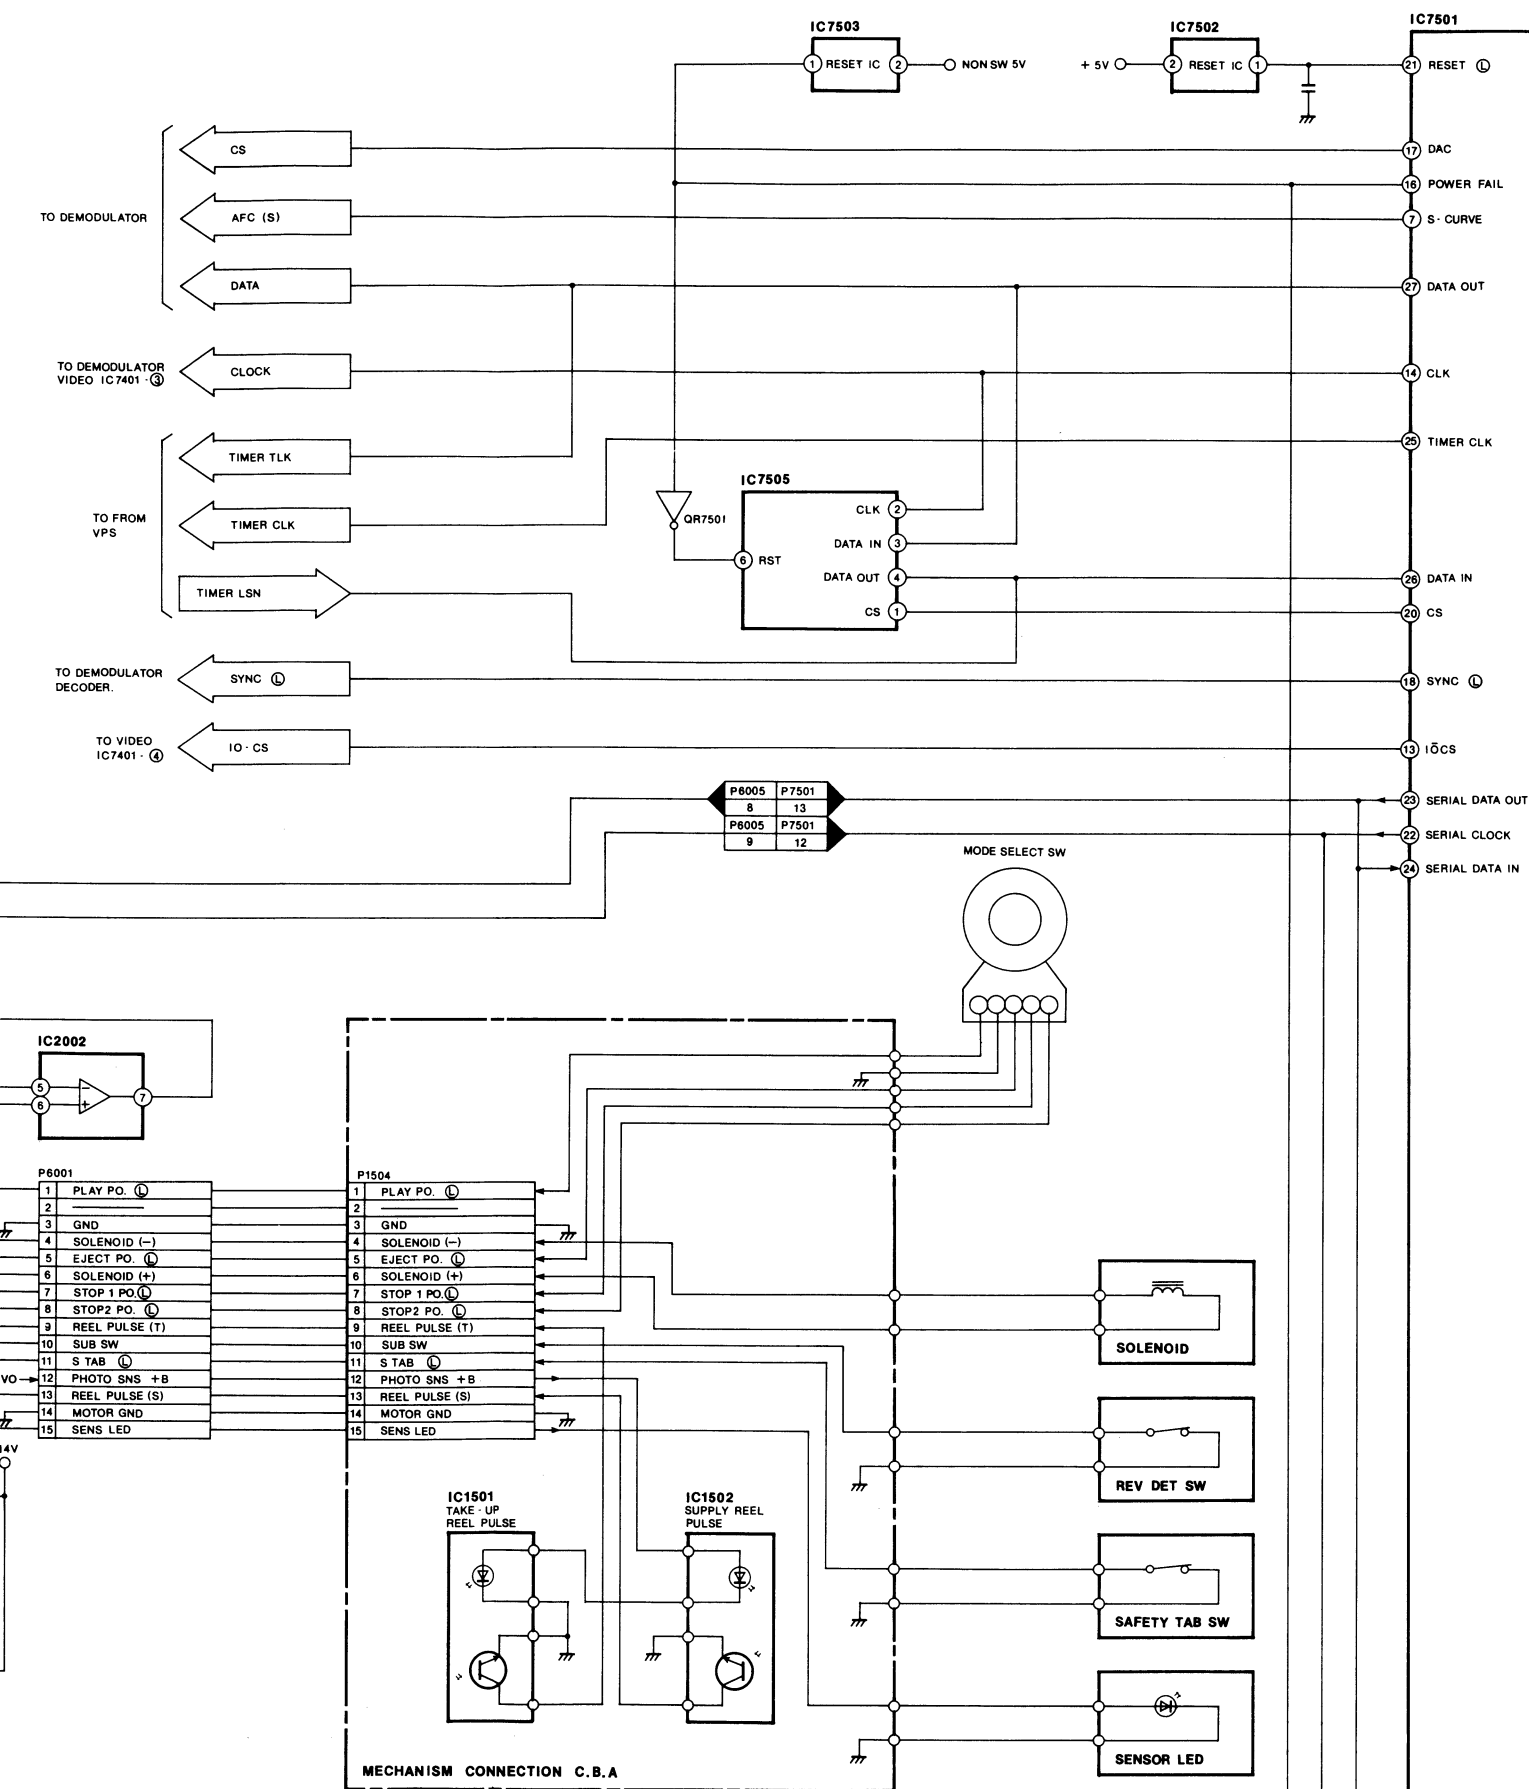


SECTION 4

SCHEMATIC DIAGRAM


4-1. SYSTEM CONTROL & SERVO SECTION IN MAIN SCHEMATIC DIAGRAM

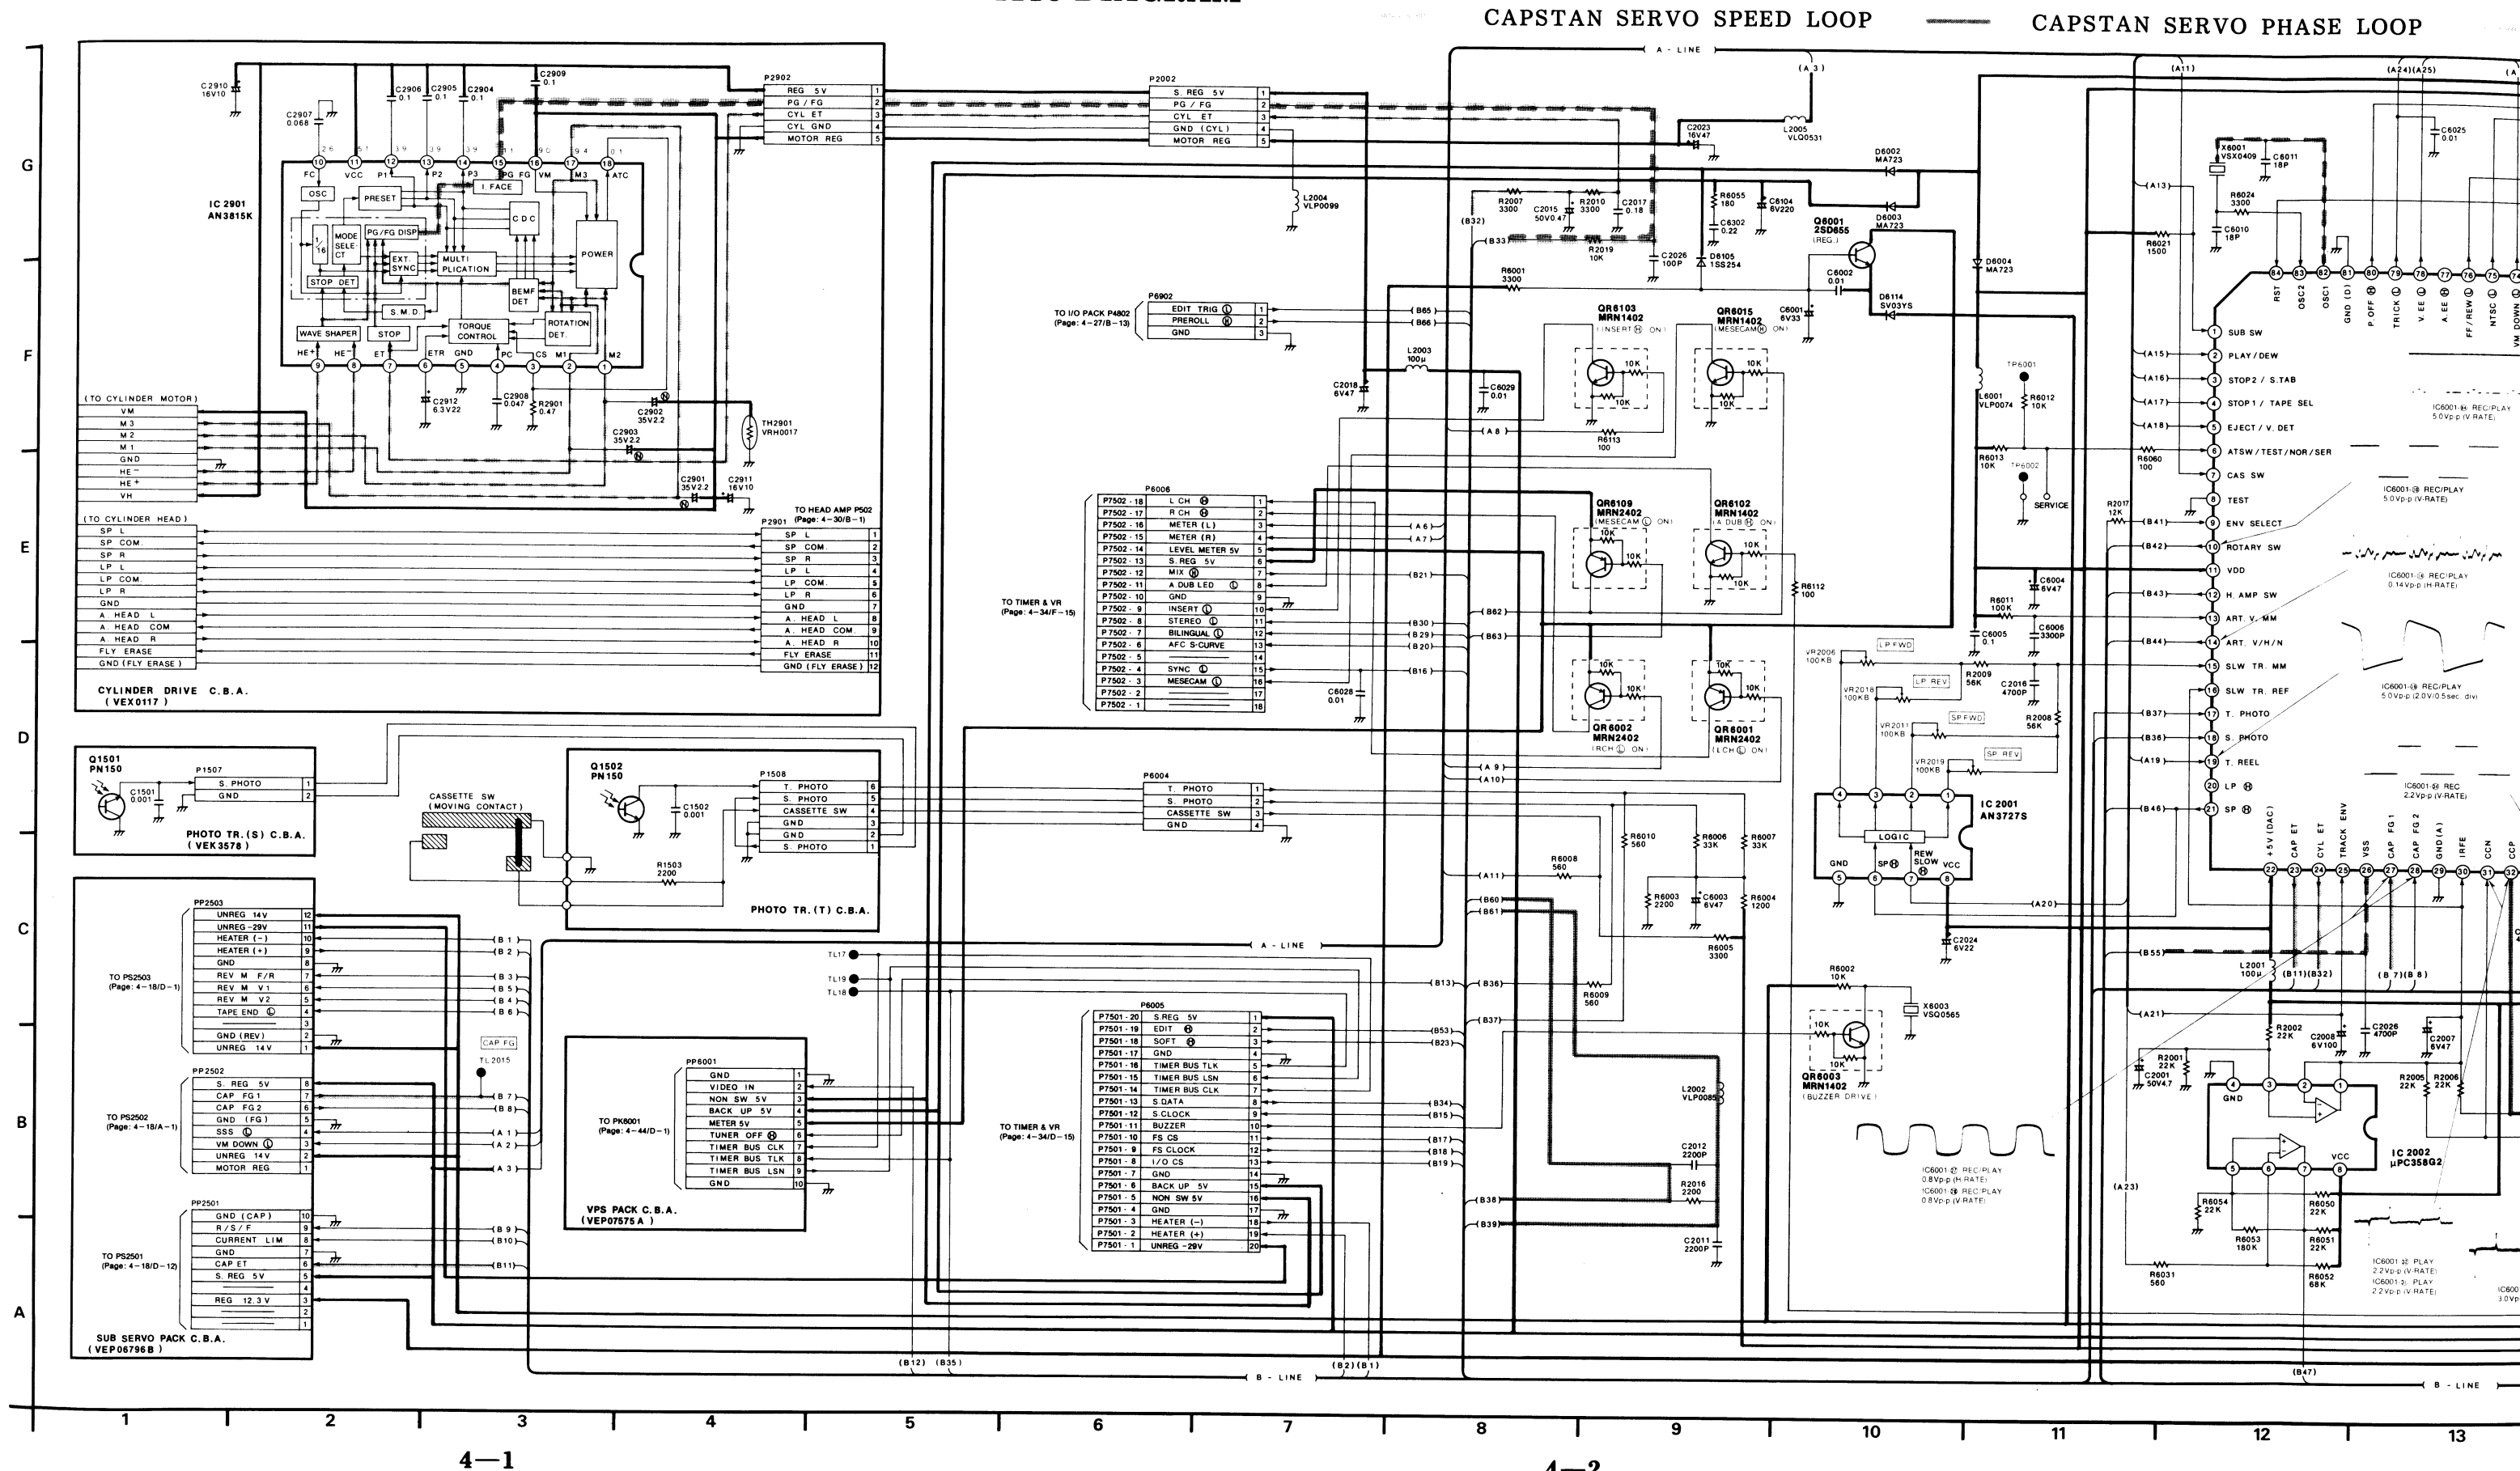

CYLINDER SERVO PHASE LOOP



--- CYLINDER SERVO PHASE LOOP

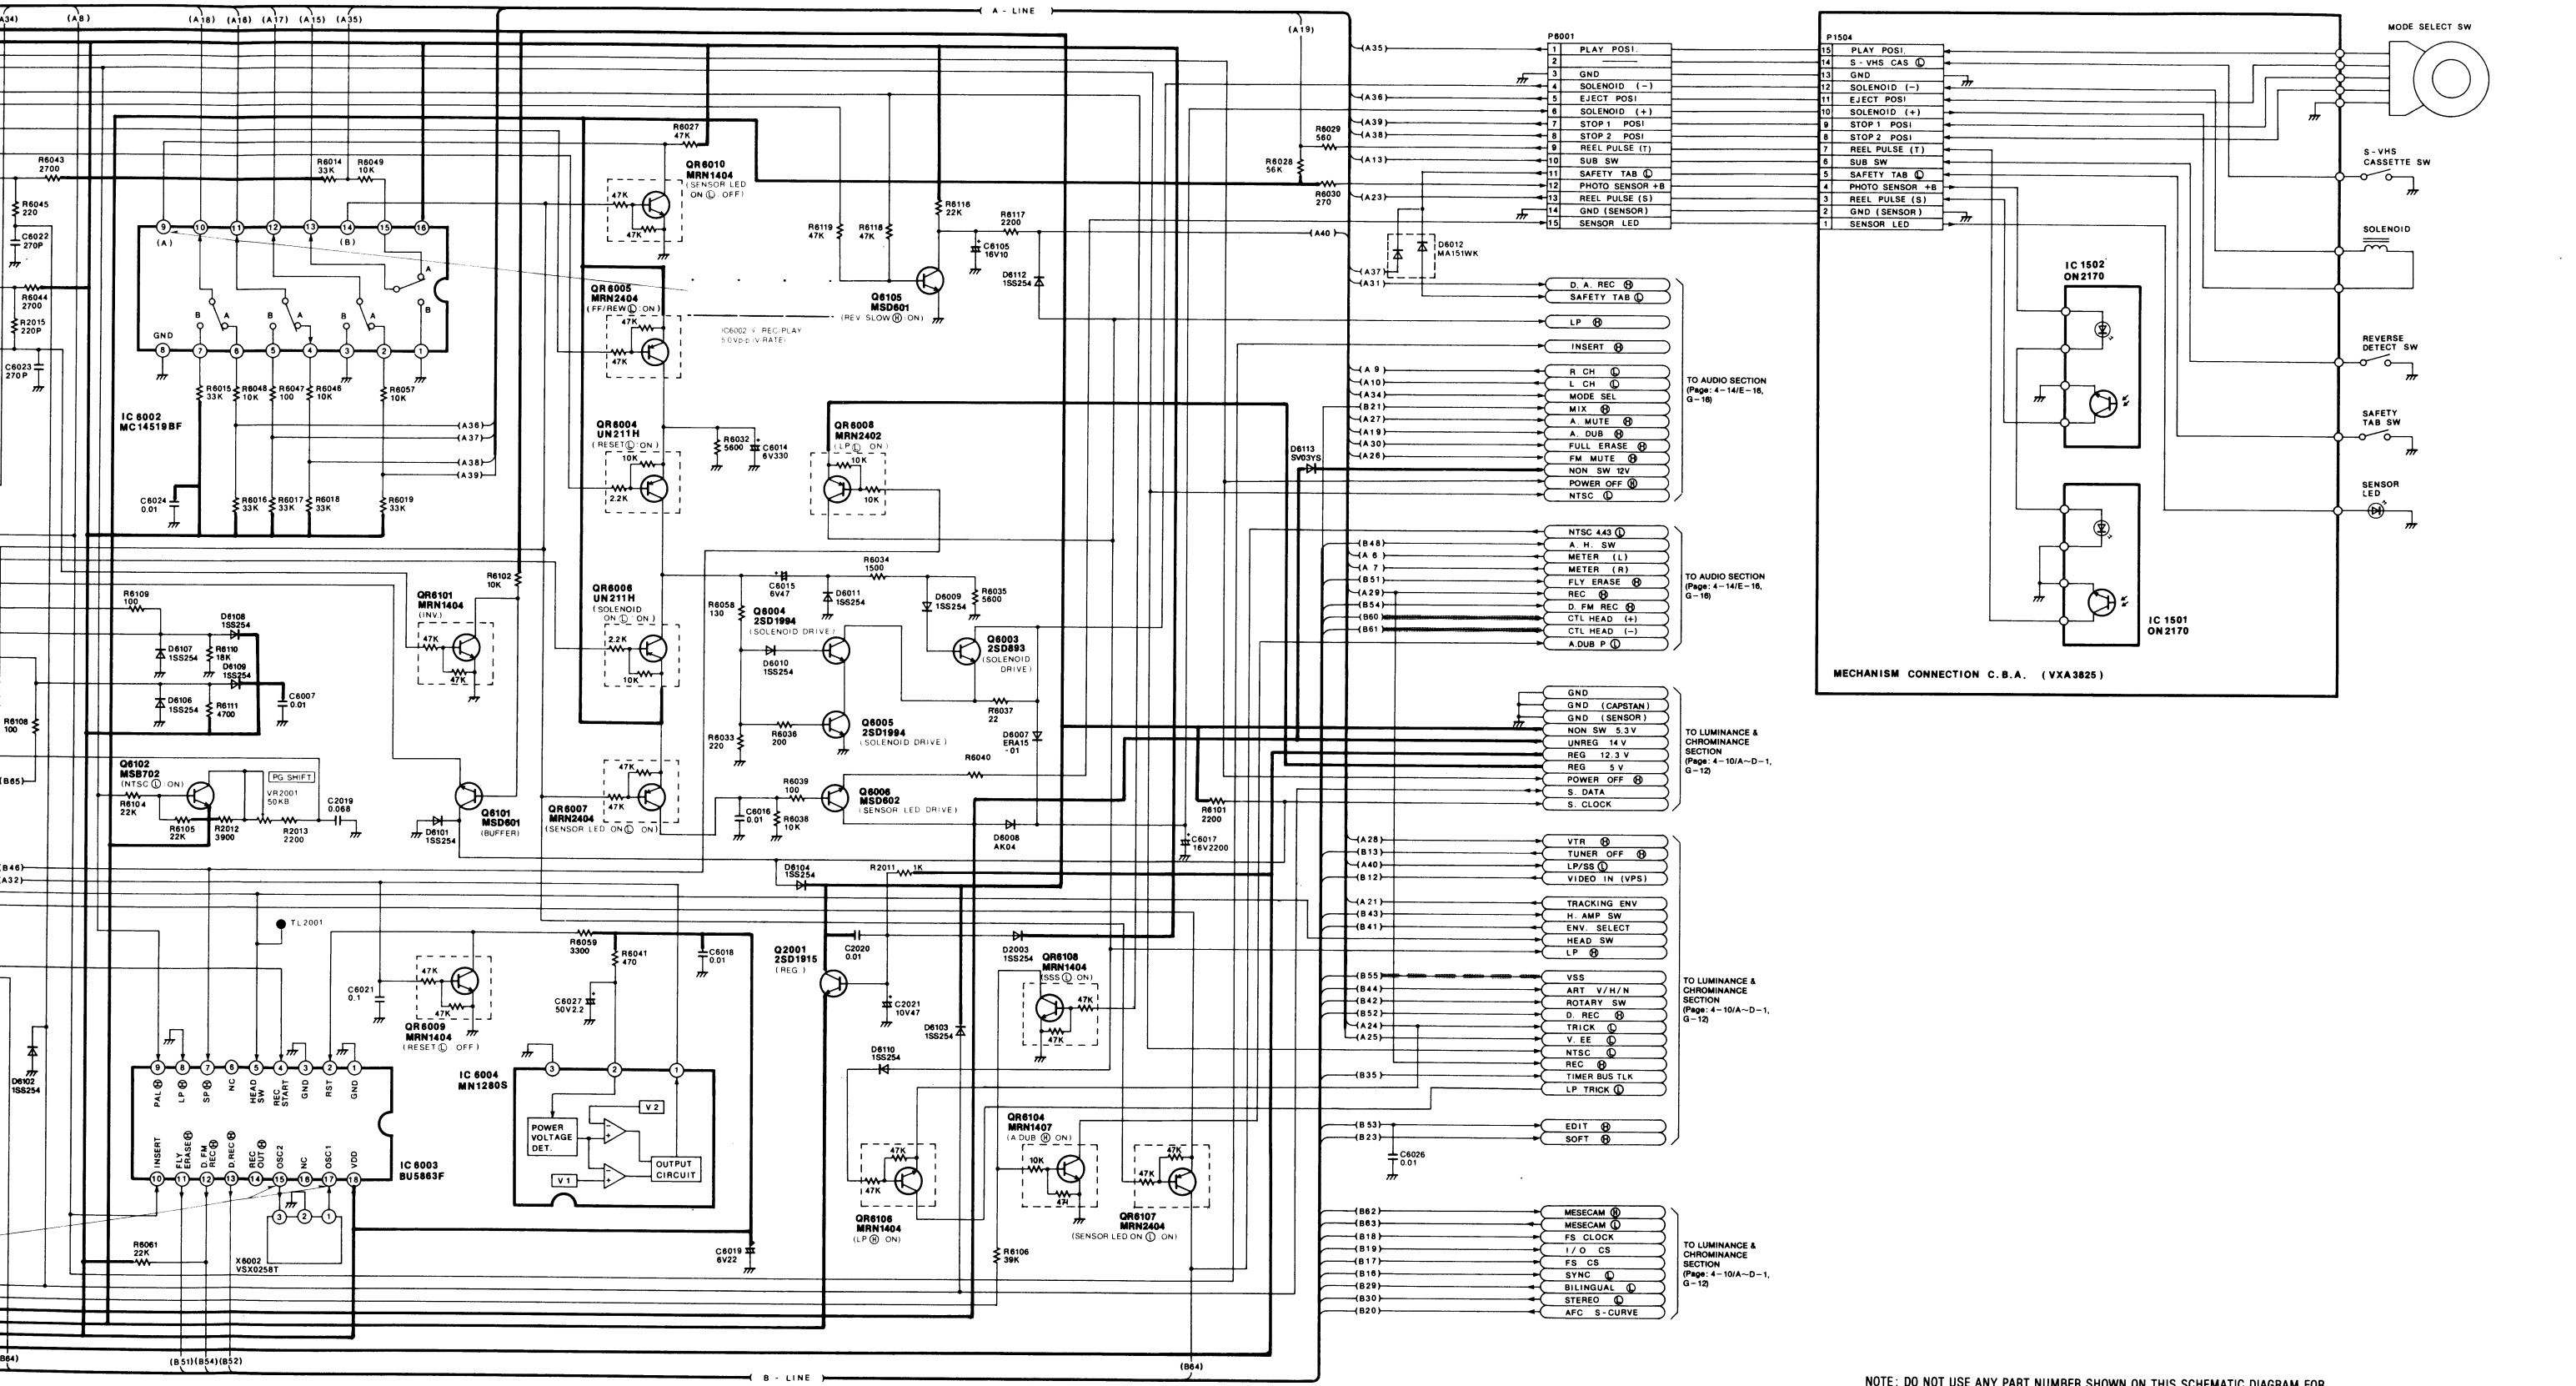

NOTE: DO NOT USE ANY PART NUMBER SHOWN ON THIS SCHEMATIC DIAGRAM FOR ORDERING. WHEN YOU ORDER A PART, PLEASE REFER TO PARTS LIST.


SYSTEM CONTROL & SERVO ICs DC VOLTAGE CHART (SP MODE)

REF. NO.	IC2001										IC2002									
MODE	1	2	3	4	5	6	7	8			1	2	3	4	5	6	7	8		
STOP 1	2.6	5.0	0	0	0	5.7	0	5.1			2.5	2.5	2.5	0	2.4	4.6	0.7	5.0		
PLAY	2.6	5.0	0	0	0	5.1	0	5.1			2.5	2.5	2.5	0	2.5	4.6	4.0	5.0		
REC	2.6	5.0	0	0	0	5.0	0	5.1			2.5	2.5	2.5	0	2.5	4.6	3.9	5.0		
F.F.	2.6	5.0	0	0	0	5.1	0	5.1			2.5	2.5	2.5	0	2.5	2.1	2.6	5.0		
REW	2.6	5.0	0	0	0	5.1	0	5.1			2.5	2.5	2.5	0	2.5	2.1	2.6	5.0		
REF. NO.	IC2901																			
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18		
STOP 1	13.4	13.4	0.1	1.1	0	2.5	2.4	2.6	2.5	2.6	5.0	3.7	3.7	3.7	1.1	13.6	13.4	0.1		
PLAY	13.2	13.2	0.1	1.1	0	2.5	2.4	2.6	2.5	2.6	5.0	3.7	3.7	3.7	1.1	13.5	13.2	0.1		
REC	13.2	13.2	0.1	1.1	0	2.5	2.4	2.6	2.5	2.6	4.9	3.7	3.6	3.6	1.1	13.5	13.2	0.1		
F.F.	13.6	13.6	0	0.1	0	2.5	4.3	2.6	2.4	1.3	5.0	4.2	4.2	3.8	5.0	13.6	13.6	0		
REW	13.6	13.6	0	0.1	0	2.5	4.3	2.6	2.4	1.2	5.0	4.2	4.2	3.8	5.0	13.6	13.6	0		
REF. NO.	IC6001																			
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
STOP 1	0	0	0.3	0.3	5.1	0	2.0	0	0	3.1	5.1	0	0	0	0	2.5	3.3	3.3	0.3	0
PLAY	0	0	0.3	0.3	5.1	5.0	2.0	0	4.0	3.1	5.1	0	0	0	0	2.5	3.3	3.3	4.6	0
REC	0	0	0.3	0.3	5.1	5.0	2.0	0	4.6	3.1	5.1	0	0	0	0	2.5	3.3	3.3	4.6	0
F.F.	0	0.5	0.5	0	5.1	5.1	2.0	0	0	5.1	5.1	0	0	0	0	2.5	3.3	3.3	2.2	0
REW	0	0.5	0.5	0	5.1	5.1	2.0	0	0	5.1	5.1	0	0	0	0	2.5	3.3	3.3	2.2	0
REF. NO.	IC6001																			
MODE	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
STOP 1	5.1	5.1	0.2	2.5	2.5	2.5	2.5	2.5	0	2.5	2.4	2.6	5.0	0	0	0	2.5	0	0	2.5
PLAY	5.1	5.1	2.6	2.4	0	2.5	2.5	2.5	0	2.5	2.4	2.6	5.0	0	0	0	2.5	0	0	2.8
REC	0	5.1	0	2.4	0	2.5	2.5	2.5	0	2.5	2.4	2.6	0	2.4	2.8	0	2.5	0	0	2.5
F.F.	5.1	5.1	2.6	4.3	0	2.5	2.5	2.5	0	2.5	2.4	2.6	5.0	0	0	0	2.5	0	0	2.9
REW	5.1	5.1	2.6	4.3	0.7	2.5	2.5	2.5	0	2.5	2.4	2.6	5.0	0	0	0	2.5	2.5	0	2.9
REF. NO.	IC6001																			
MODE	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60
STOP 1	2.6	5.0	1.1	3.0	0	4.8	5.0	5.1	0	0.7	4.0	5.1	0	0	5.1	5.1	0	0	0	3.1
PLAY	2.6	5.0	1.1	3.0	2.8	4.8	5.0	5.1	0	4.0	4.0	5.1	0	0	5.1	5.1	0	0	0	3.1
REC	2.5	5.0	1.1	2.9	0	4.7	5.0	5.0	0	3.9	4.0	5.1	0	0	5.0	5.0	0	0	0	0
F.F.	2.5	5.0	5.0	0.1	0	4.7	5.0	5.1	0	2.5	4.0	5.1	0	0	5.1	5.1	0	0	0	0
REW	2.5	5.0	5.0	0.1	0	4.7	5.0	5.1	0	2.5	0	5.1	0	0	5.1	5.1	0	0	0	0
REF. NO.	IC6001																			
MODE	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80
STOP 1	5.0	2.1	4.2	4.2	0	0	0	0	0	5.0	0	0	0	5.0	5.0	5.0	5.1	0.1	5.1	0
PLAY	5.0	0	4.3	4.2	0	0	0	0	0	5.0	0	0	5.0	0	5.0	5.0	0	5.1	5.1	0
REC	5.0	0	4.3	4.2	0	5.0	5.0	5.0	5.0	5.0	0	0	5.0	0	5.0	5.0	5.0	0.1	5.0	0
F.F.	5.0	0	4.2	4.2	0	0	0	0	0	5.0	0	0	5.0	5.0	5.0	0	0	0	5.1	0
REW	5.0	5.1	4.2	4.2	0	0	0	0	0	5.0	0	0	5.0	5.0	5.0	0	5.1	0.1	5.0	0
REF. NO.	IC6001																			
MODE	81	82	83	84																
STOP 1	0	—	—	4.3																
PLAY	0	—	—	4.3																
REC	0	—	—	4.3																
F.F.	0	—	—	4.9																
REW	0	—	—	4.9																
REF. NO.	IC6002																			
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16				
STOP 1	0	5.0	0	5.0	0.5	5.0	5.1	0	0.3	5.1	0.3	0.3	0	4.8	0	5.1				
PLAY	0	5.0	0	5.0	0.5	5.0	5.1	0	0.3	5.1	0.3	0.3	0	5.0	0	5.1				
REC	0	5.0	0	5.0	0.5	5.0	5.0	0	0.3	5.1	0.3	0.3	0	5.0	0	5.1				
F.F.	0	0	0	5.0	0.5	5.0	5.1	0	0.5	5.1	0.5	0	0.5	4.5	5.0	5.1				
REW	0	0	0	5.0	0.5	5.0	5.1	0	0	5.1	0.5	0	0.5	4.5	5.0	5.1				
REF. NO.	IC6003																			
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18		
STOP 1	0	0	0	0	3.1	0	5.1	0	5.0	0	0	0.1	0.1	5.0	0	0	0.7	5.1		
PLAY	0	0.1	0	0	3.1	0	5.1	0	5.0	0	0	0.1	0.1	5.0	2.1	0	0.8	5.1		
REC	0	0	0	5.0	3.1	0	5.1	0	5.0	0	0	3.8	5.0	0	0	0	1.0	5.1		
F.F.	0	0	0	0	0	0	5.1	0	5.0	0	0	0.1	0.1	5.0	2.1	0	0.8	5.1		
REW	0	0	0	0	0	0	5.1	0	5.0	0	0	0.1	0.1	5.0	2.1	0	0.8	5.1		
REF. NO.	IC6004																			
MODE	1	2	3																	
STOP 1	4.3	4.9	0																	
PLAY	4.3	4.9	0																	
REC	4.3	4.9	0																	
F.F.	4.9	5.0	0																	
REW	4.9	5.0	0																	

SYSTEM CONTROL & SERVO TRANSISTORS DC VOLTAGE CHART (SP MODE)


REF. NO.	Q2001			Q6001			Q6003			Q6004			Q6005			Q6006		
MODE	E	C	B	E	C	B	E	C	B	E	C	B	E	C	B	E	C	B
STOP 1	5.1	5.4	5.8	5.1	11.4	5.7	13.7	13.7	5.0	0.8	13.7	0.9	0	0.8	0	0.4	13.7	0.3
PLAY	5.1	5.4	5.8	5.1	11.3	5.7	13.6	13.6	4.9	1.4	13.6	1.4	0	1.1	0	0.4	13.6	0.3
REC	5.1	5.4	5.8	5.1	11.3	5.7	13.5	13.5	4.8	0.9	13.5	1.0	0	0.8	0	0.4	13.5	0.3
F.F.	5.1	5.4	5.8	5.1	11.3	5.7	13.6	13.6	5.0	1.4	13.6	1.5	0	1.4	0	0.6	13.6	0.5
REW	5.1	5.4	5.8	5.1	11.3	5.7	13.6	13.6	5.0	1.4	13.6	1.4	0	1.3	0	0.6	13.6	0.5
REF. NO.	Q6101			Q6102			Q6105											
MODE	E	C	B	E	C	B	E	C	B									
STOP 1	4.0	5.2	0.4	5.0	4.8	5.0	0	5.0	0									
PLAY	4.0	5.2	0.4	5.1	4.8	5.0	0	0	0.6									
REC	4.0	5.2	0.4	5.1	4.7	5.0	0	0	0.6									
F.F.	4.0	5.2	0.4	5.1	4.3	5.0	0	0	0.6									
REW	4.0	5.2	0.4	5.1	4.3	5.0	0	0	0.6									
REF. NO.	QR2001			QR2002			QR6001			QR6002			QR6003			QR6004		
MODE	E	C	B	E	C	B	E	C	B	E	C	B	E	C	B	E	C	B
STOP 1	0	0	5.0	0	0	5.0	5.1	5.1	0	5.1	5.1	0	0	0	4.9	1.4	0	4.3
PLAY	0	0	5.0	0	0	5.0	5.1	5.1	0	5.1	5.1	0	0	0	4.9	1.5	0	4.3
REC	0	0	5.0	0	0	5.0	5.1	5.1	0	5.1	5.1	0	0	0	4.9	1.5	0	4.3
F.F.	0	0	0	0	0.8	0	5.1	5.1	0	5.1	5.1	0	0	0	4.9	5.0	0	4.9
REW	0	0	0	0	0.8	0	5.1	5.1	0	5.1	5.1	0	0	0	4.9	5.0	0	4.9
REF. NO.	QR6005			QR6006			QR6007			QR6008			QR6009			QR6010		
MODE	E	C	B	E	C	B	E	C	B	E	C	B	E	C	B	E	C	B
STOP 1	5.1	1.4	5.0	5.1	0	5.1	5.1	0.3	4.8	5.0	0	5.1	0	0.1	4.3	0	0.3	4.7
PLAY	5.1	1.5	5.0	5.1	0	5.1	5.1	0.3	4.8	5.0	0	5.1	0	0.1	4.3	0	0.3	4.8
REC	5.1	1.5	5.0	5.1	0	5.0	5.1	0.3	4.8	5.0	0	5.1	0	0.1	4.3	0	0.3	4.7
F.F.	5.1	5.0	0	5.1	0	5.1	5.1	0.6	4.6	5.0	0	5.1	0	0.1	4.9	0	0.5	4.7
REW	5.1	5.0	0	5.1	0	5.1	5.1	0.5	4.6	5.0	0	5.1	0	0.1	4.9	0	0.5	4.7
REF. NO.	QR6101			QR6102			QR6103			QR6104			QR6105			QR6106		
MODE	E	C	B	E	C	B	E	C	B	E	C	B	E	C	B	E	C	B
STOP 1	0	0.4	4.3	0	3.7	0	0	3.6	0	0	4.5	0	0	3.7	0.2	5.0	4.7	5.0
PLAY	0	0.4	4.3	0	3.6	0	0	3.6	0	0	4.4	0	0	3.6	0.2	5.1	4.7	5.0
REC	0	0.4	4.3	0	3.7	0	0	3.8	0	0	4.5	0	0	3.8	0.2	5.1	4.7	5.0
F.F.	0	0.4	4.3	0	3.8	0	0	3.9	0	0	4.6	0	0	4.0	0.2	5.1	4.7	5.0
REW	0	0.4	4.3	0	3.9	0	0	3.9	0	0	4.6	0	0	3.9	0.2	5.1	4.7	5.0
REF. NO.	QR6107			QR6108			QR6109											
MODE	E	C	B	E	C	B	E	C	B									
STOP 1	5.0	5.0	4.7	0	0	0	5.0	5.0	0.2	5.0								
PLAY	5.0	5.0	4.7	0	0	0	5.0	5.1	0.2	5.0								
REC	5.0	5.0	4.7	0	0	0	5.0	5.0	0.2	5.0								
F.F.	5.0	5.0	4.7	0	0	0	5.0	5.0	0.2	5.0								
REW	5.0	5.0	4.7	0	0	0	5.0	5.1	0.2	5.0								

4-2. POWER SCHEMATIC DIAGRAM

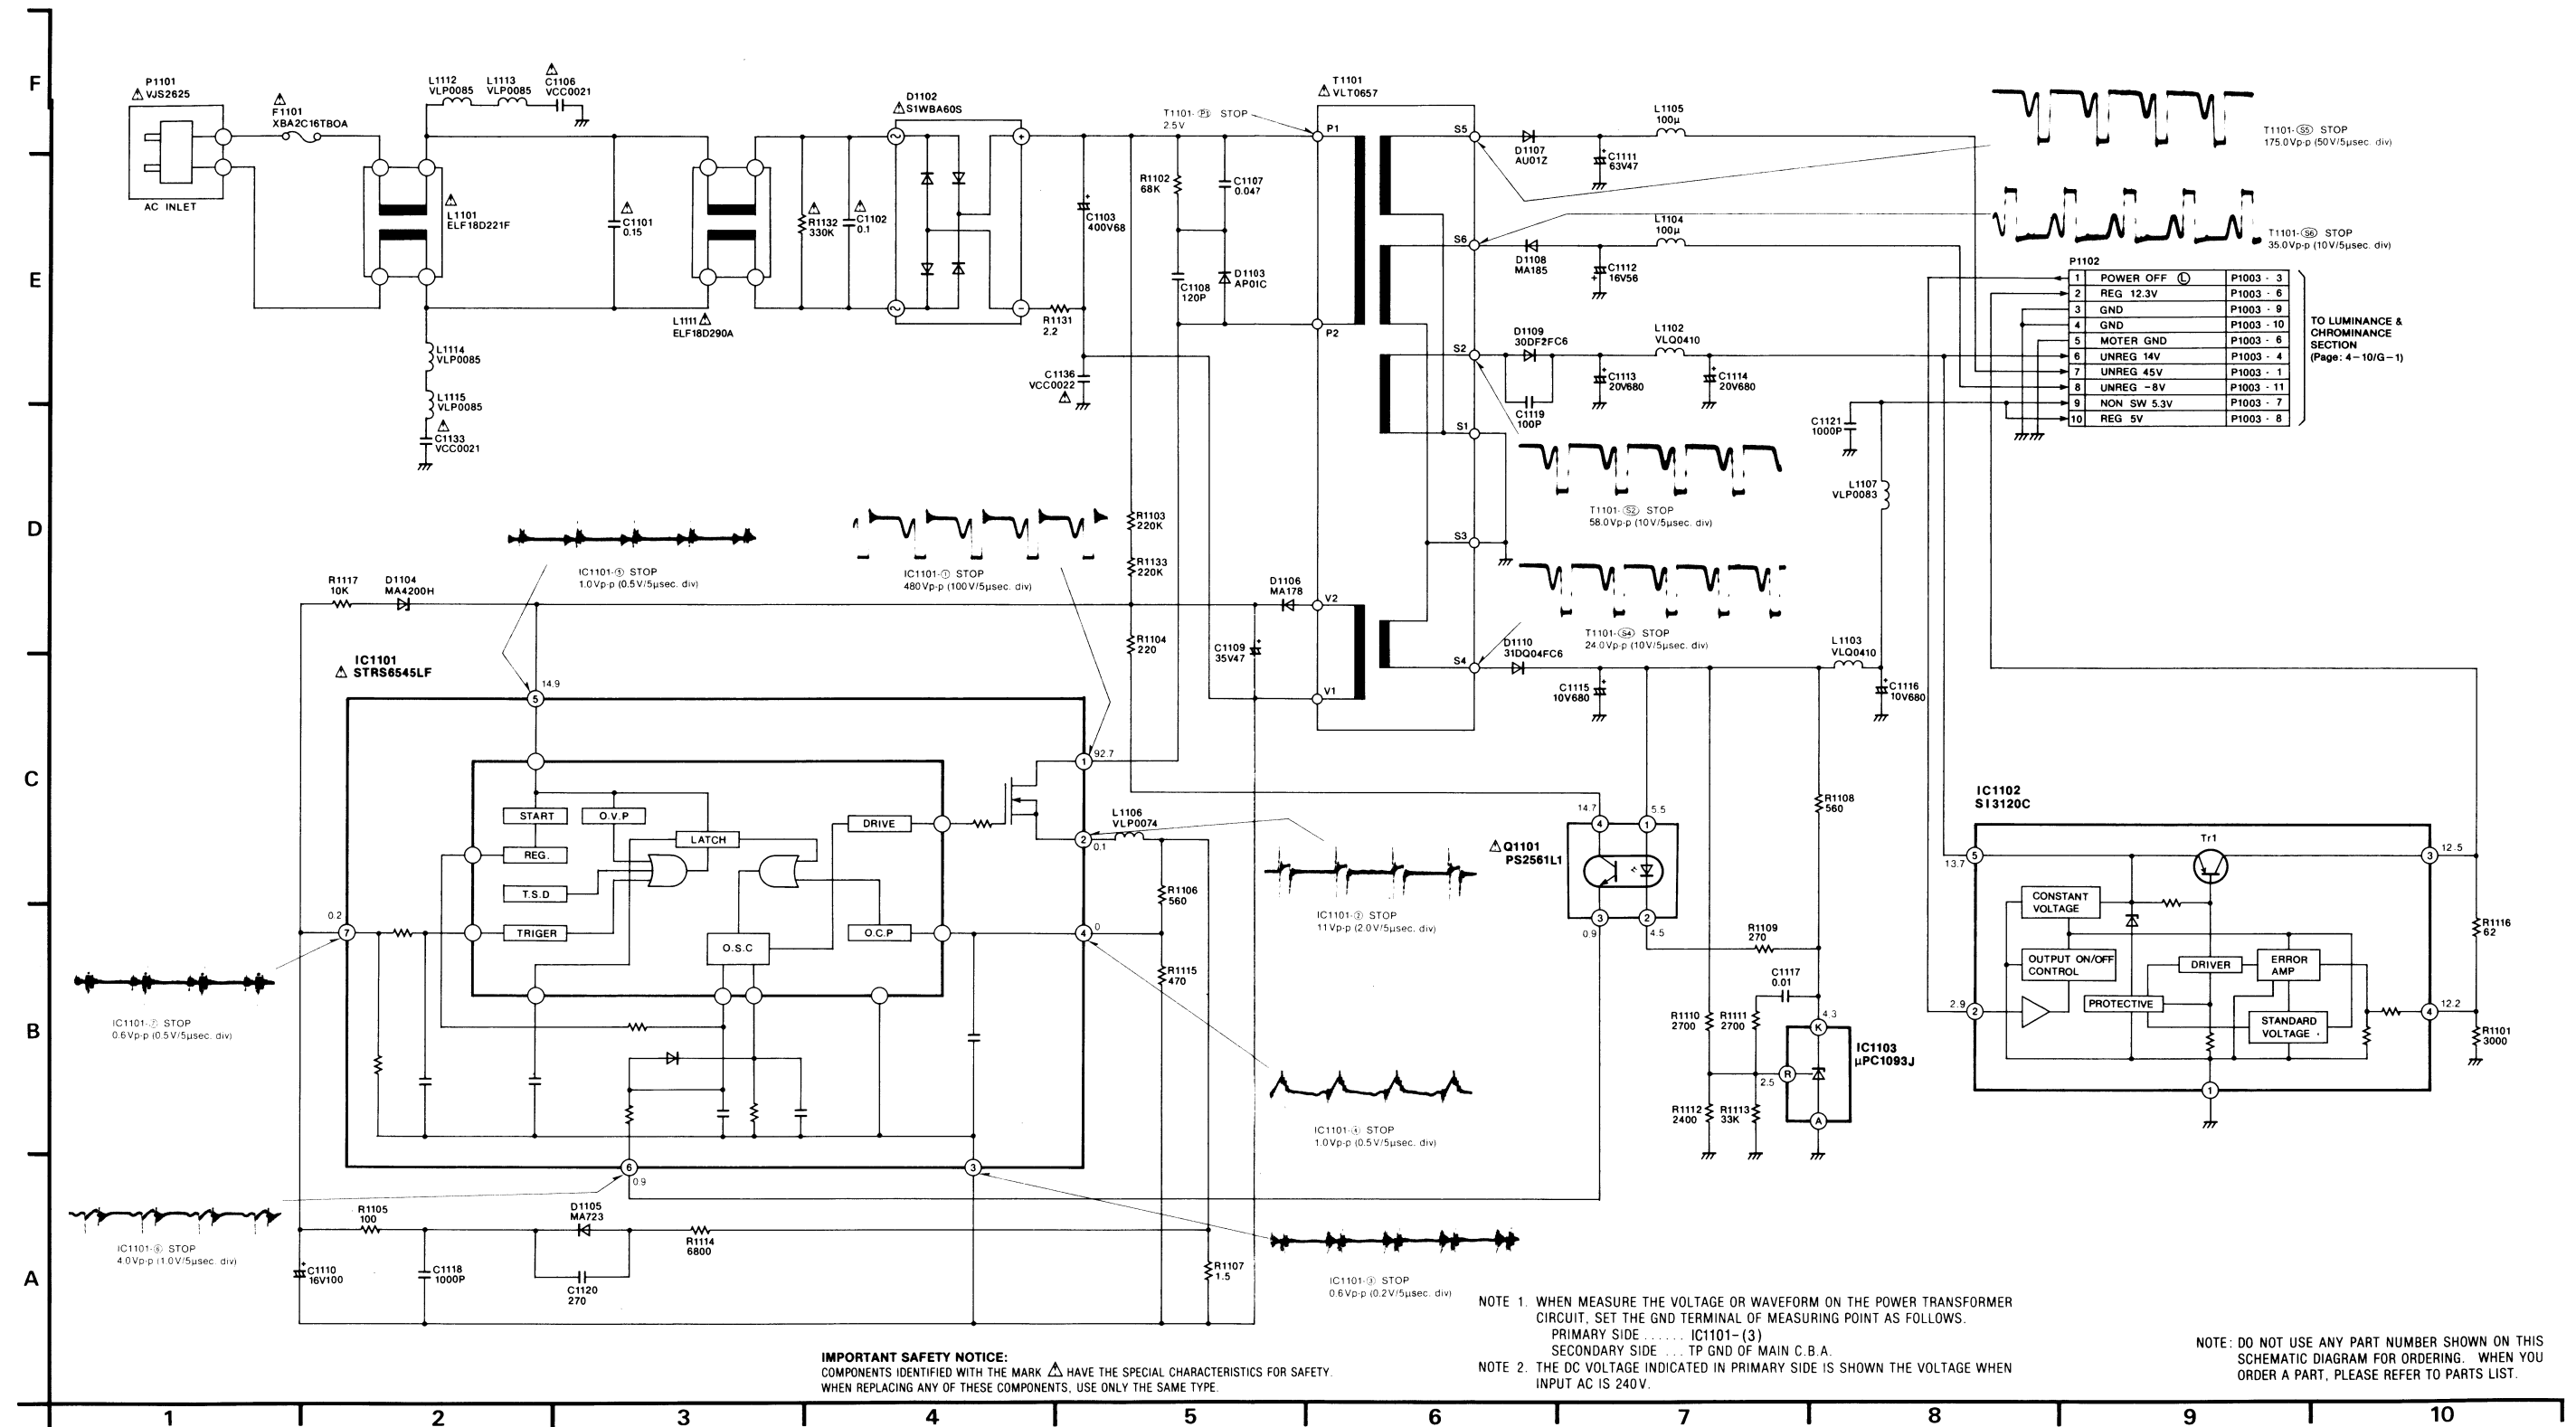


4-3. LUMINANCE & CHROMINANCE SECTION IN MAIN SCHEMATIC DIAGRAM

VIDEO MAIN SIGNAL PATH IN REC
VIDEO MAIN SIGNAL PATH IN PLAY

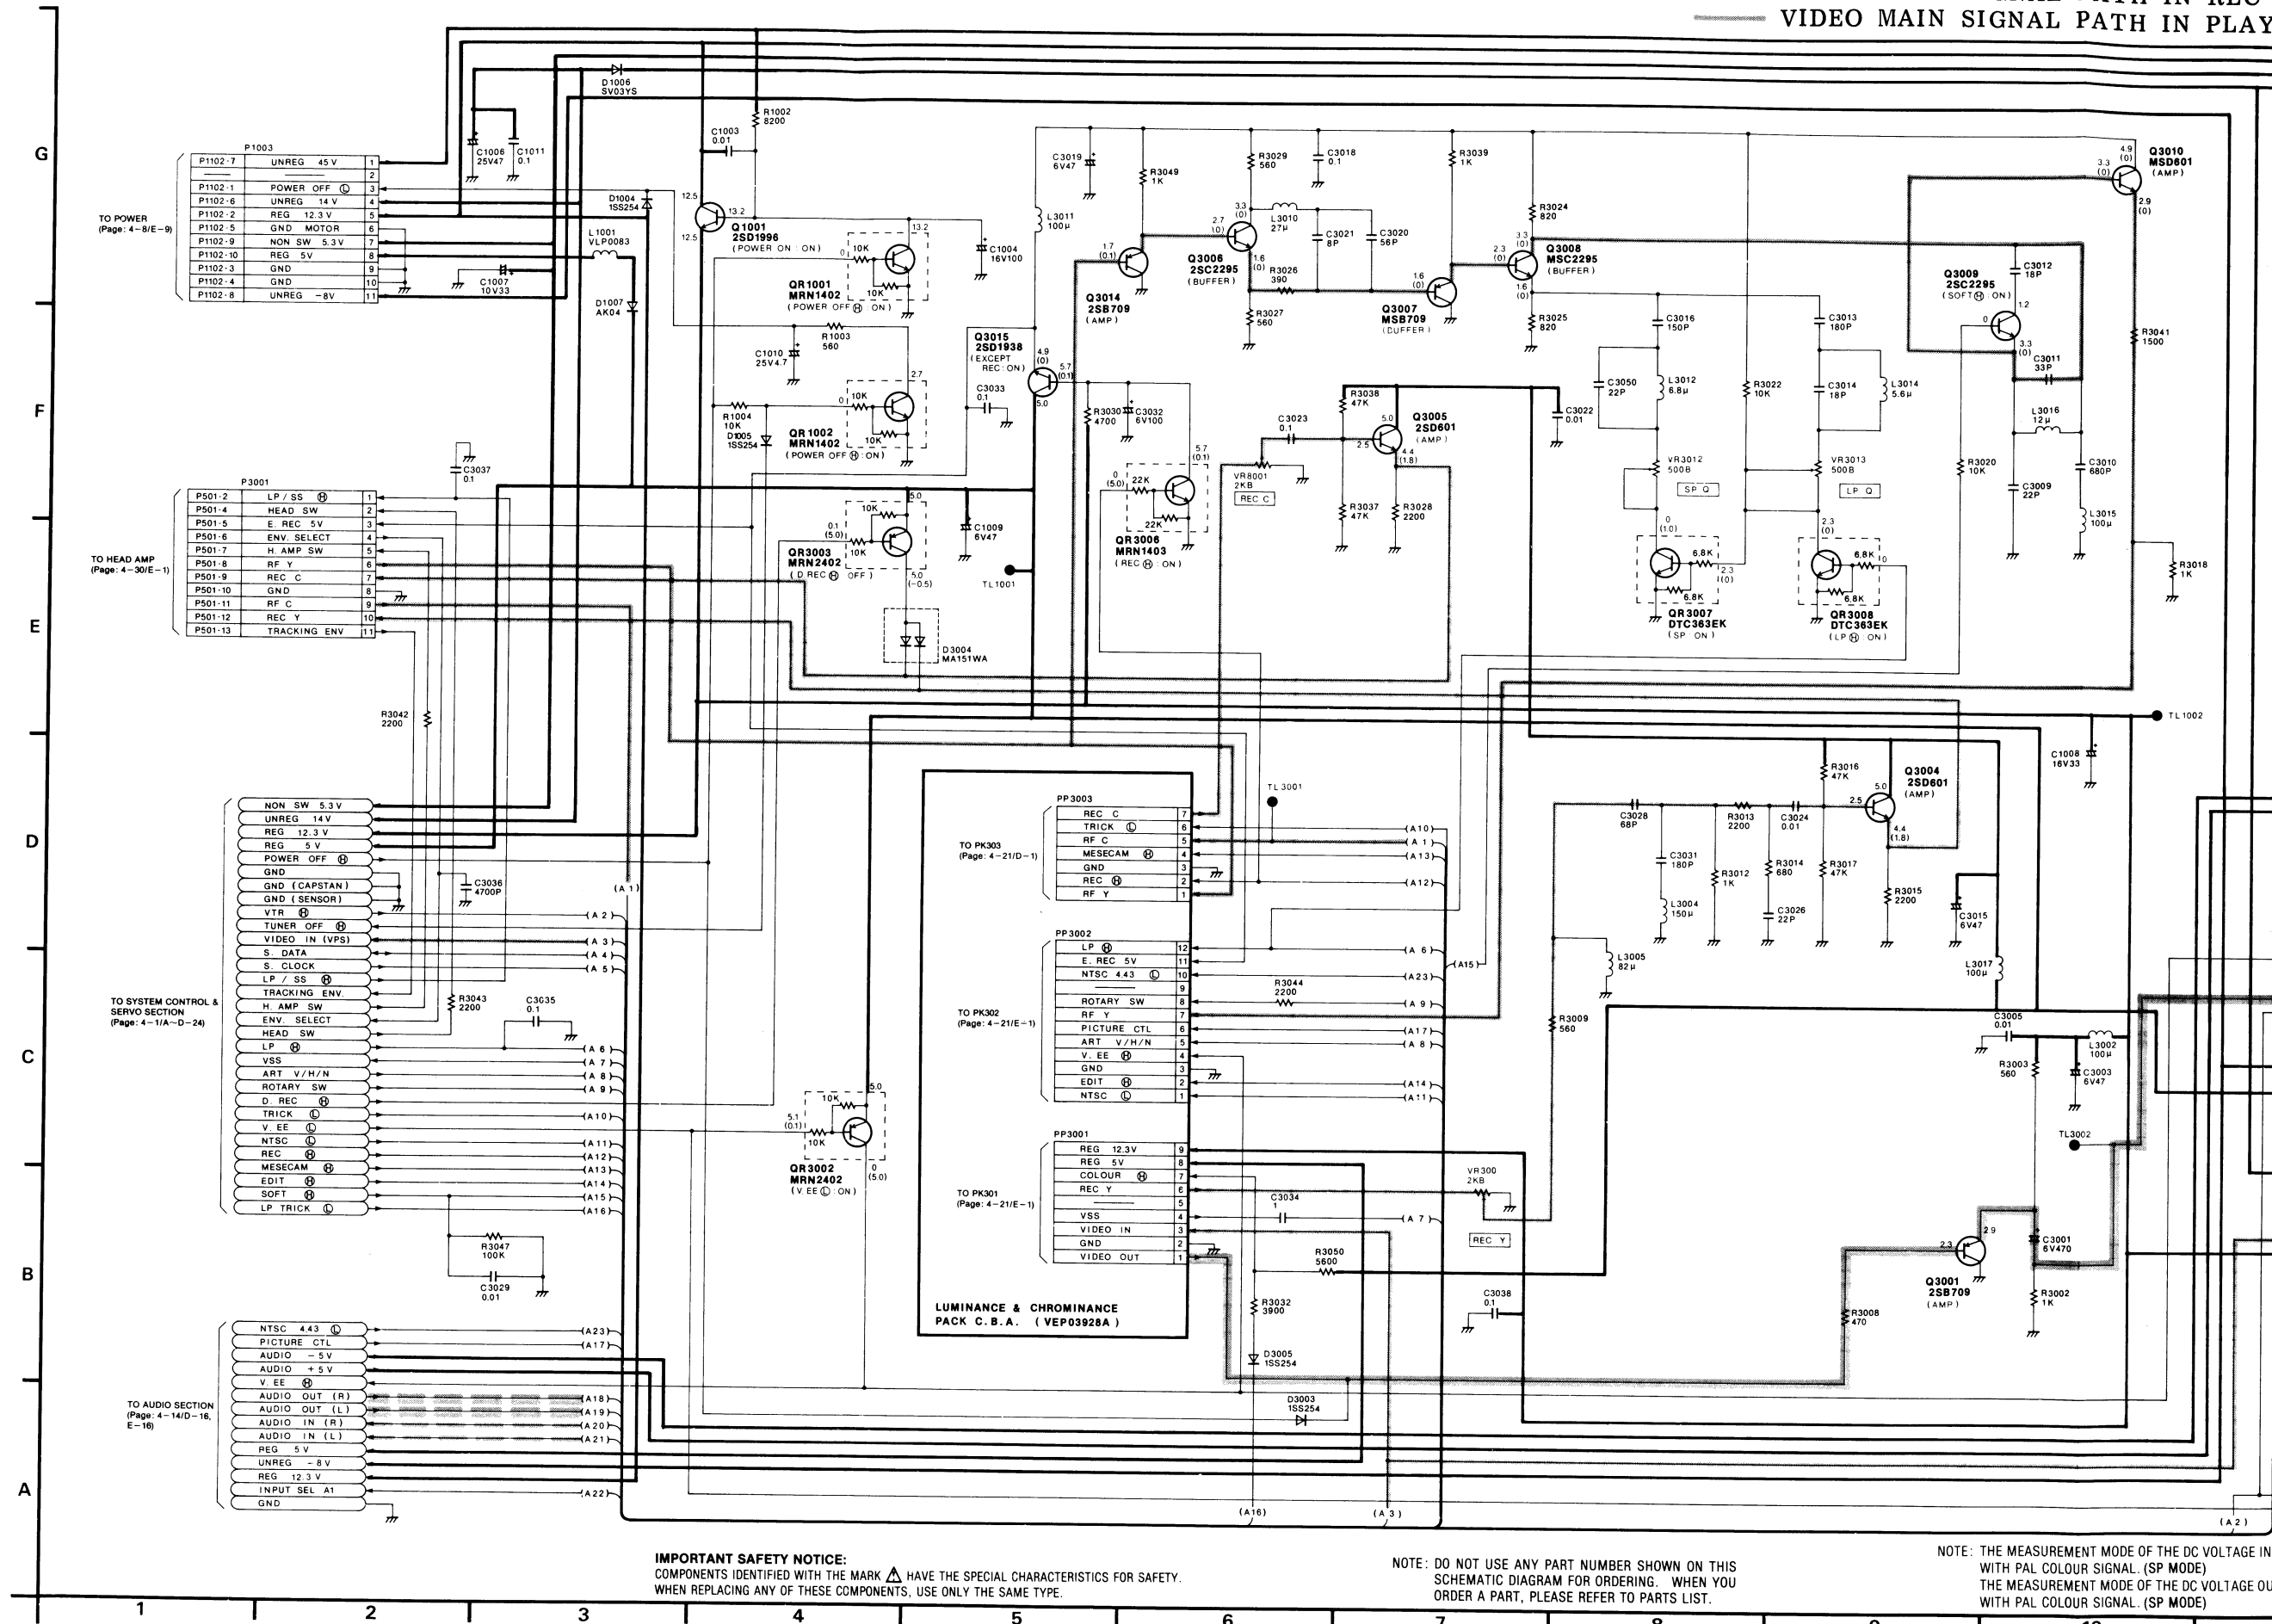


VIDEO MAIN SIGNAL PATH IN REC MODE
VIDEO MAIN SIGNAL PATH IN PLAYBACK MODE

AUDIO MAIN SIGNAL PATH IN REC MODE
AUDIO MAIN SIGNAL PATH IN PLAYBACK MODE

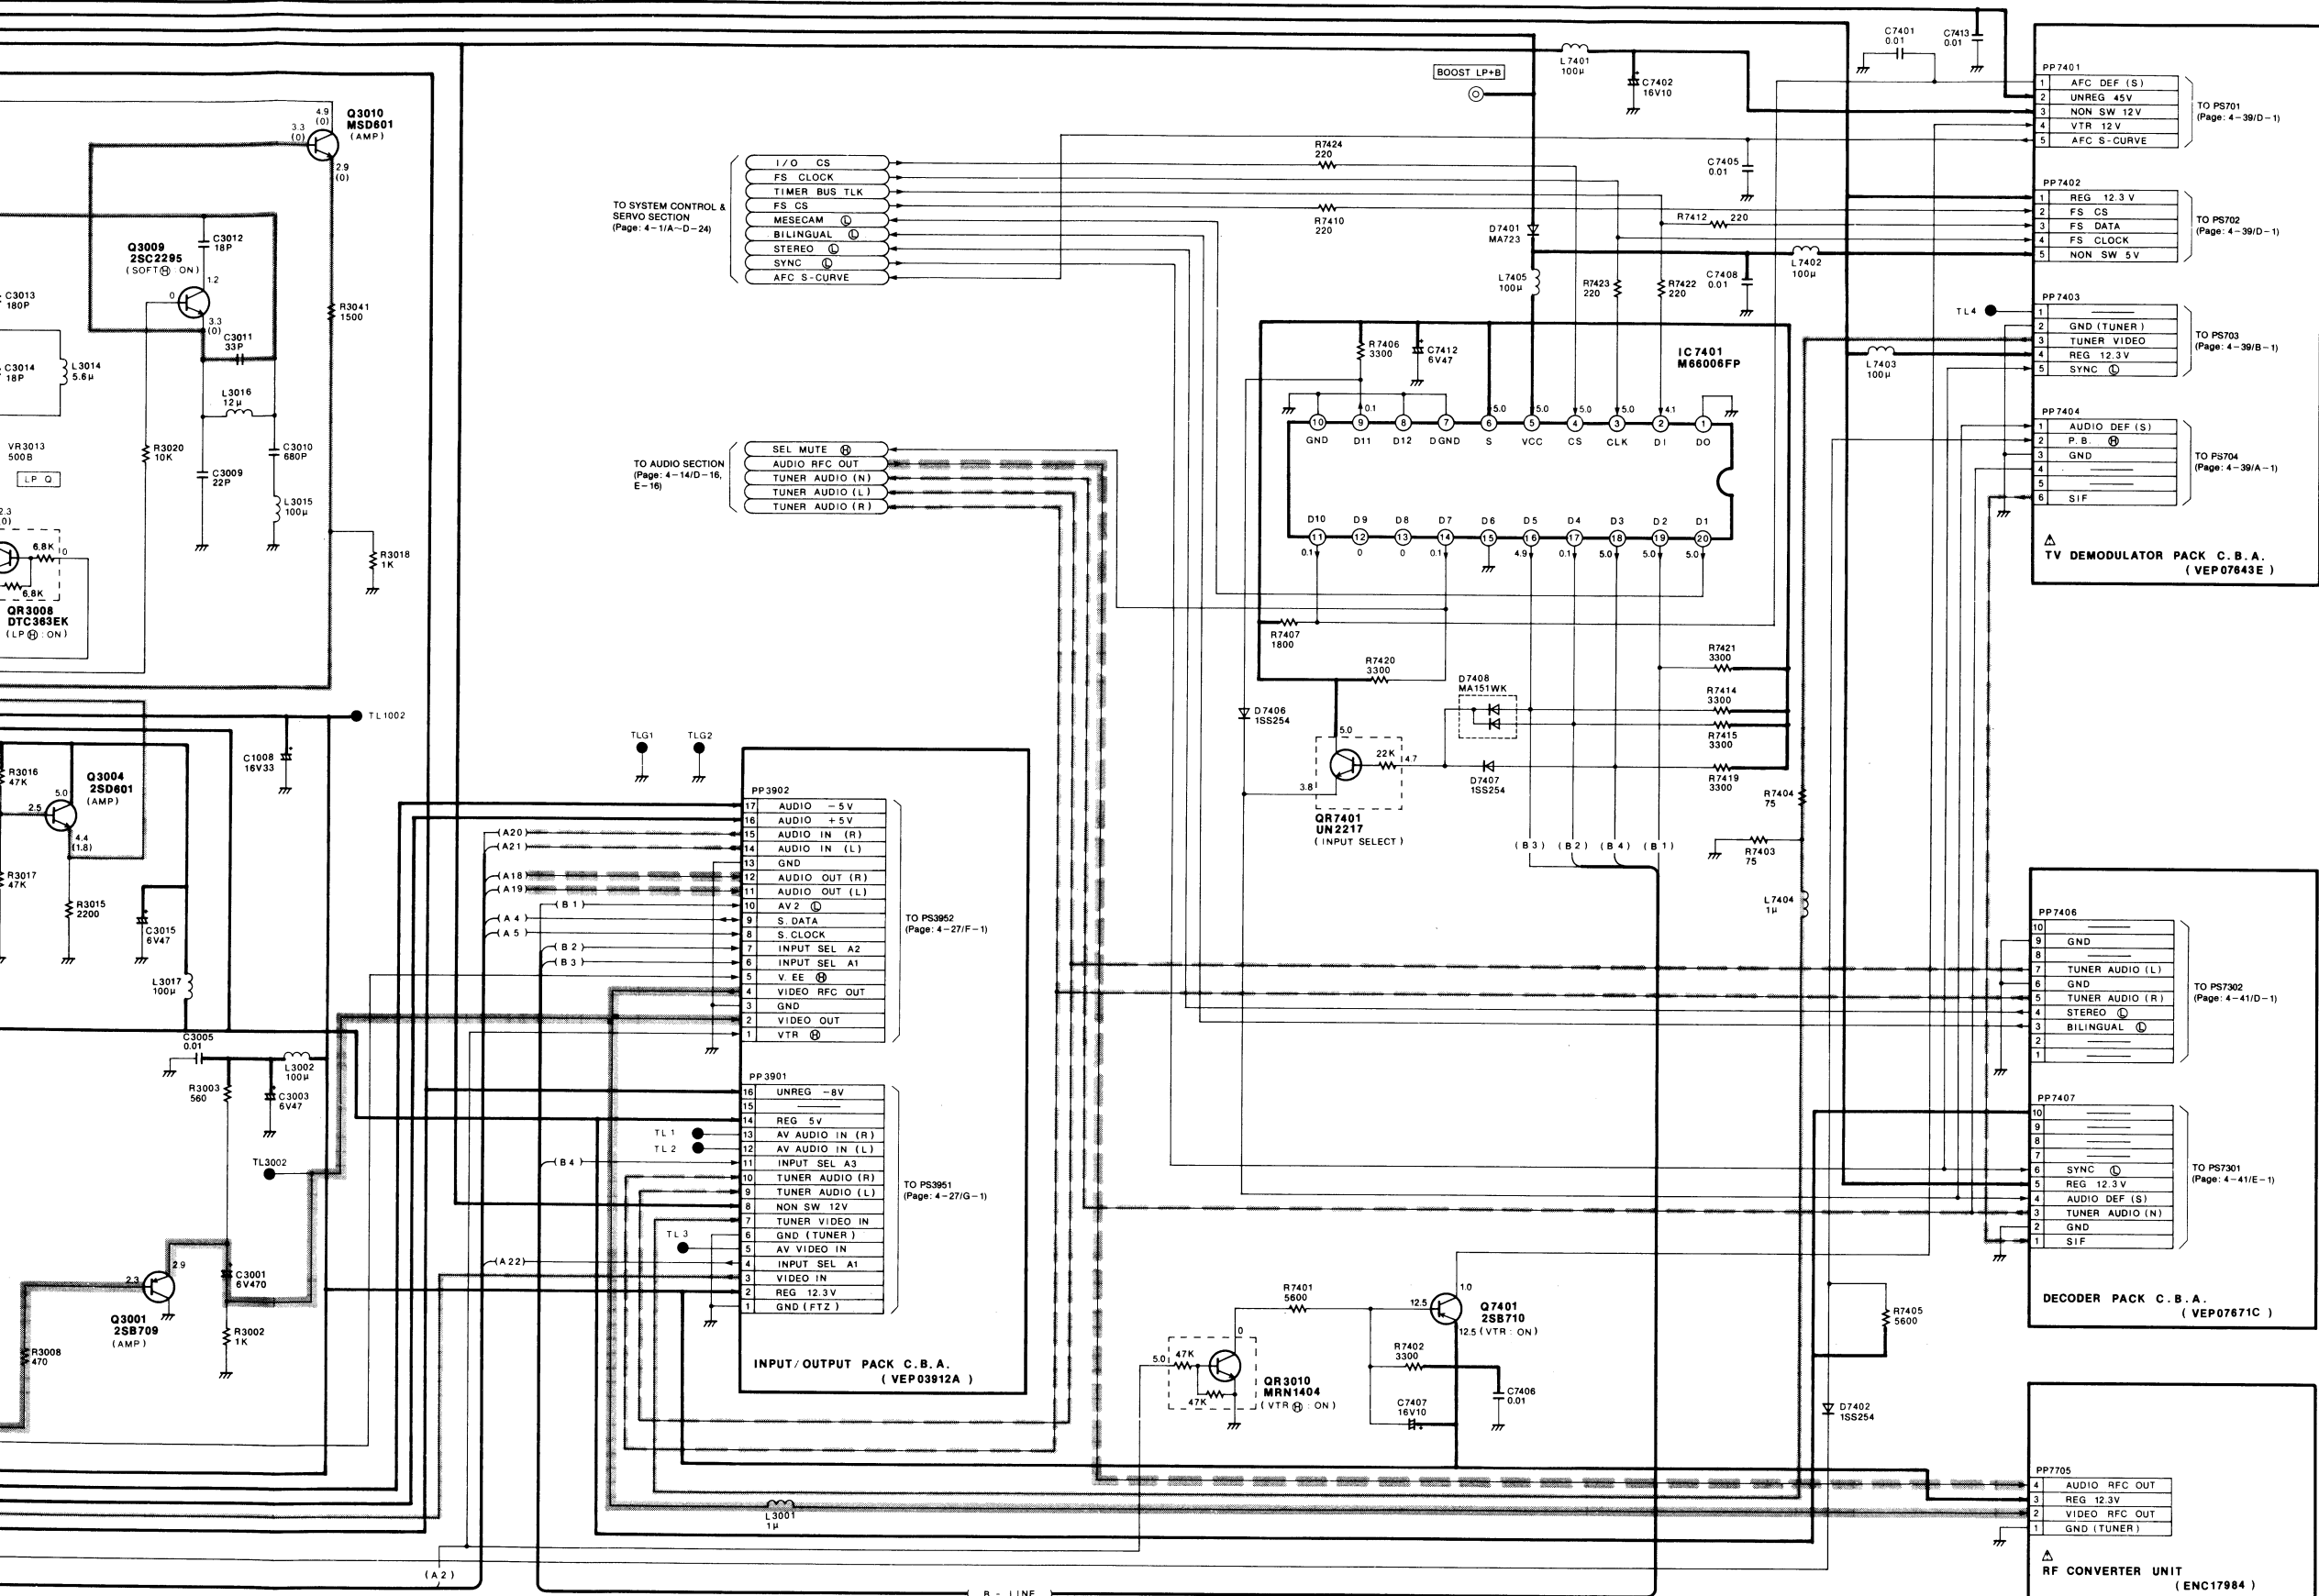



4-4. AUDIO SECTION IN MAIN SCHEMATIC DIAGRAM

MAIN SIGNAL

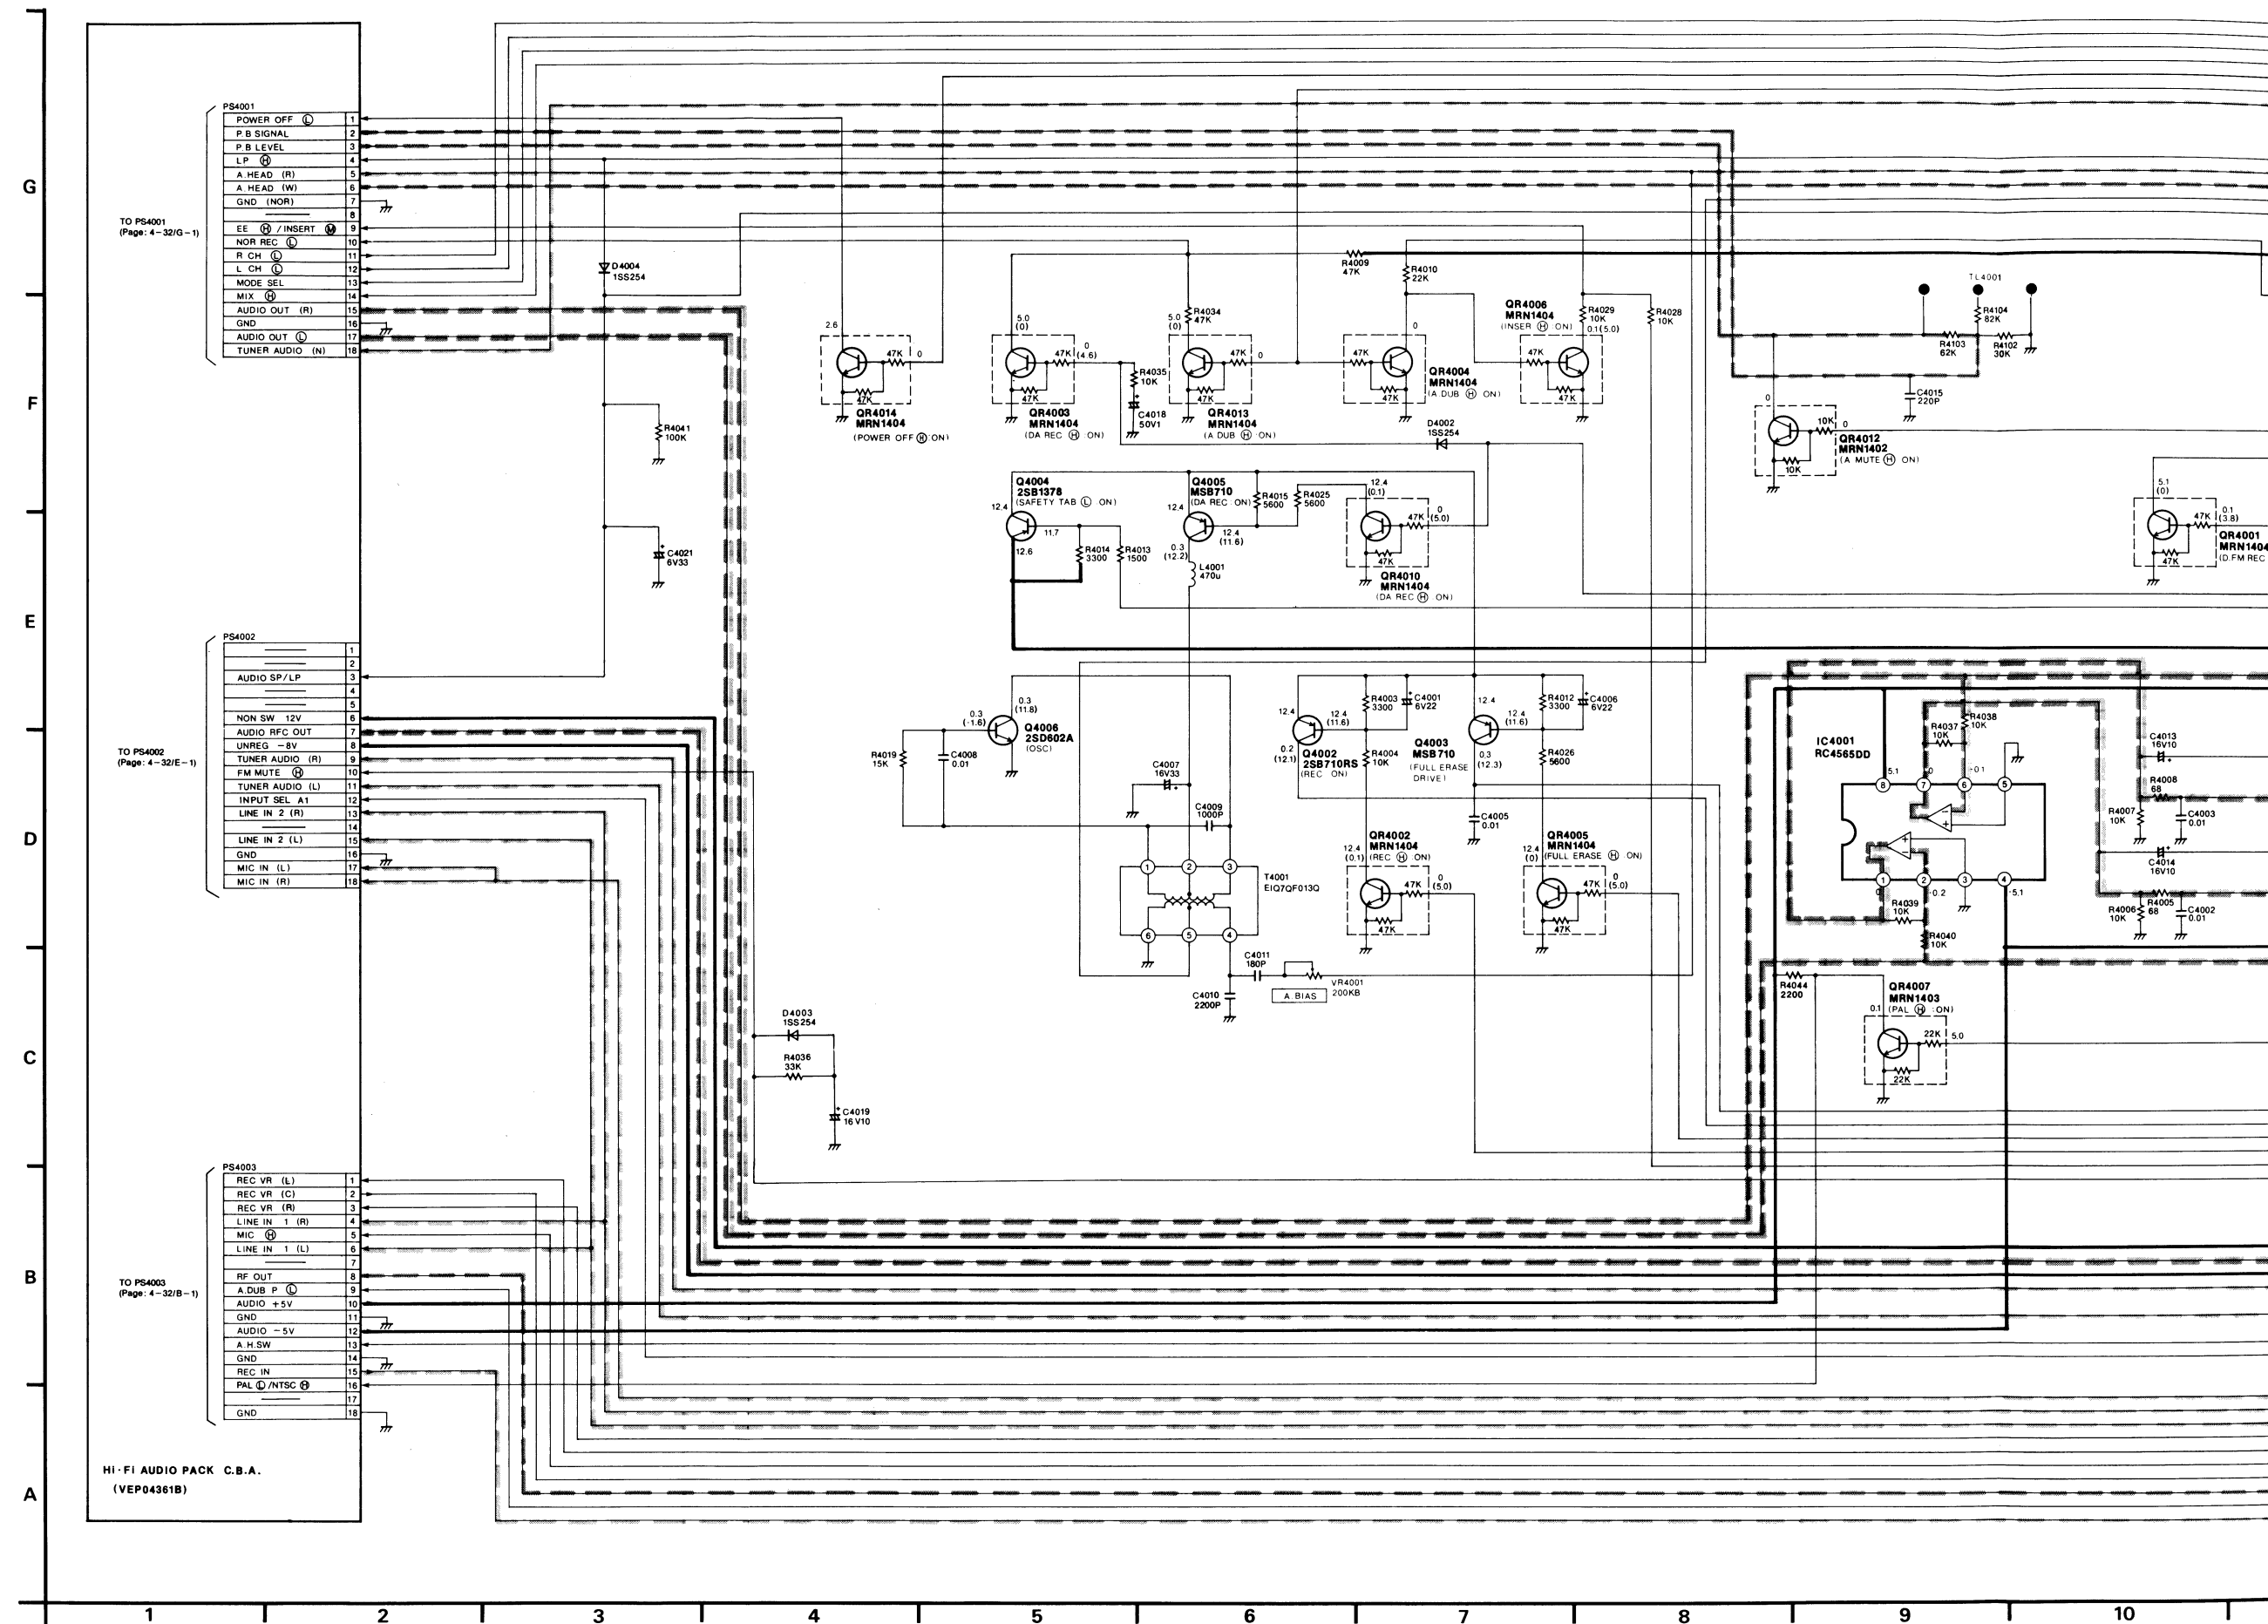

MAIN SIGNAL PATH IN REC MODE


MAIN SIGNAL PATH IN PLAYBACK MODE

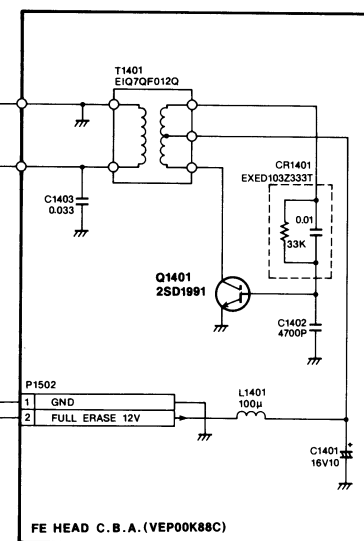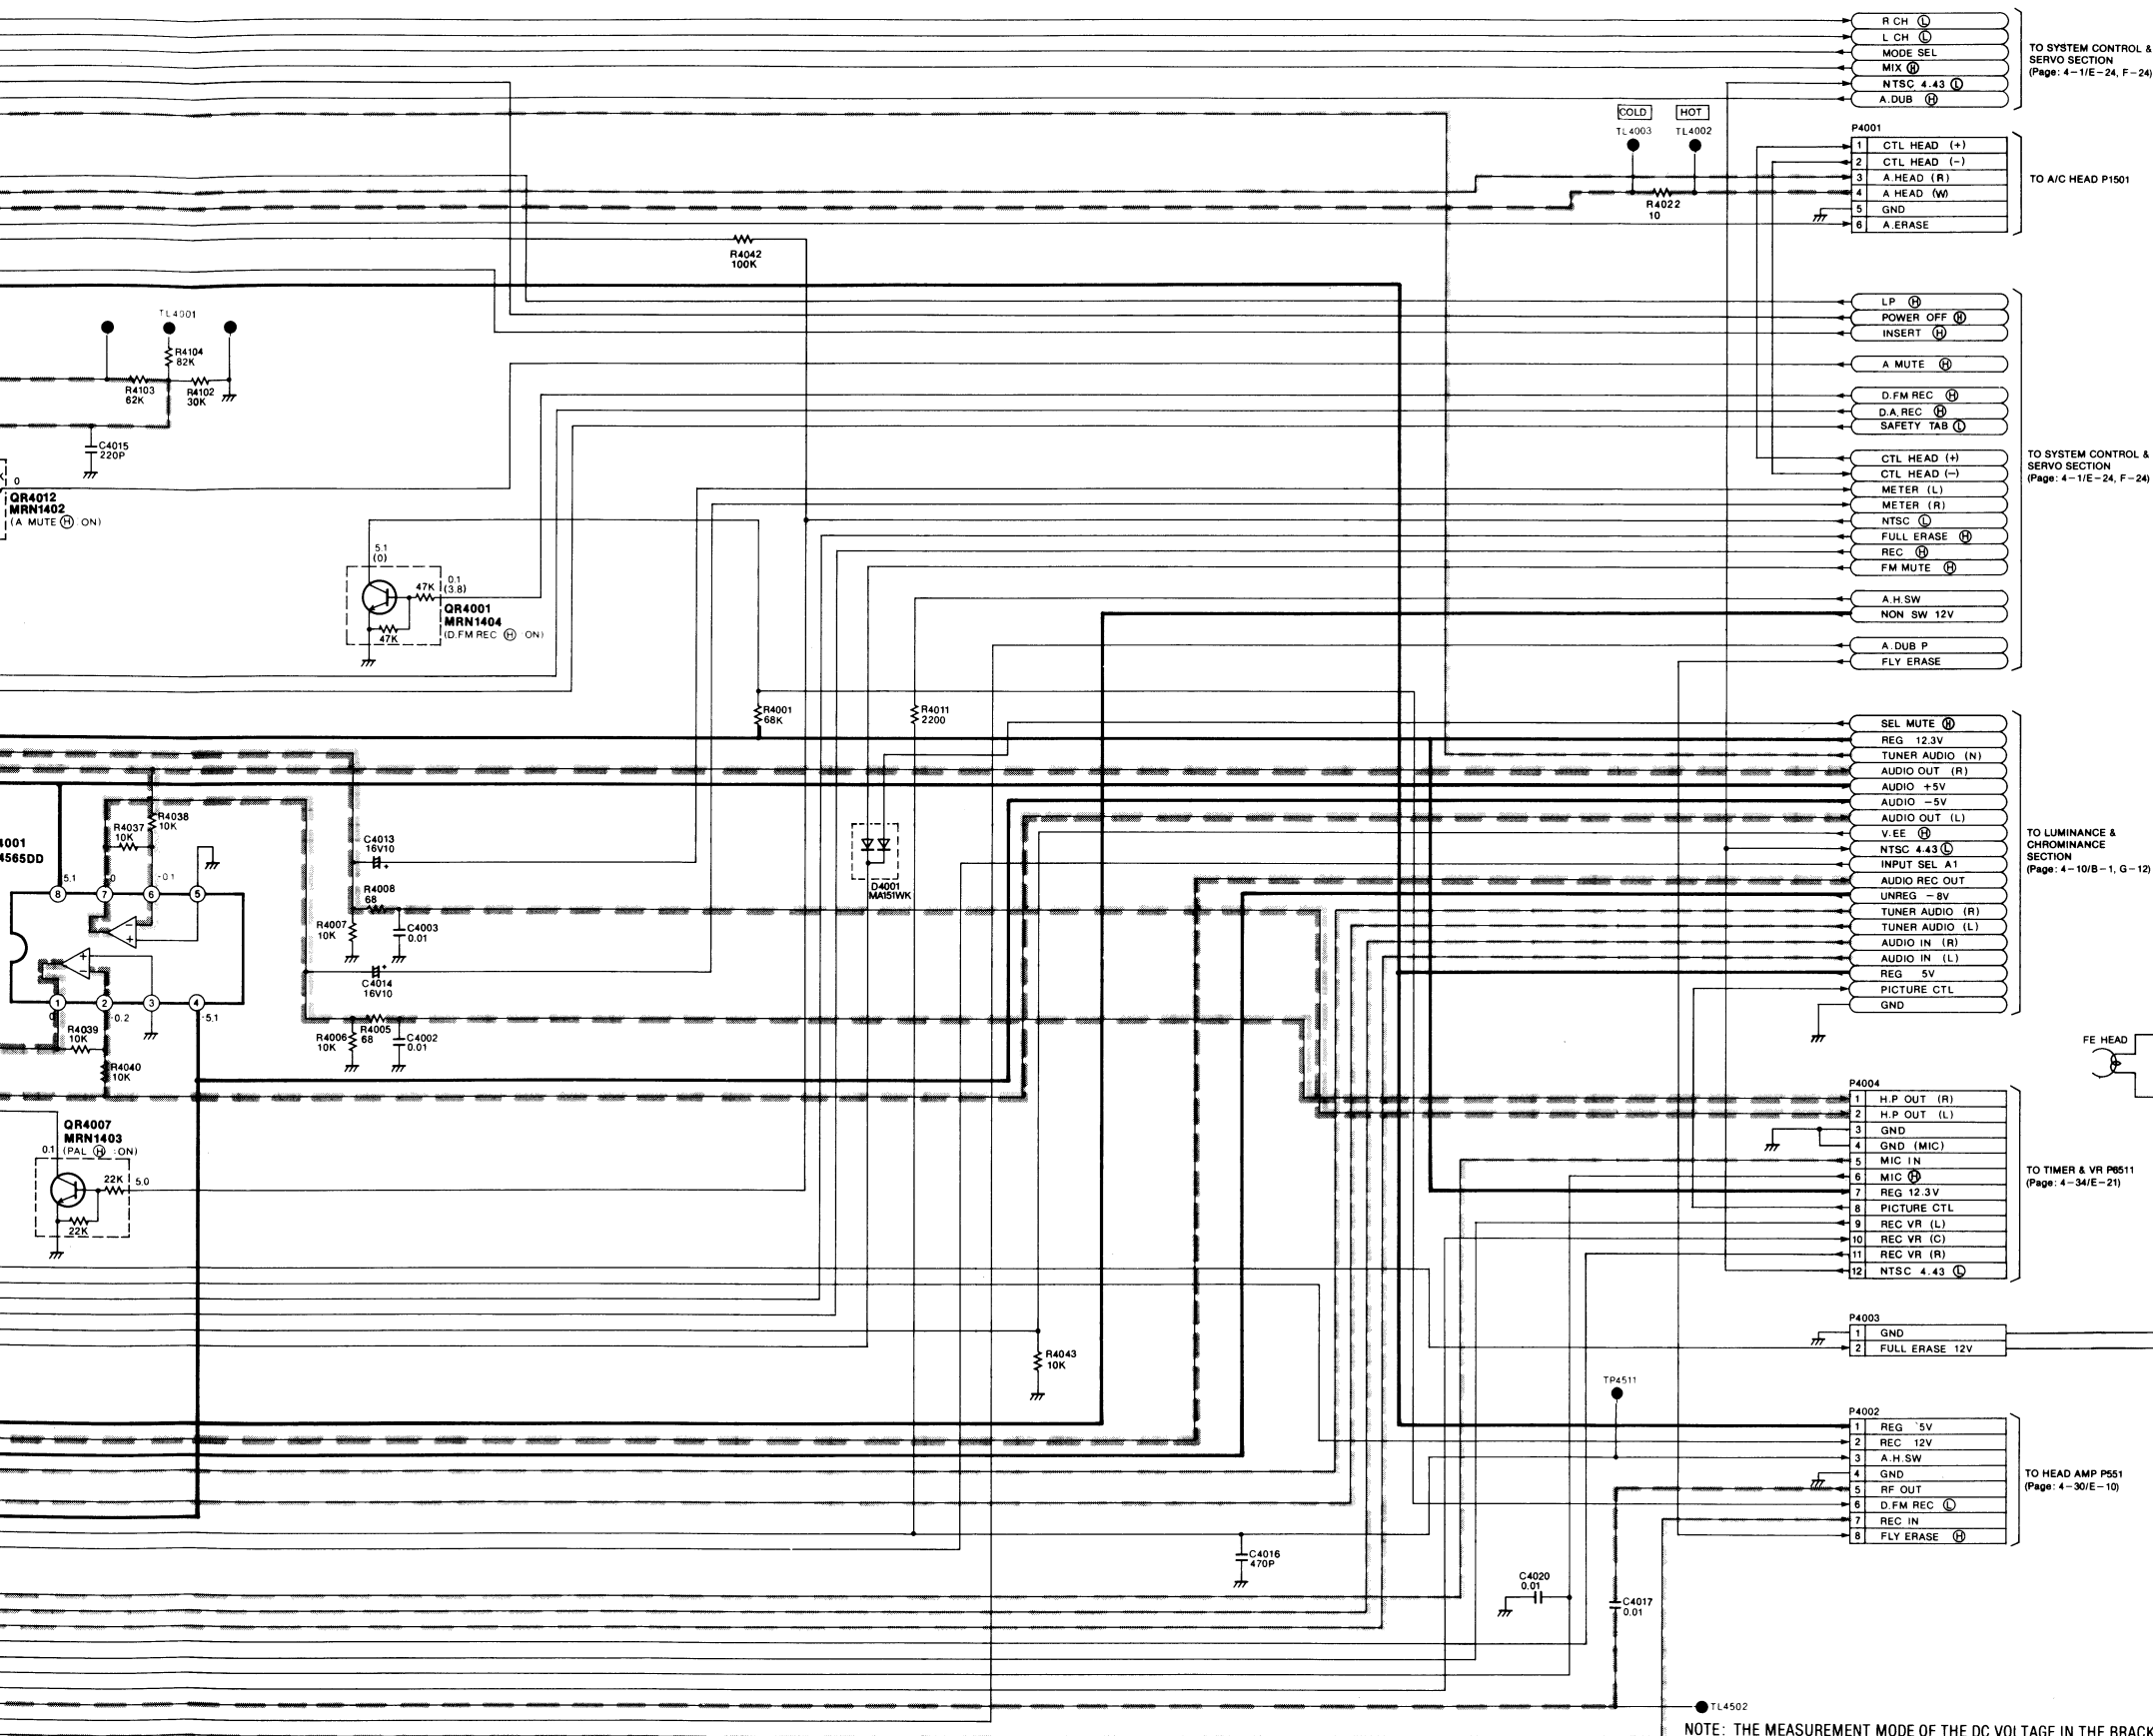


NOTE: DO NOT USE ANY PART NUMBER SHOWN ON THIS SCHEMATIC DIAGRAM FOR ORDERING. WHEN YOU ORDER A PART, PLEASE REFER TO PARTS LIST.

NOTE: THE MEASUREMENT MODE OF THE DC VOLTAGE IN THE BRACKETS () ON THIS DIAGRAM IS RECORD MODE WITH PAL COLOUR SIGNAL. (SP MODE)
THE MEASUREMENT MODE OF THE DC VOLTAGE OUT OF THE BRACKETS ON THIS DIAGRAM IS PLAYBACK MODE WITH PAL COLOUR SIGNAL. (SP MODE)
• LINE IN SIGNAL LEVEL... -10dB 1kHz

4-5. SUB SERVO PACK SCHEMATIC DIAGRAM

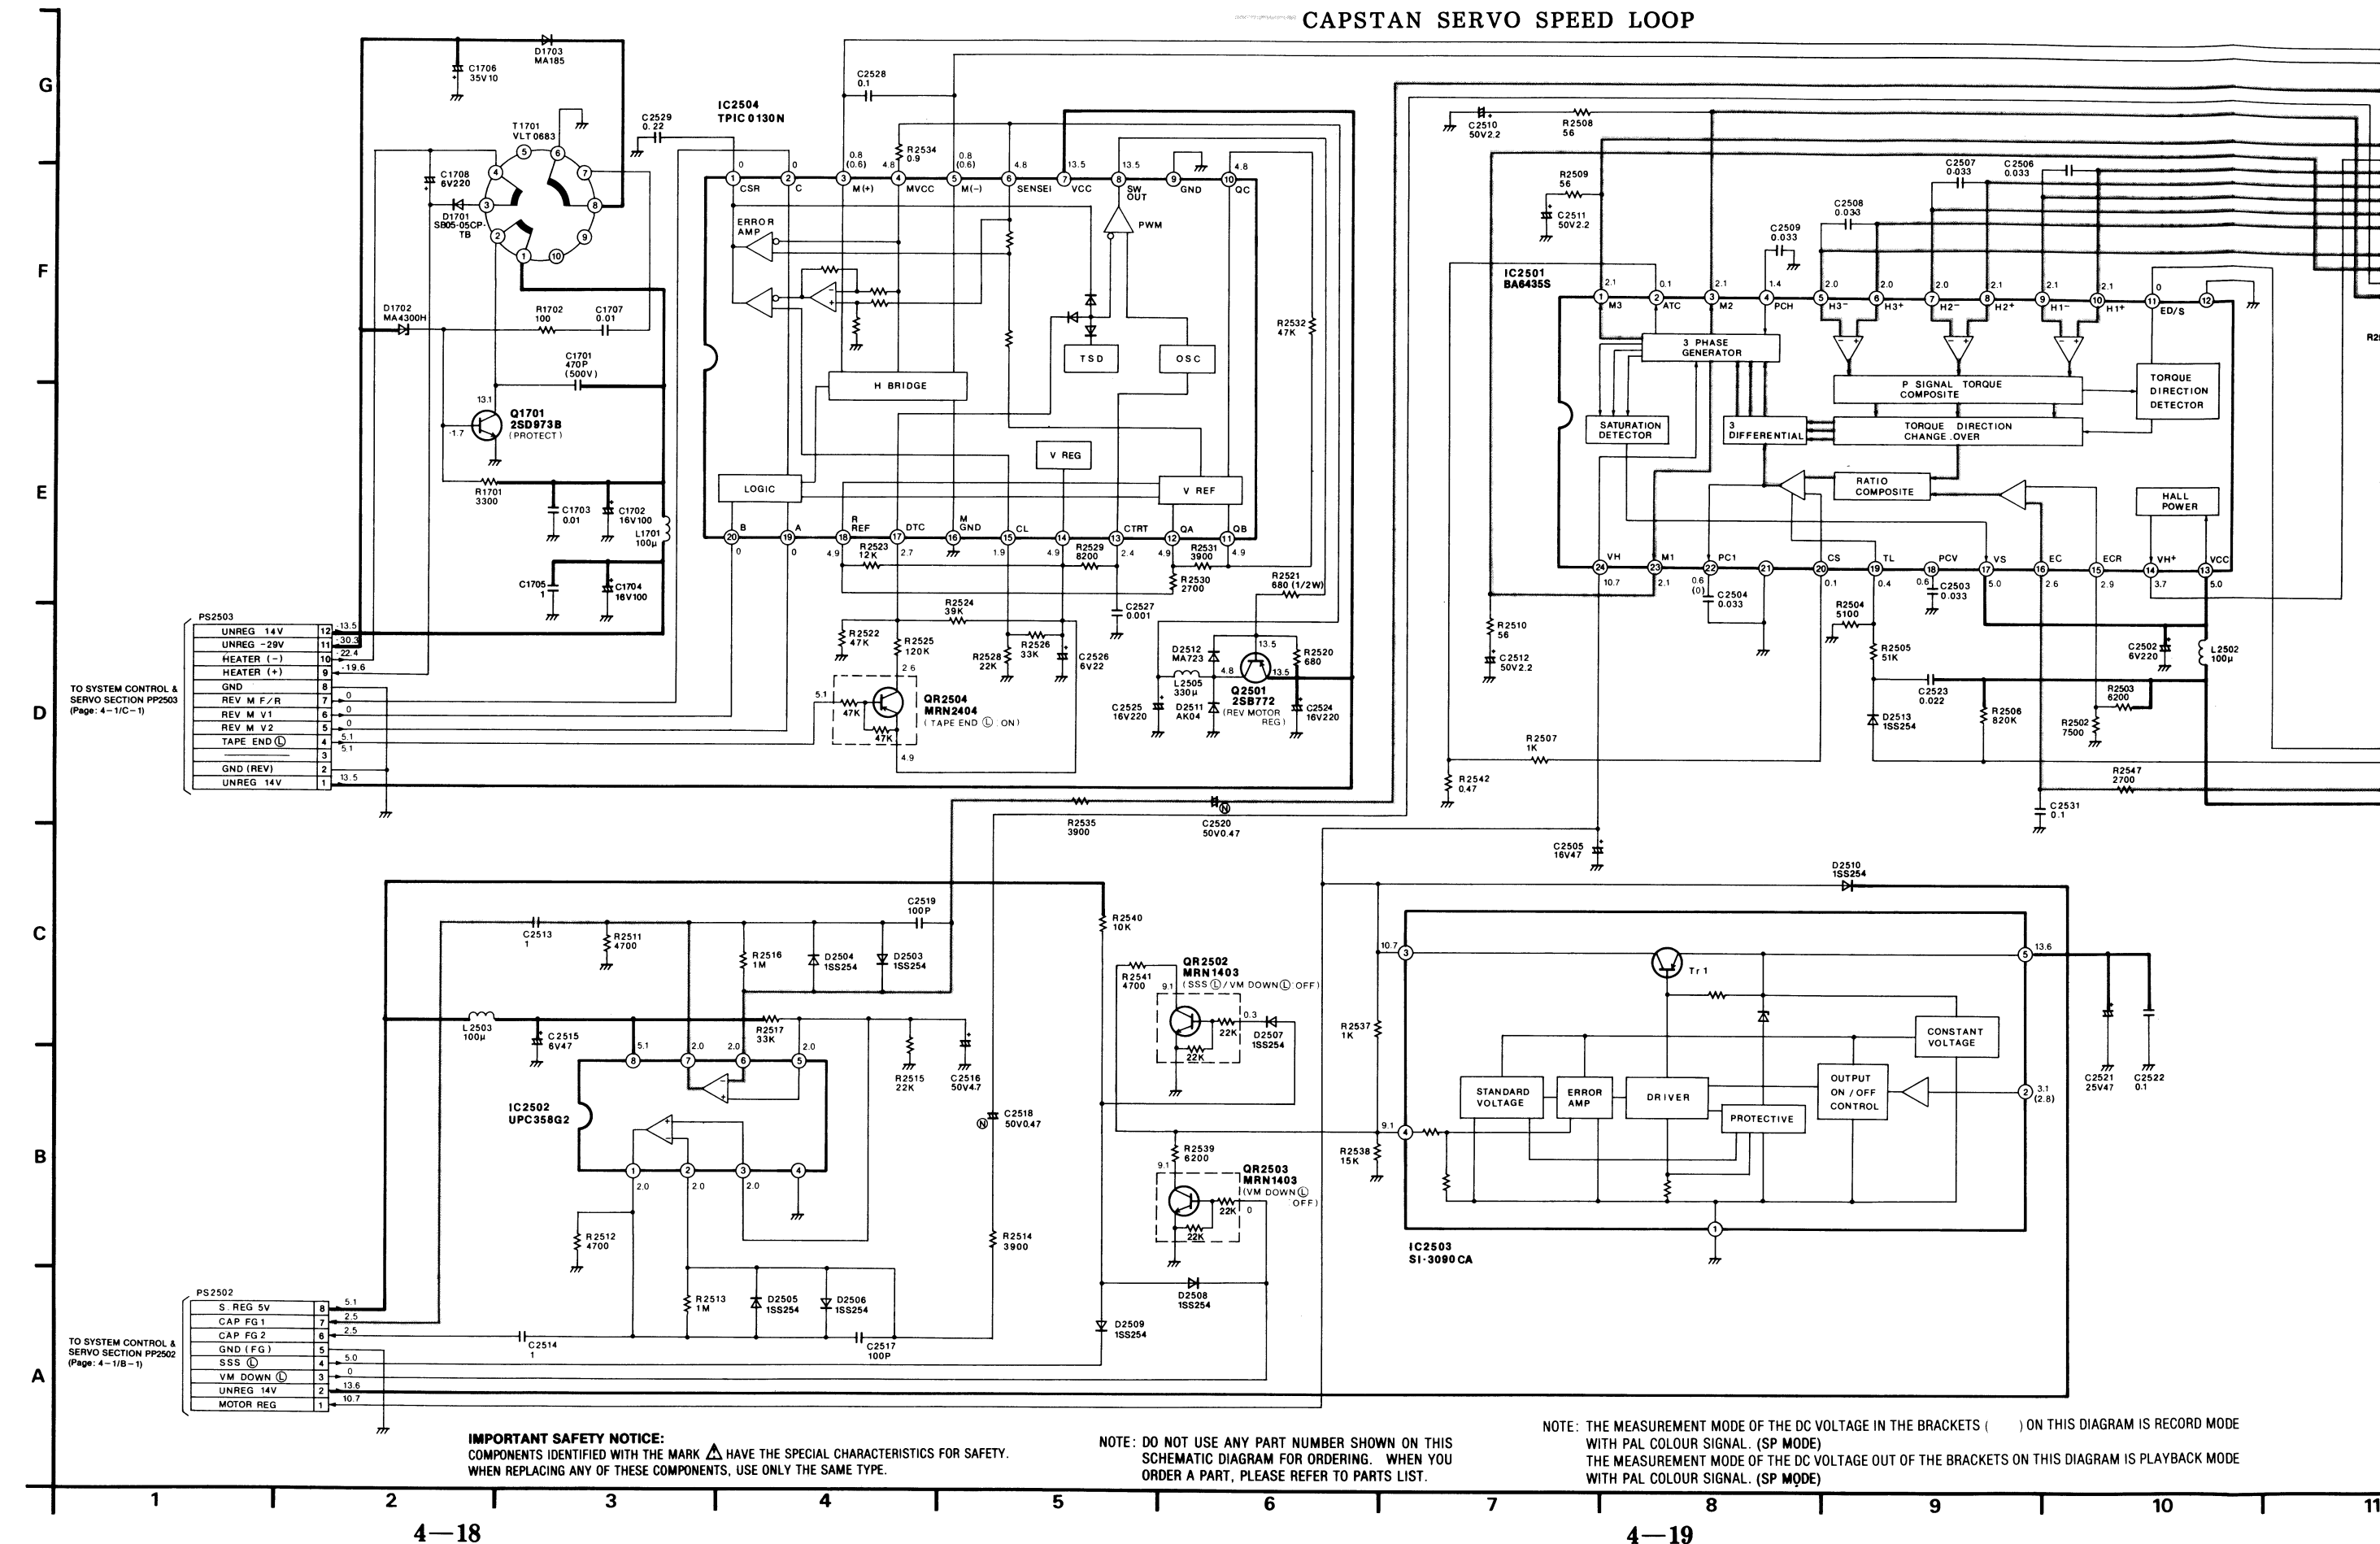


CAPSTAN SERVO SPEED LOOP

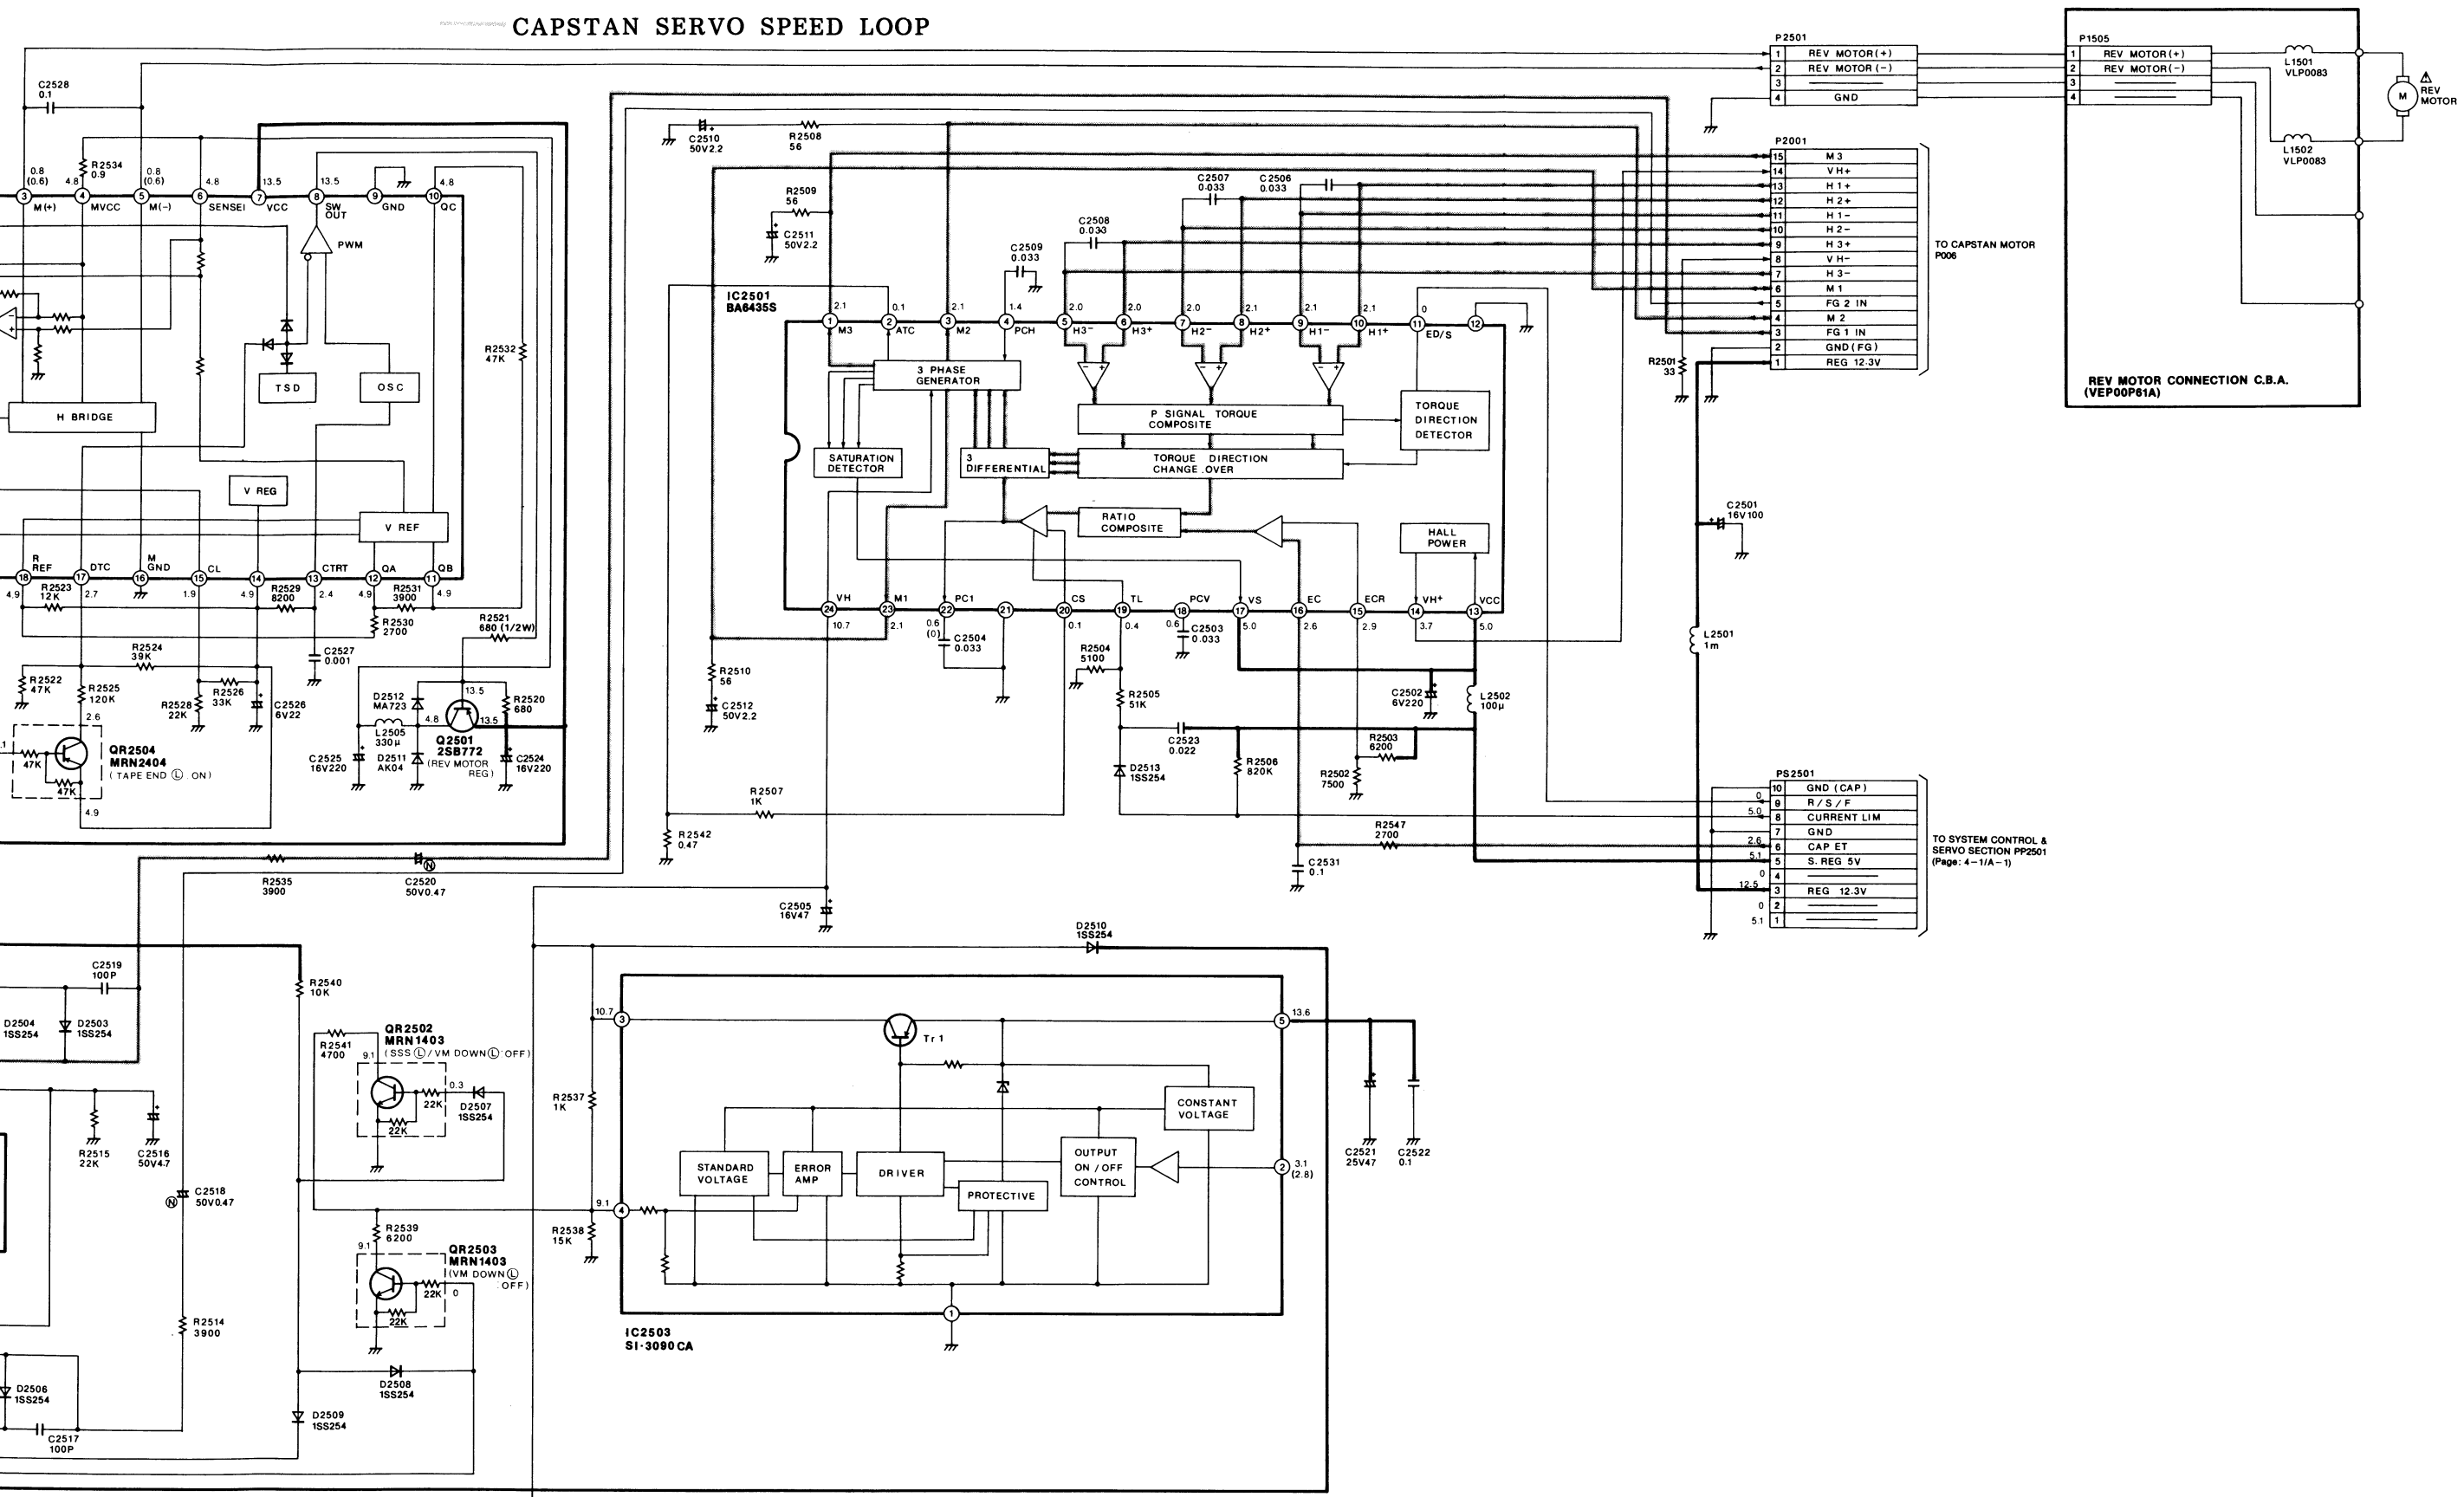AL CHARACTERISTICS FOR SAFETY.
SAME TYPE.NOTE: DO NOT USE ANY PART NUMBER SHOWN ON THIS
SCHEMATIC DIAGRAM FOR ORDERING. WHEN YOU
ORDER A PART, PLEASE REFER TO PARTS LIST.


4.6. LUMINANCE & CHROMINANCE PACK SCHEMATIC DIAGRAM

MAIN SIGNAL PATH IN REC MODE ——— MAIN SIGNAL PATH IN PLAYBACK MODE

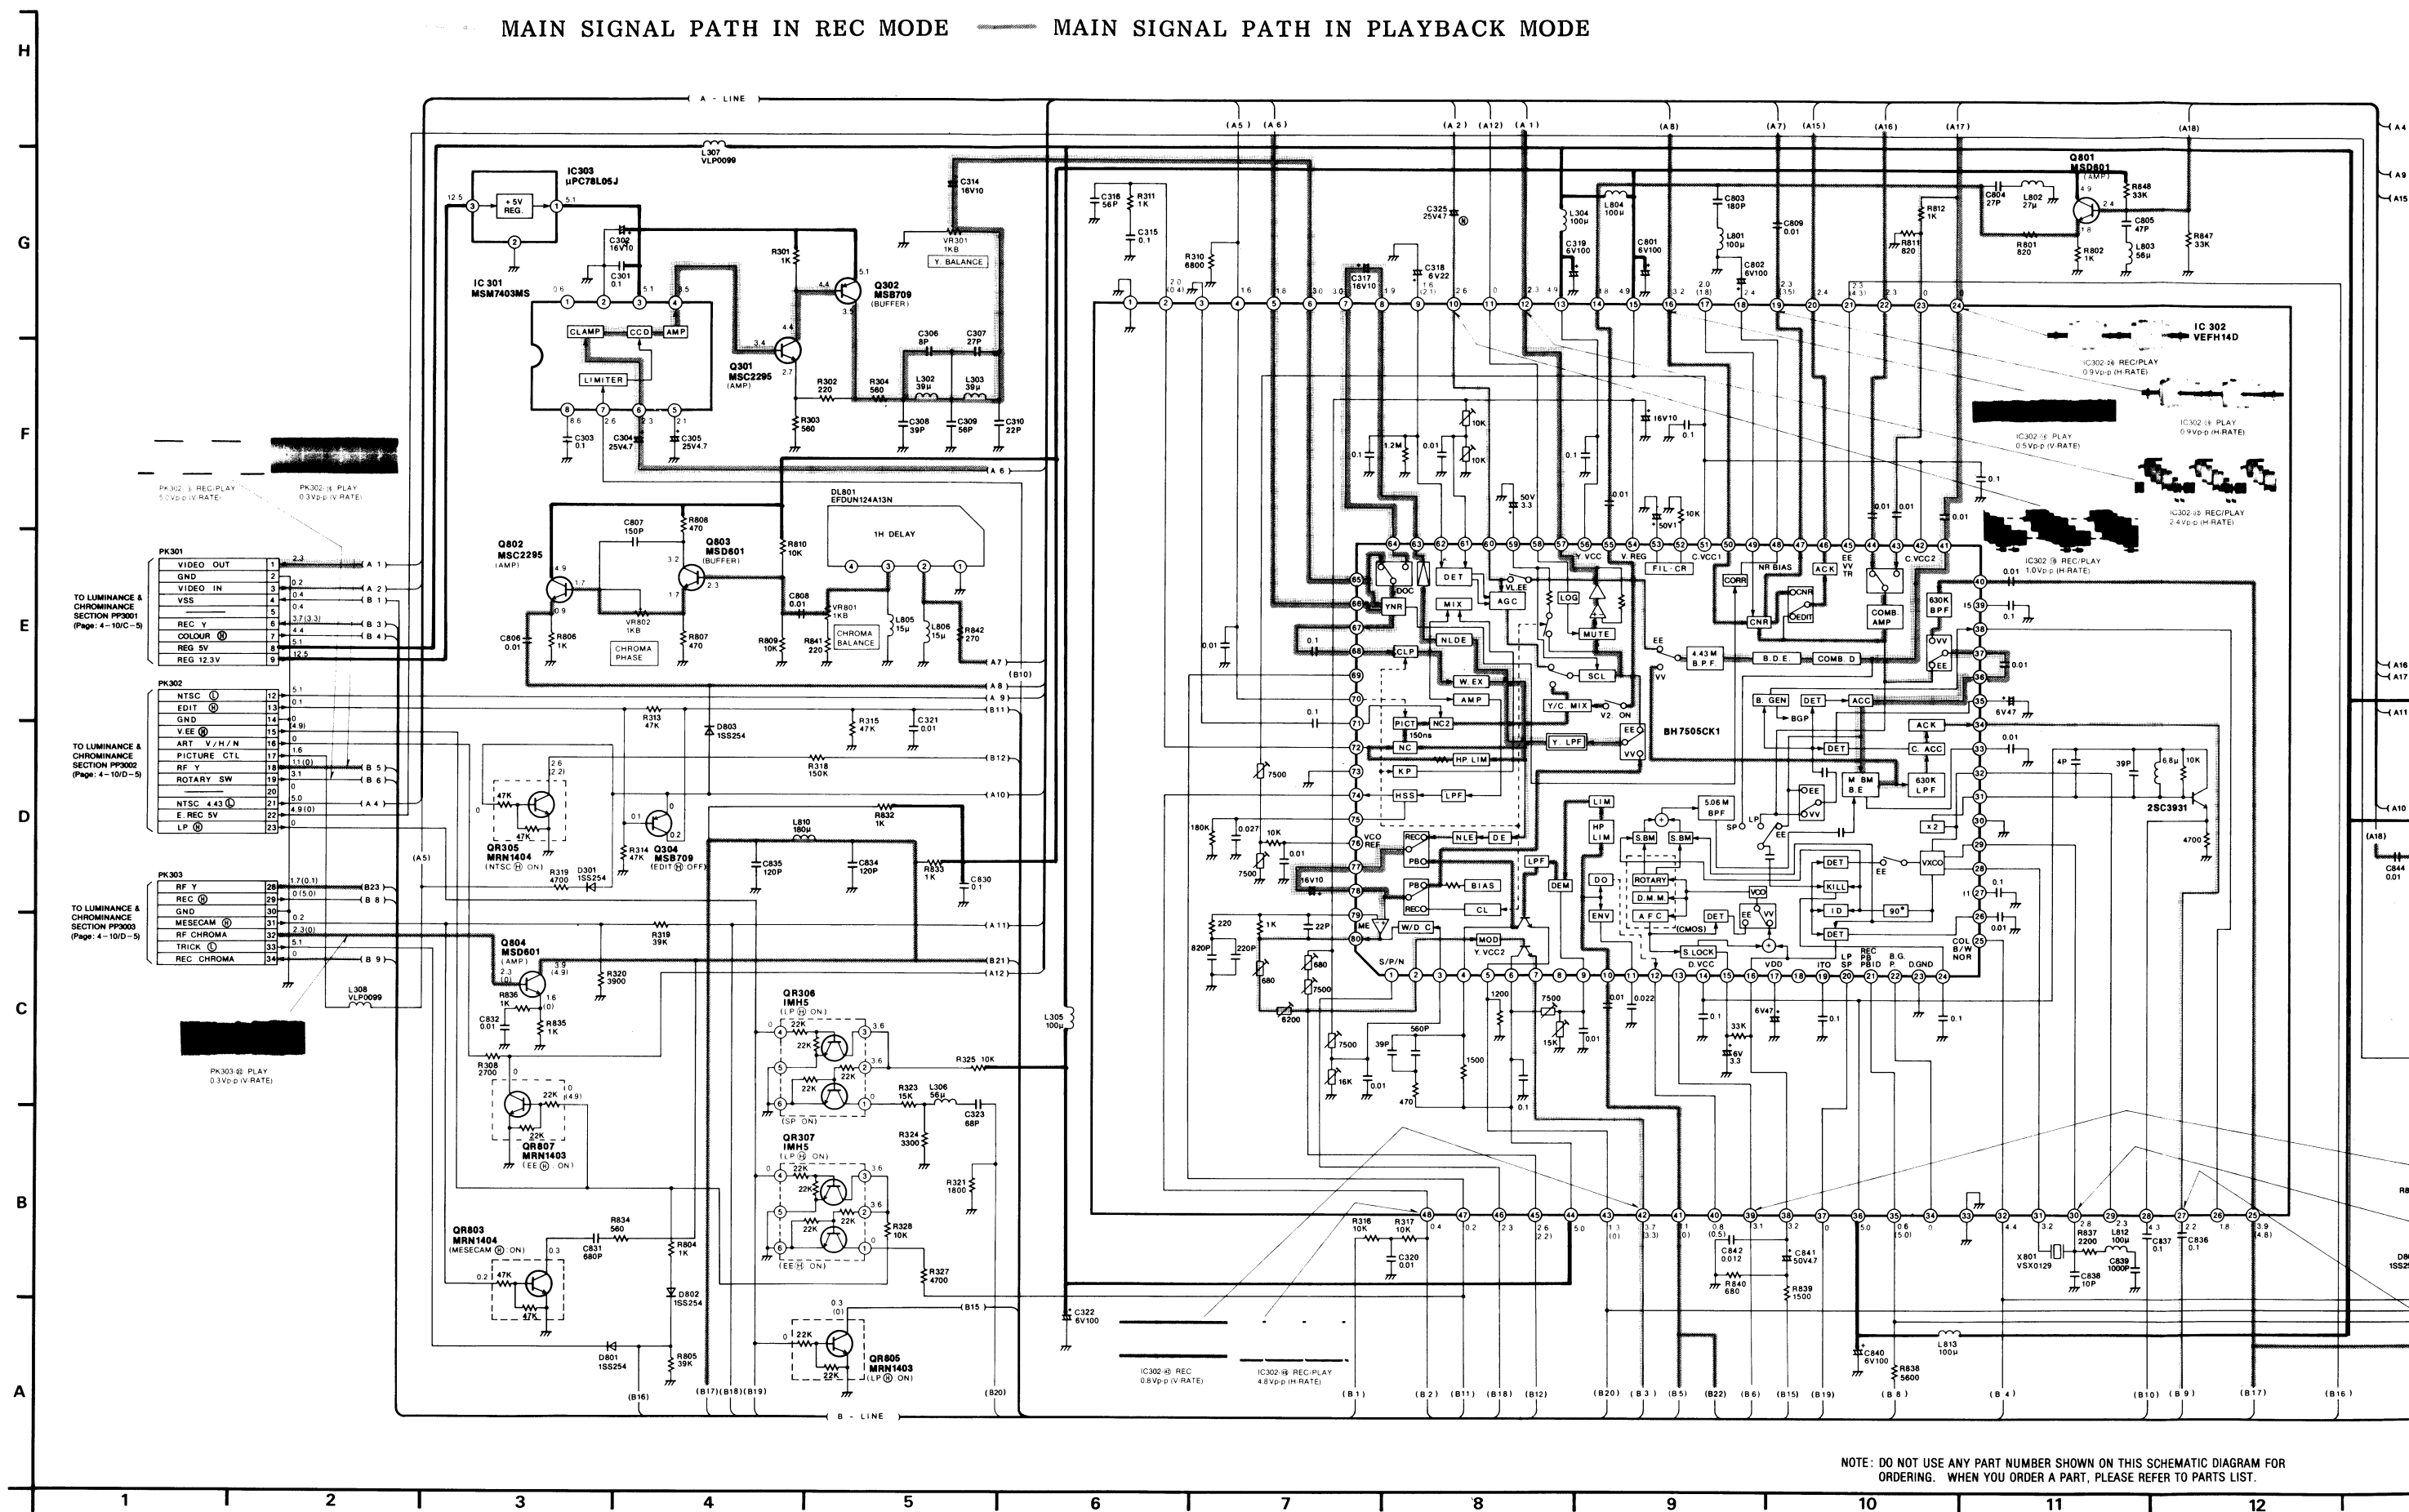

ATIC DIAGRAM

REC MODE — MAIN SIGNAL PATH IN PLAYBACK MODE

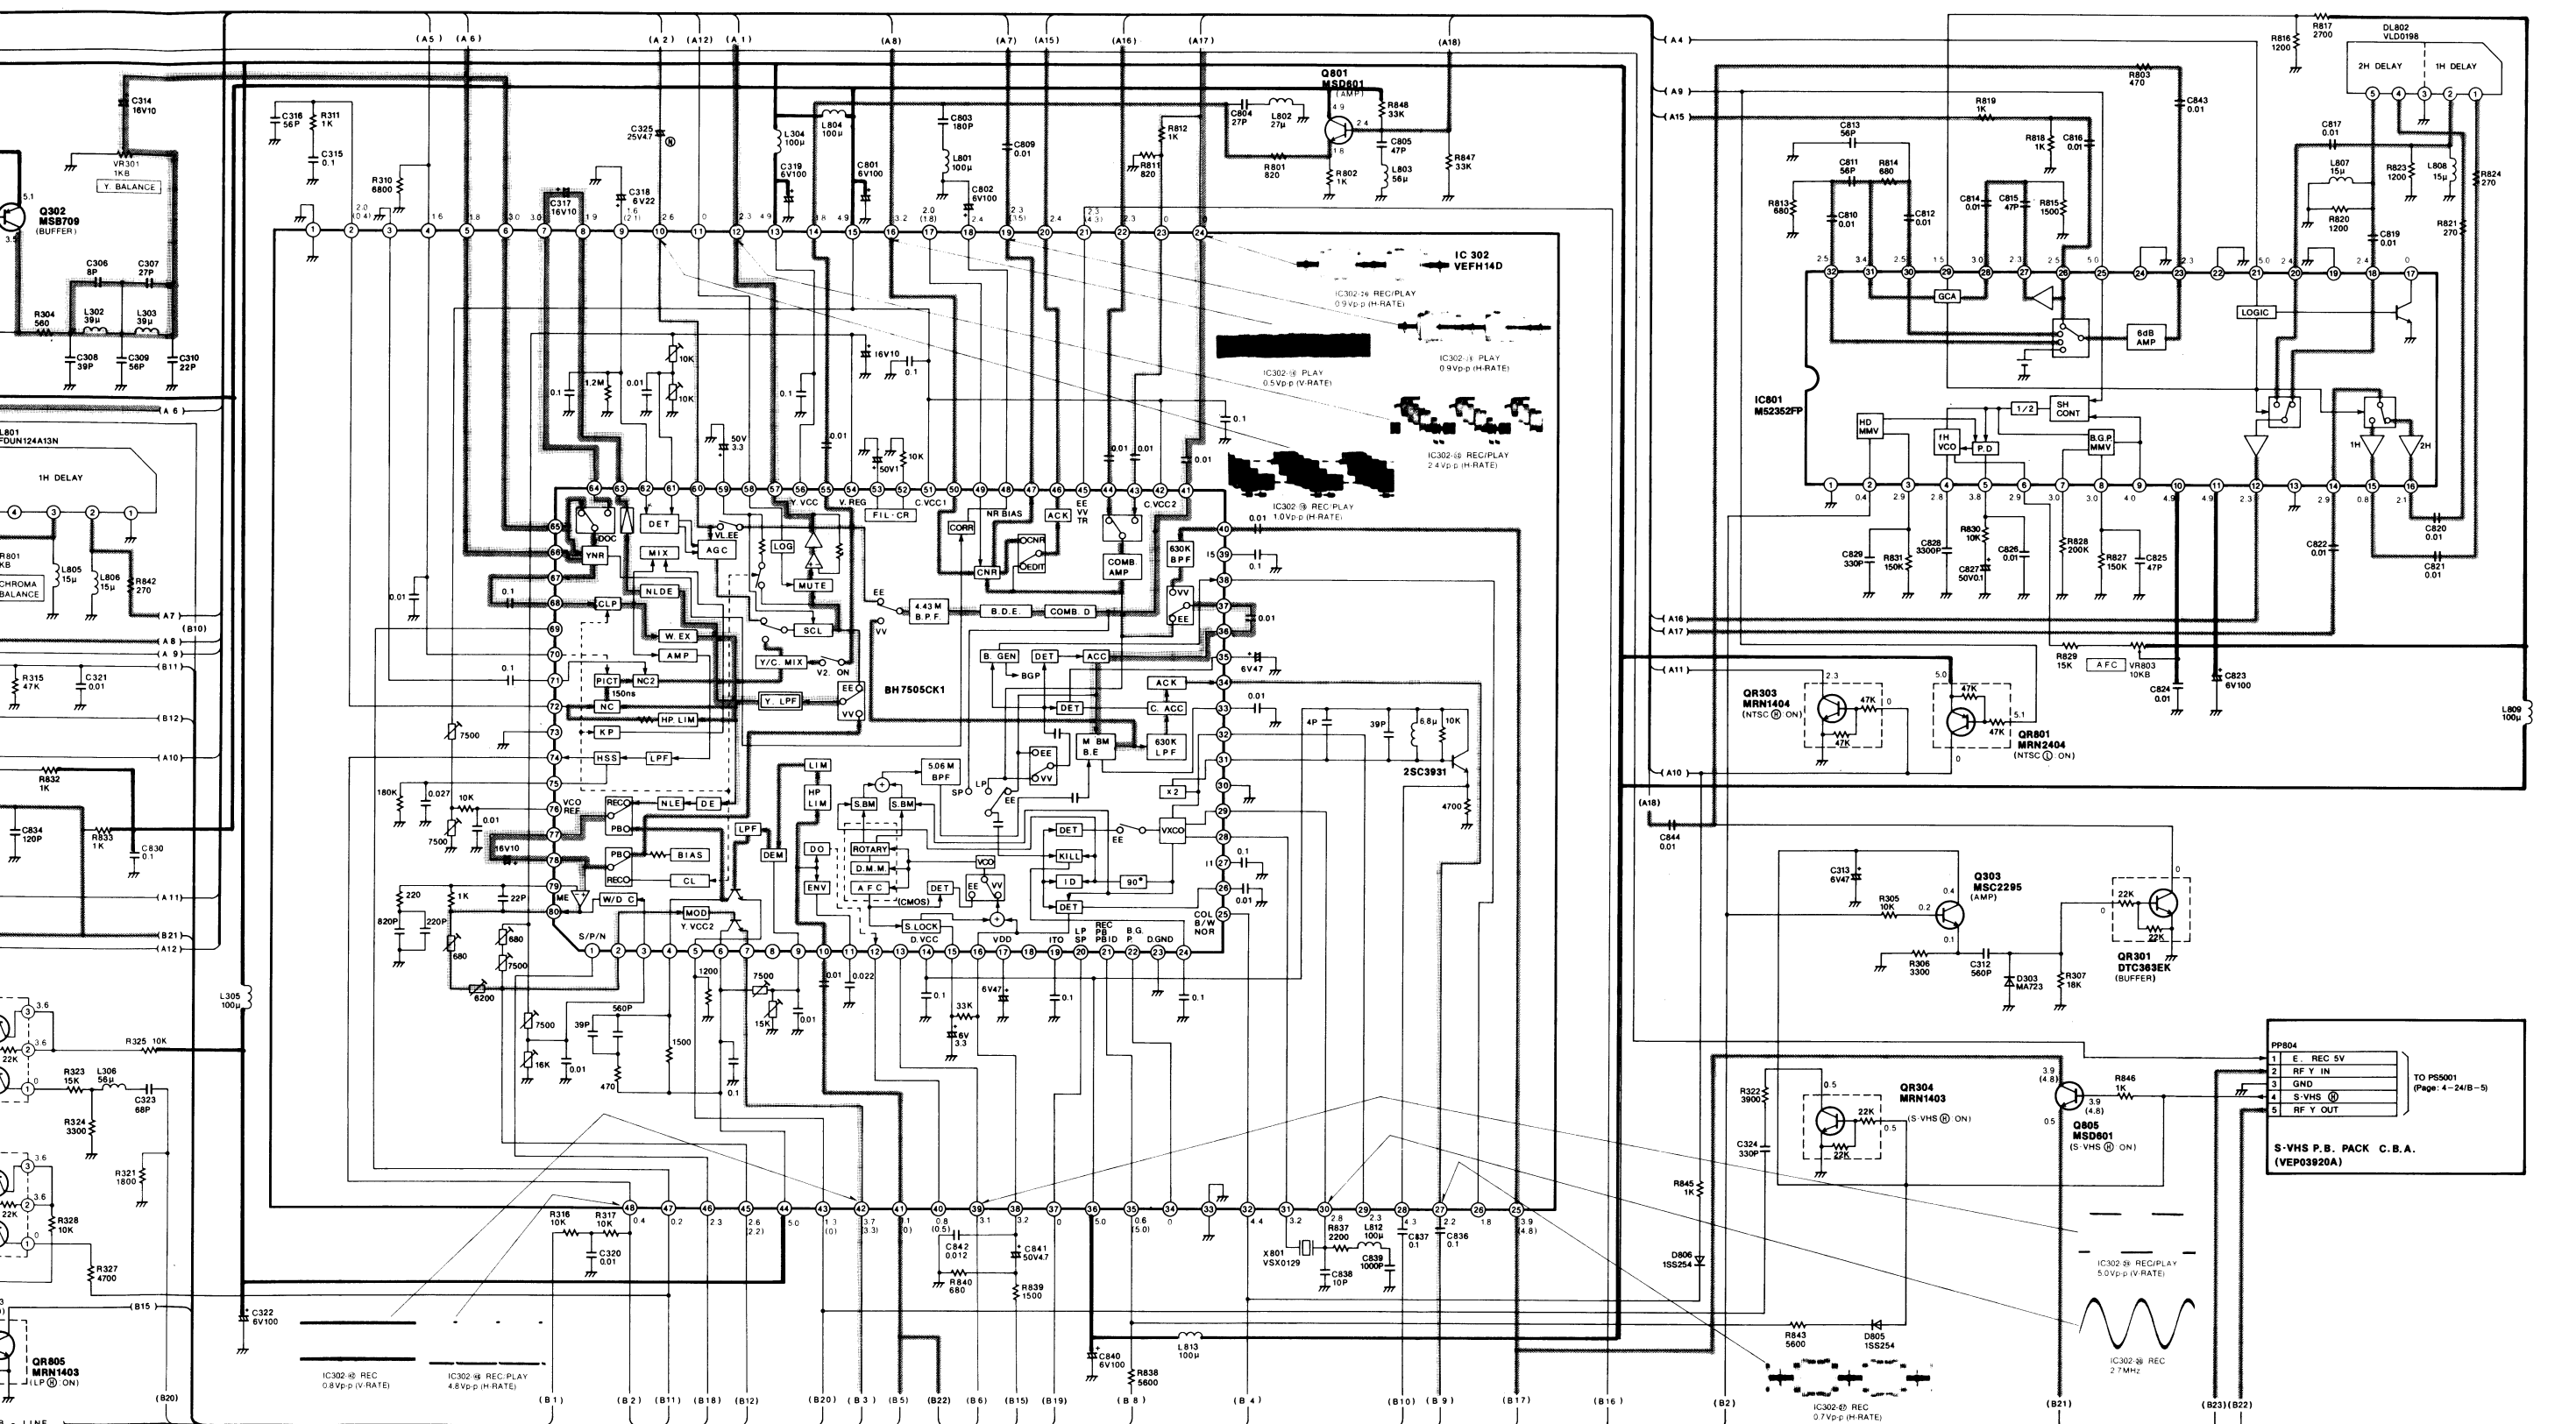


NOTE: DO NOT USE ANY PART NUMBER SHOWN ON THIS SCHEMATIC DIAGRAM FOR ORDERING. WHEN YOU ORDER A PART, PLEASE REFER TO PARTS LIST.

NOTE: THE MEASUREMENT MODE OF THE DC VOLTAGE IN THE BRACKETS () ON THIS DIAGRAM IS RECORD MODE WITH PAL COLOUR SIGNAL. (SP MODE)
THE MEASUREMENT MODE OF THE DC VOLTAGE OUT OF THE BRACKETS ON THIS DIAGRAM IS PLAYBACK MODE WITH PAL COLOUR SIGNAL. (SP MODE)

4-7. S-VHS P.B. PACK SCHEMATIC DIAGRAM

MAIN SIGNAL PATH IN PLAYBACK MODE

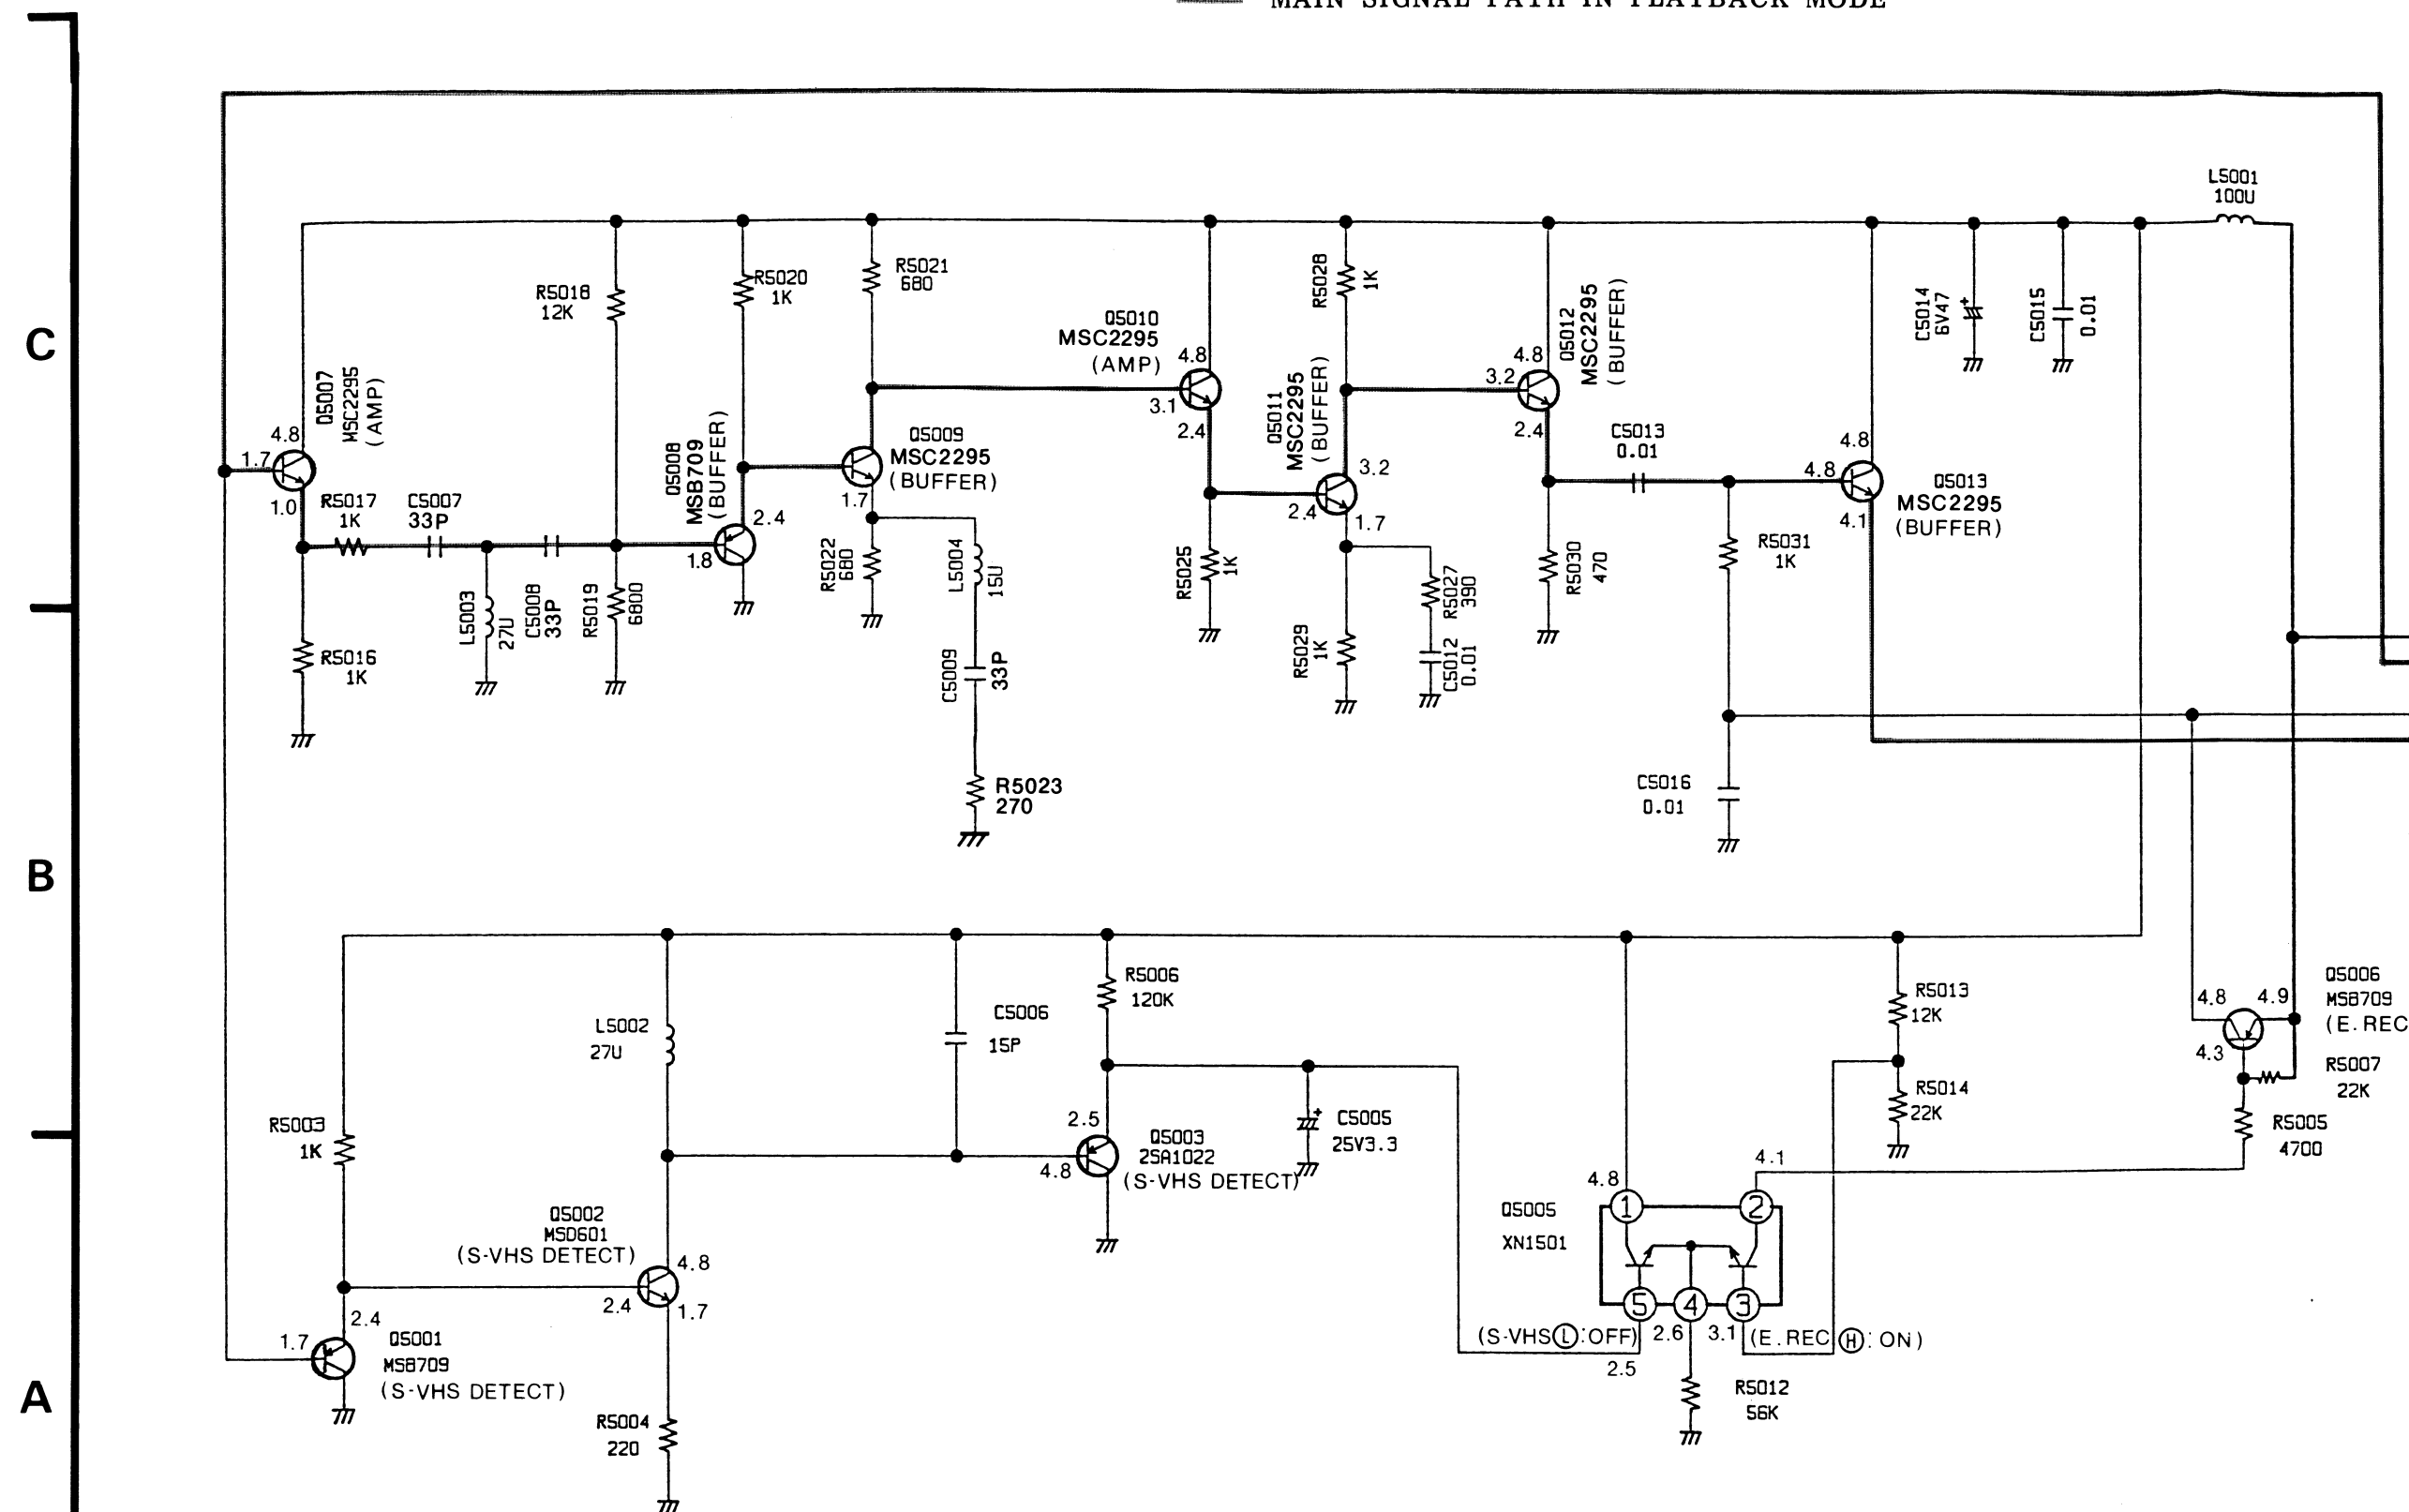


NOTE: DO NOT USE ANY PART NUMBER SHOWN ON THIS SCHEMATIC DIAGRAM FOR ORDERING. WHEN YOU ORDER A PART, PLEASE REFER TO PARTS LIST.

NOTE: THE MEASUREMENT MODE OF THE DC VOLTAGE OUT OF THE BRACKETS ON THIS DIAGRAM IS WITH PAL COLOUR SIGNAL. (S-VHS: SP MODE)

TIC DIAGRAM

—— MAIN SIGNAL PATH IN PLAYBACK MODE

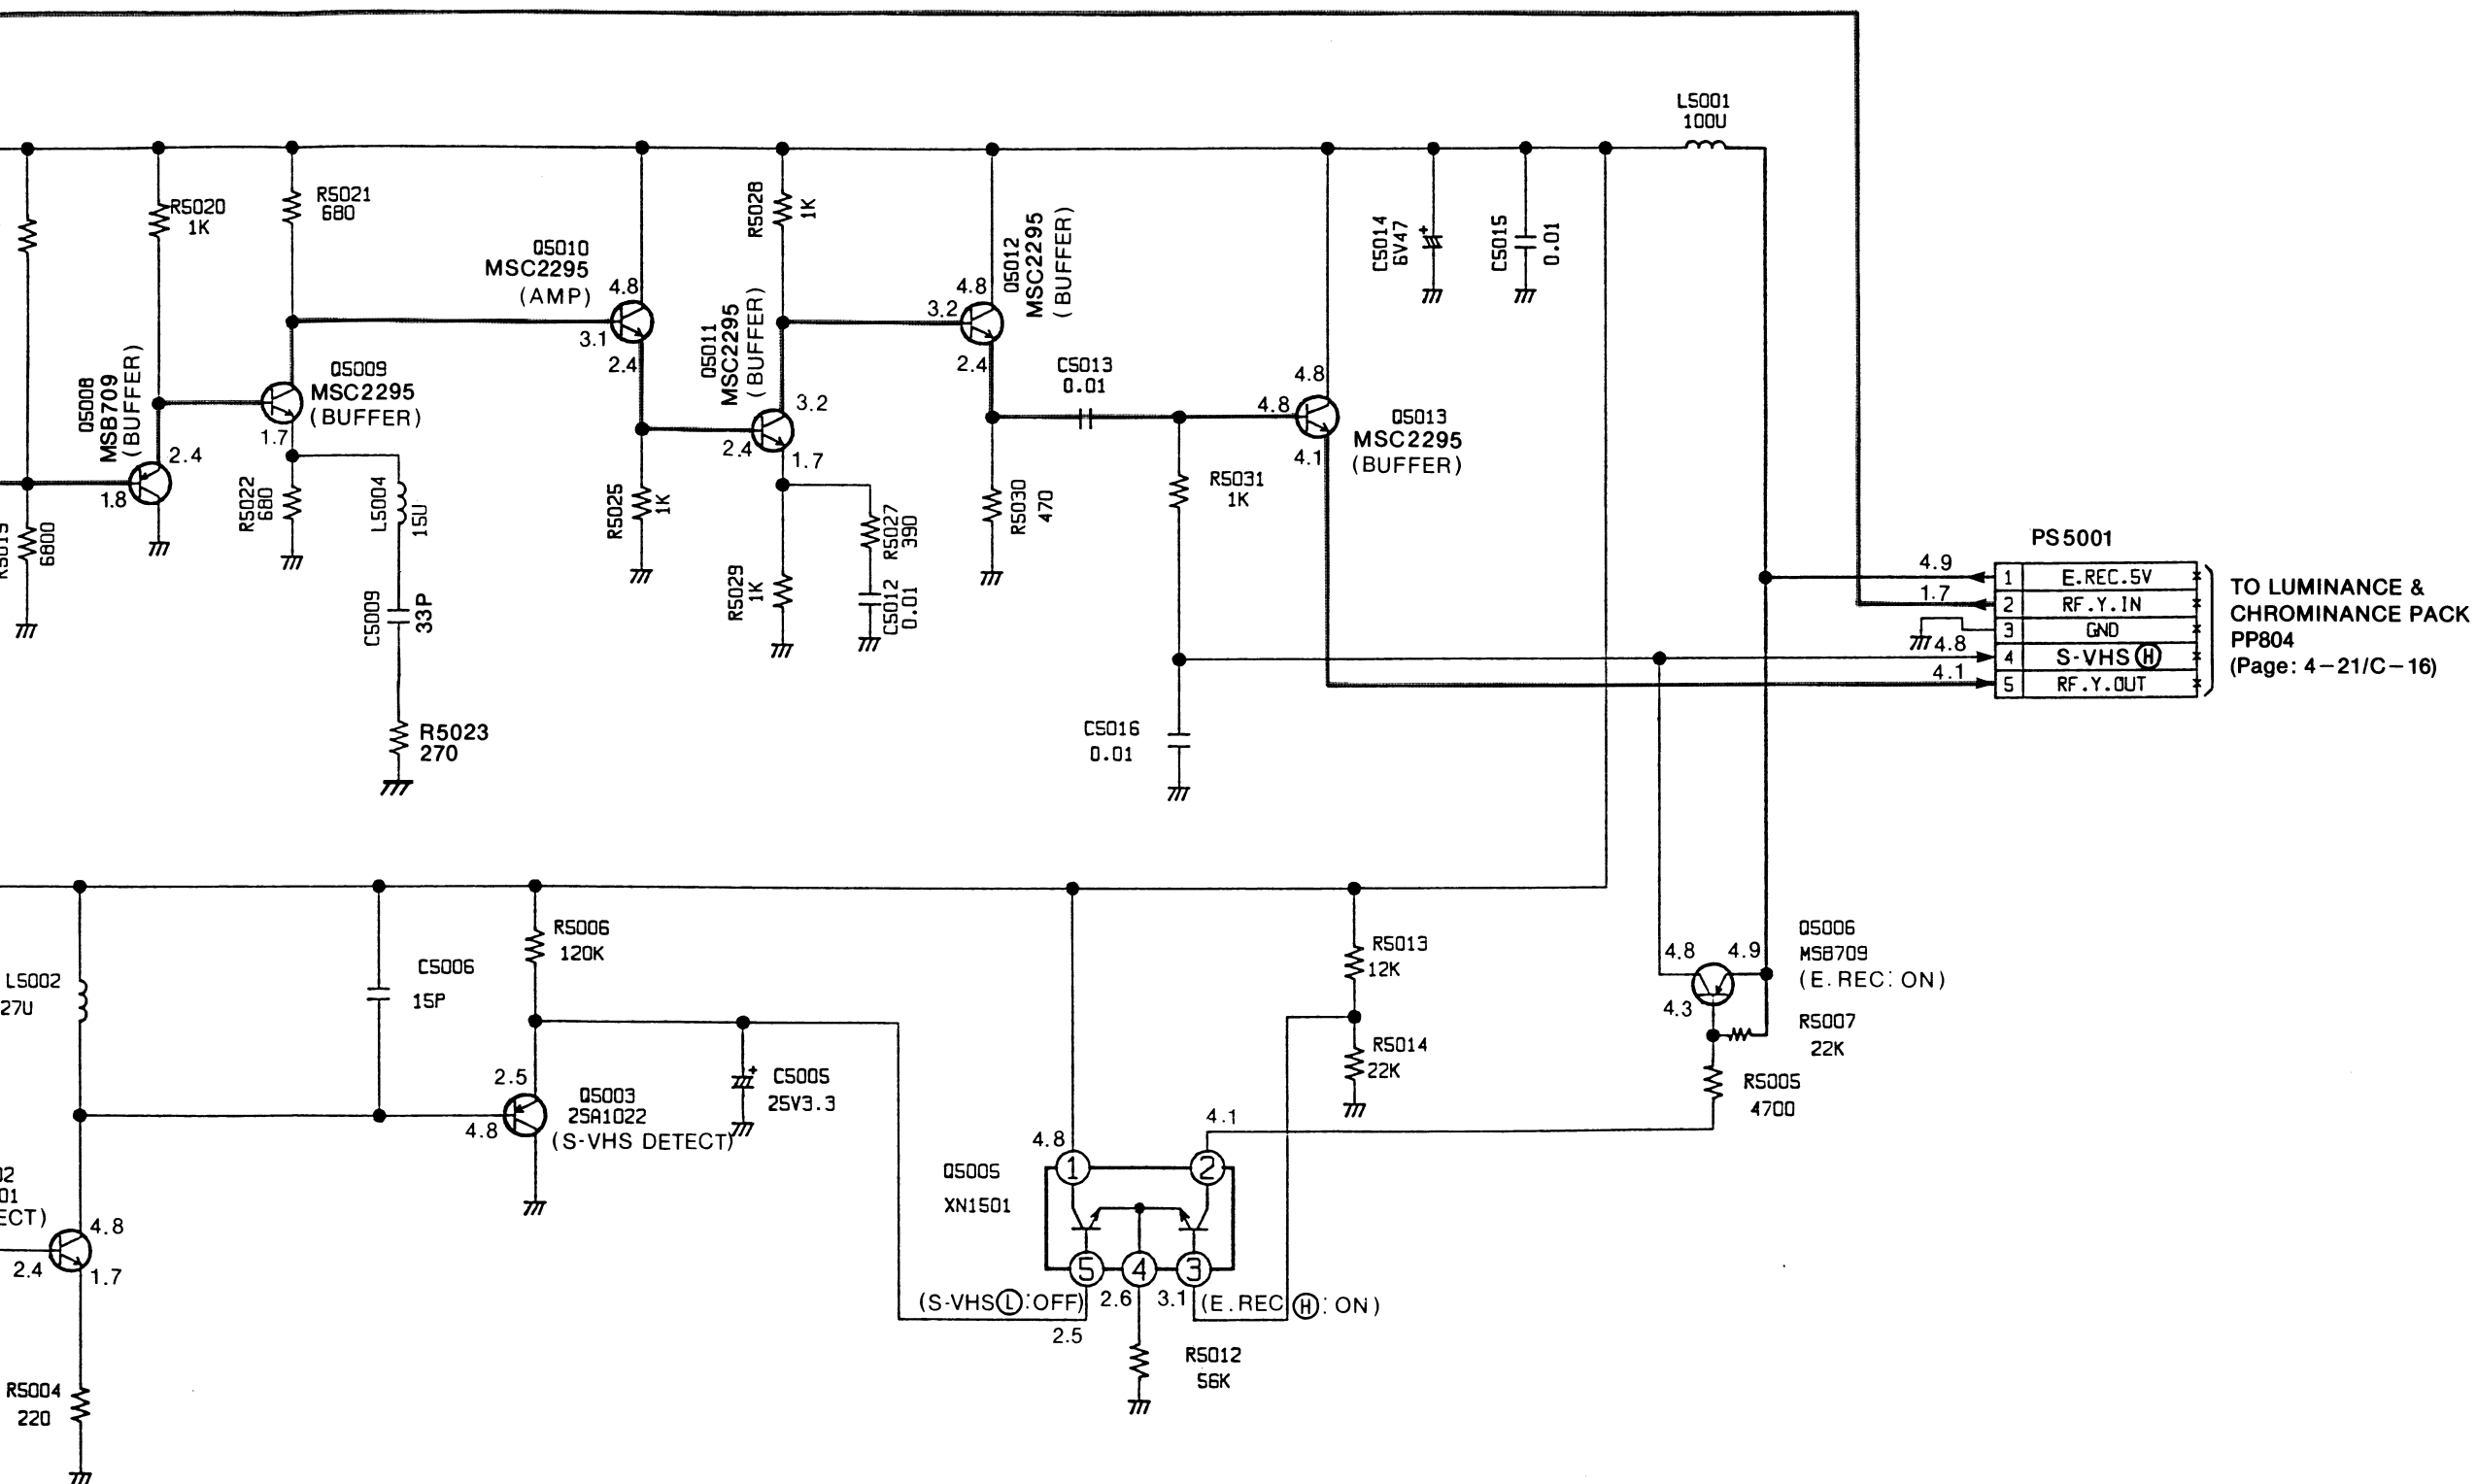

NOTE: THE MEASUREMENT MODE OF THE DC VOLTAGE OUT OF THE BRACKETS ON THIS DIAGRAM IS PLAYBACK MODE WITH PAL COLOUR SIGNAL. (S-VHS: SP MODE)

NOTE: THE MEASUREMENT MODE OF THE DC VOLTAGE OUT OF THE BRACKETS ON THIS DIAGRAM IS PLAYBACK MODE WITH PAL COLOUR SIGNAL. (S-VHS: SP MODE)

2


3

4

5

6


AUDIO MAIN SIGNAL PATH IN REC M
AUDIO MAIN SIGNAL PATH IN PLAYB

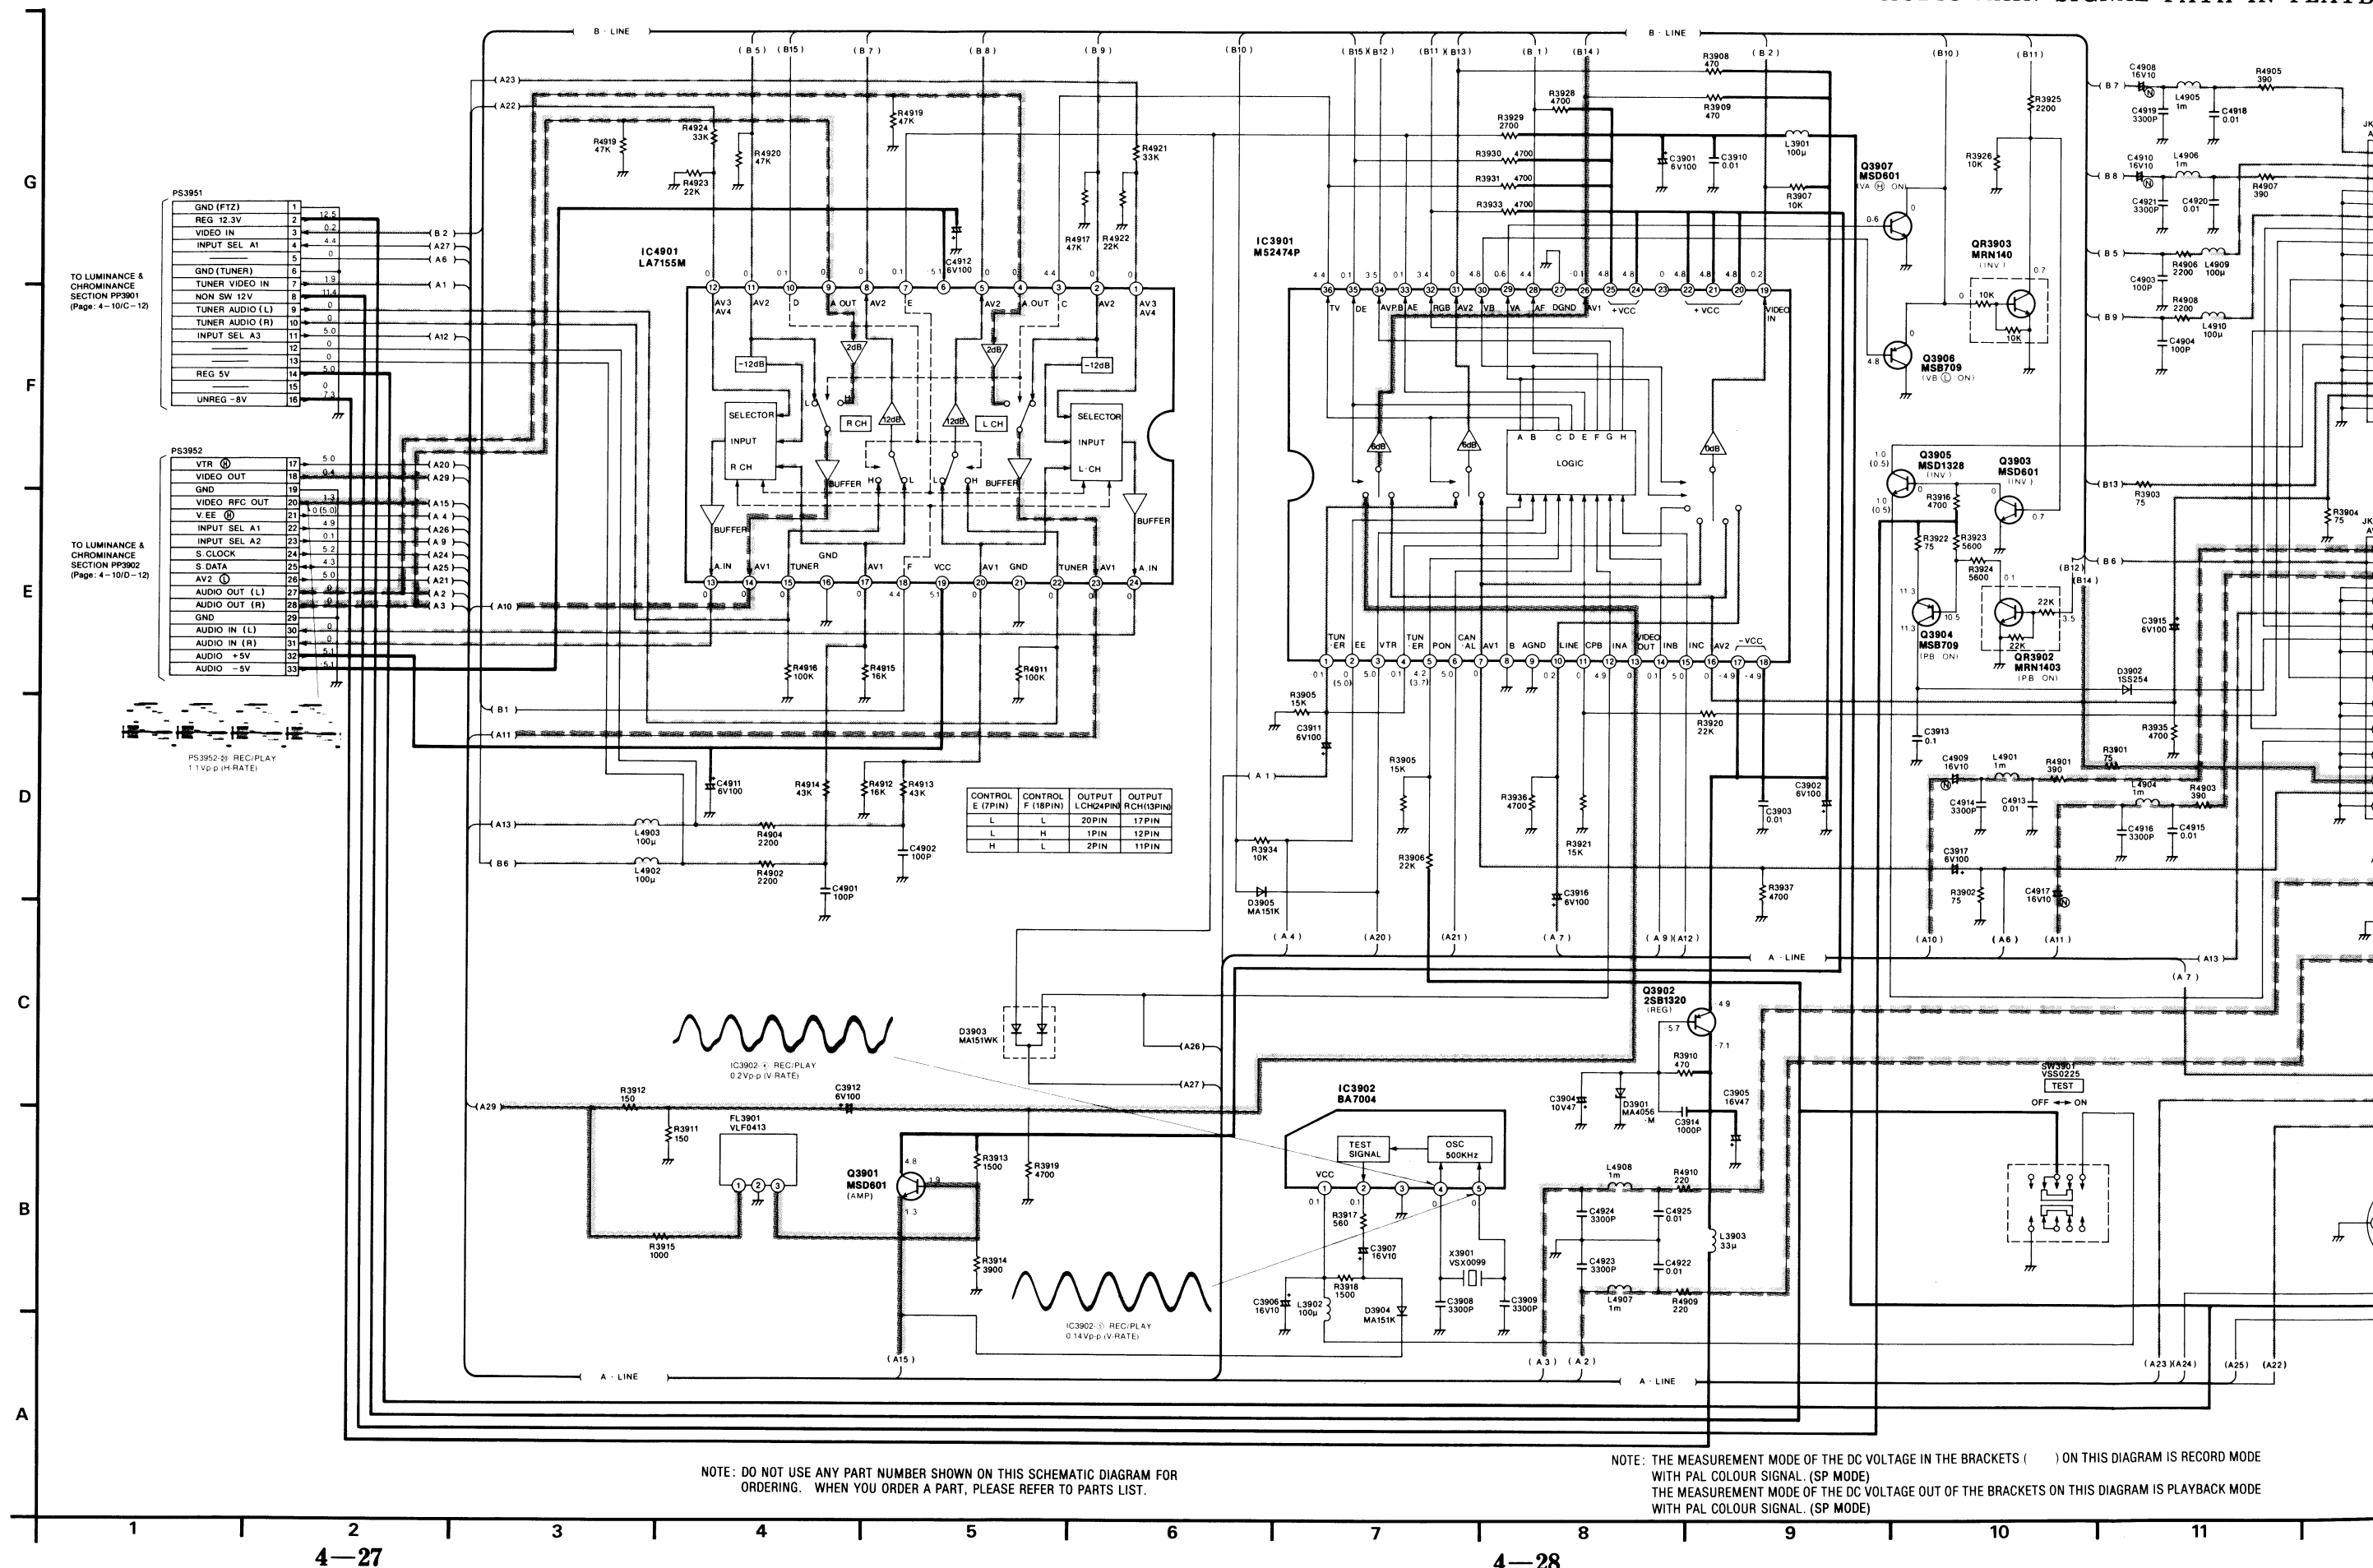

VIDEO MAIN SIGNAL PATH IN REC MODE
VIDEO MAIN SIGNAL PATH IN PLAYBACK MODE


AUDIO MAIN SIGNAL PATH IN REC MODE

AUDIO MAIN SIGNAL PATH IN PLAYBACK MODE

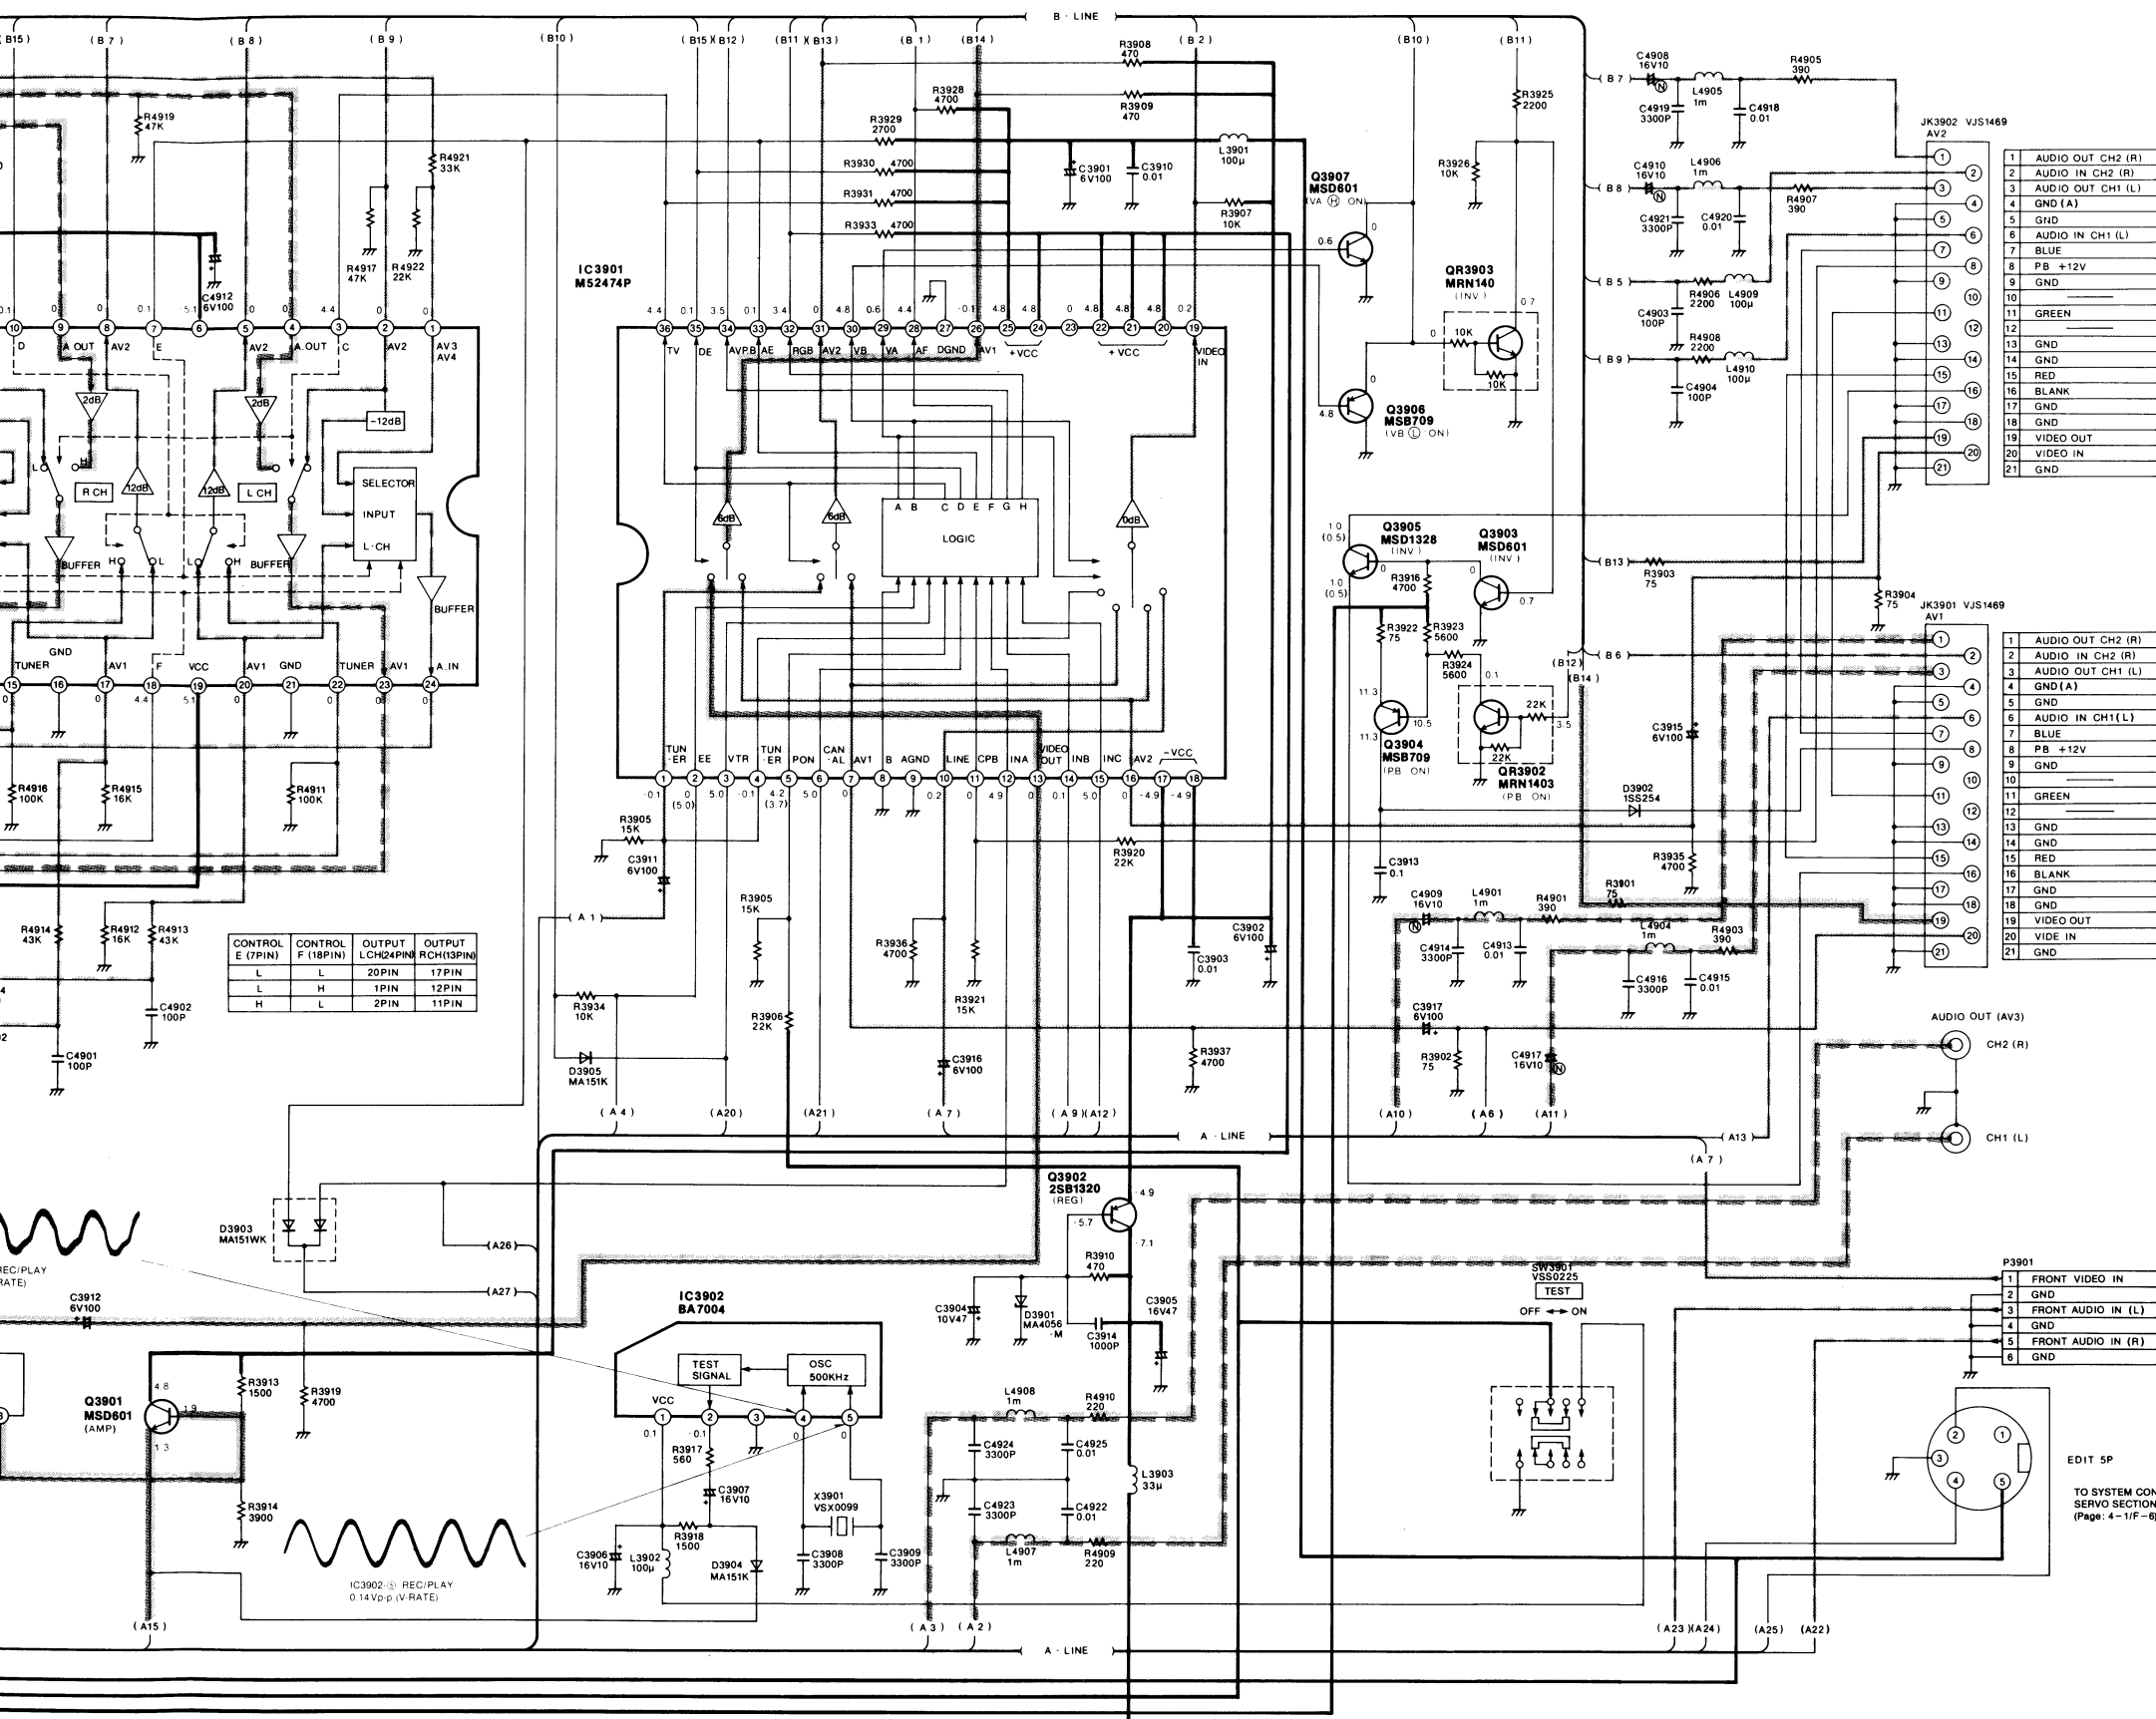


DO NOT USE ANY PART NUMBER SHOWN ON THIS SCHEMATIC DIAGRAM FOR ORDERING. WHEN YOU ORDER A PART, PLEASE REFER TO PARTS LIST.


NOTE: THE MEASUREMENT MODE OF THE DC VOLTAGE IN THE BRACKETS () ON THIS DIAGRAM IS RECORD MODE WITH PAL COLOUR SIGNAL. (SP MODE)
THE MEASUREMENT MODE OF THE DC VOLTAGE OUT OF THE BRACKETS ON THIS DIAGRAM IS PLAYBACK MODE WITH PAL COLOUR SIGNAL. (SP MODE)

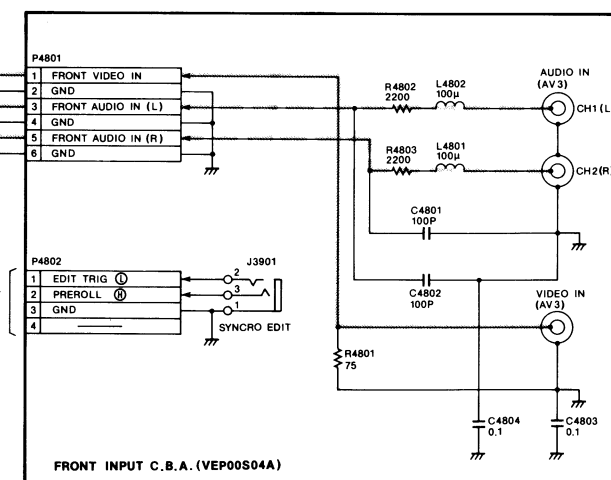

MAIN SIGNAL PATH IN REC MODE
MAIN SIGNAL PATH IN PLAYBACK MODE




TU




IGNAL

GRID CONTROL SIGNAL

TUNE CONTROL SIGNAL

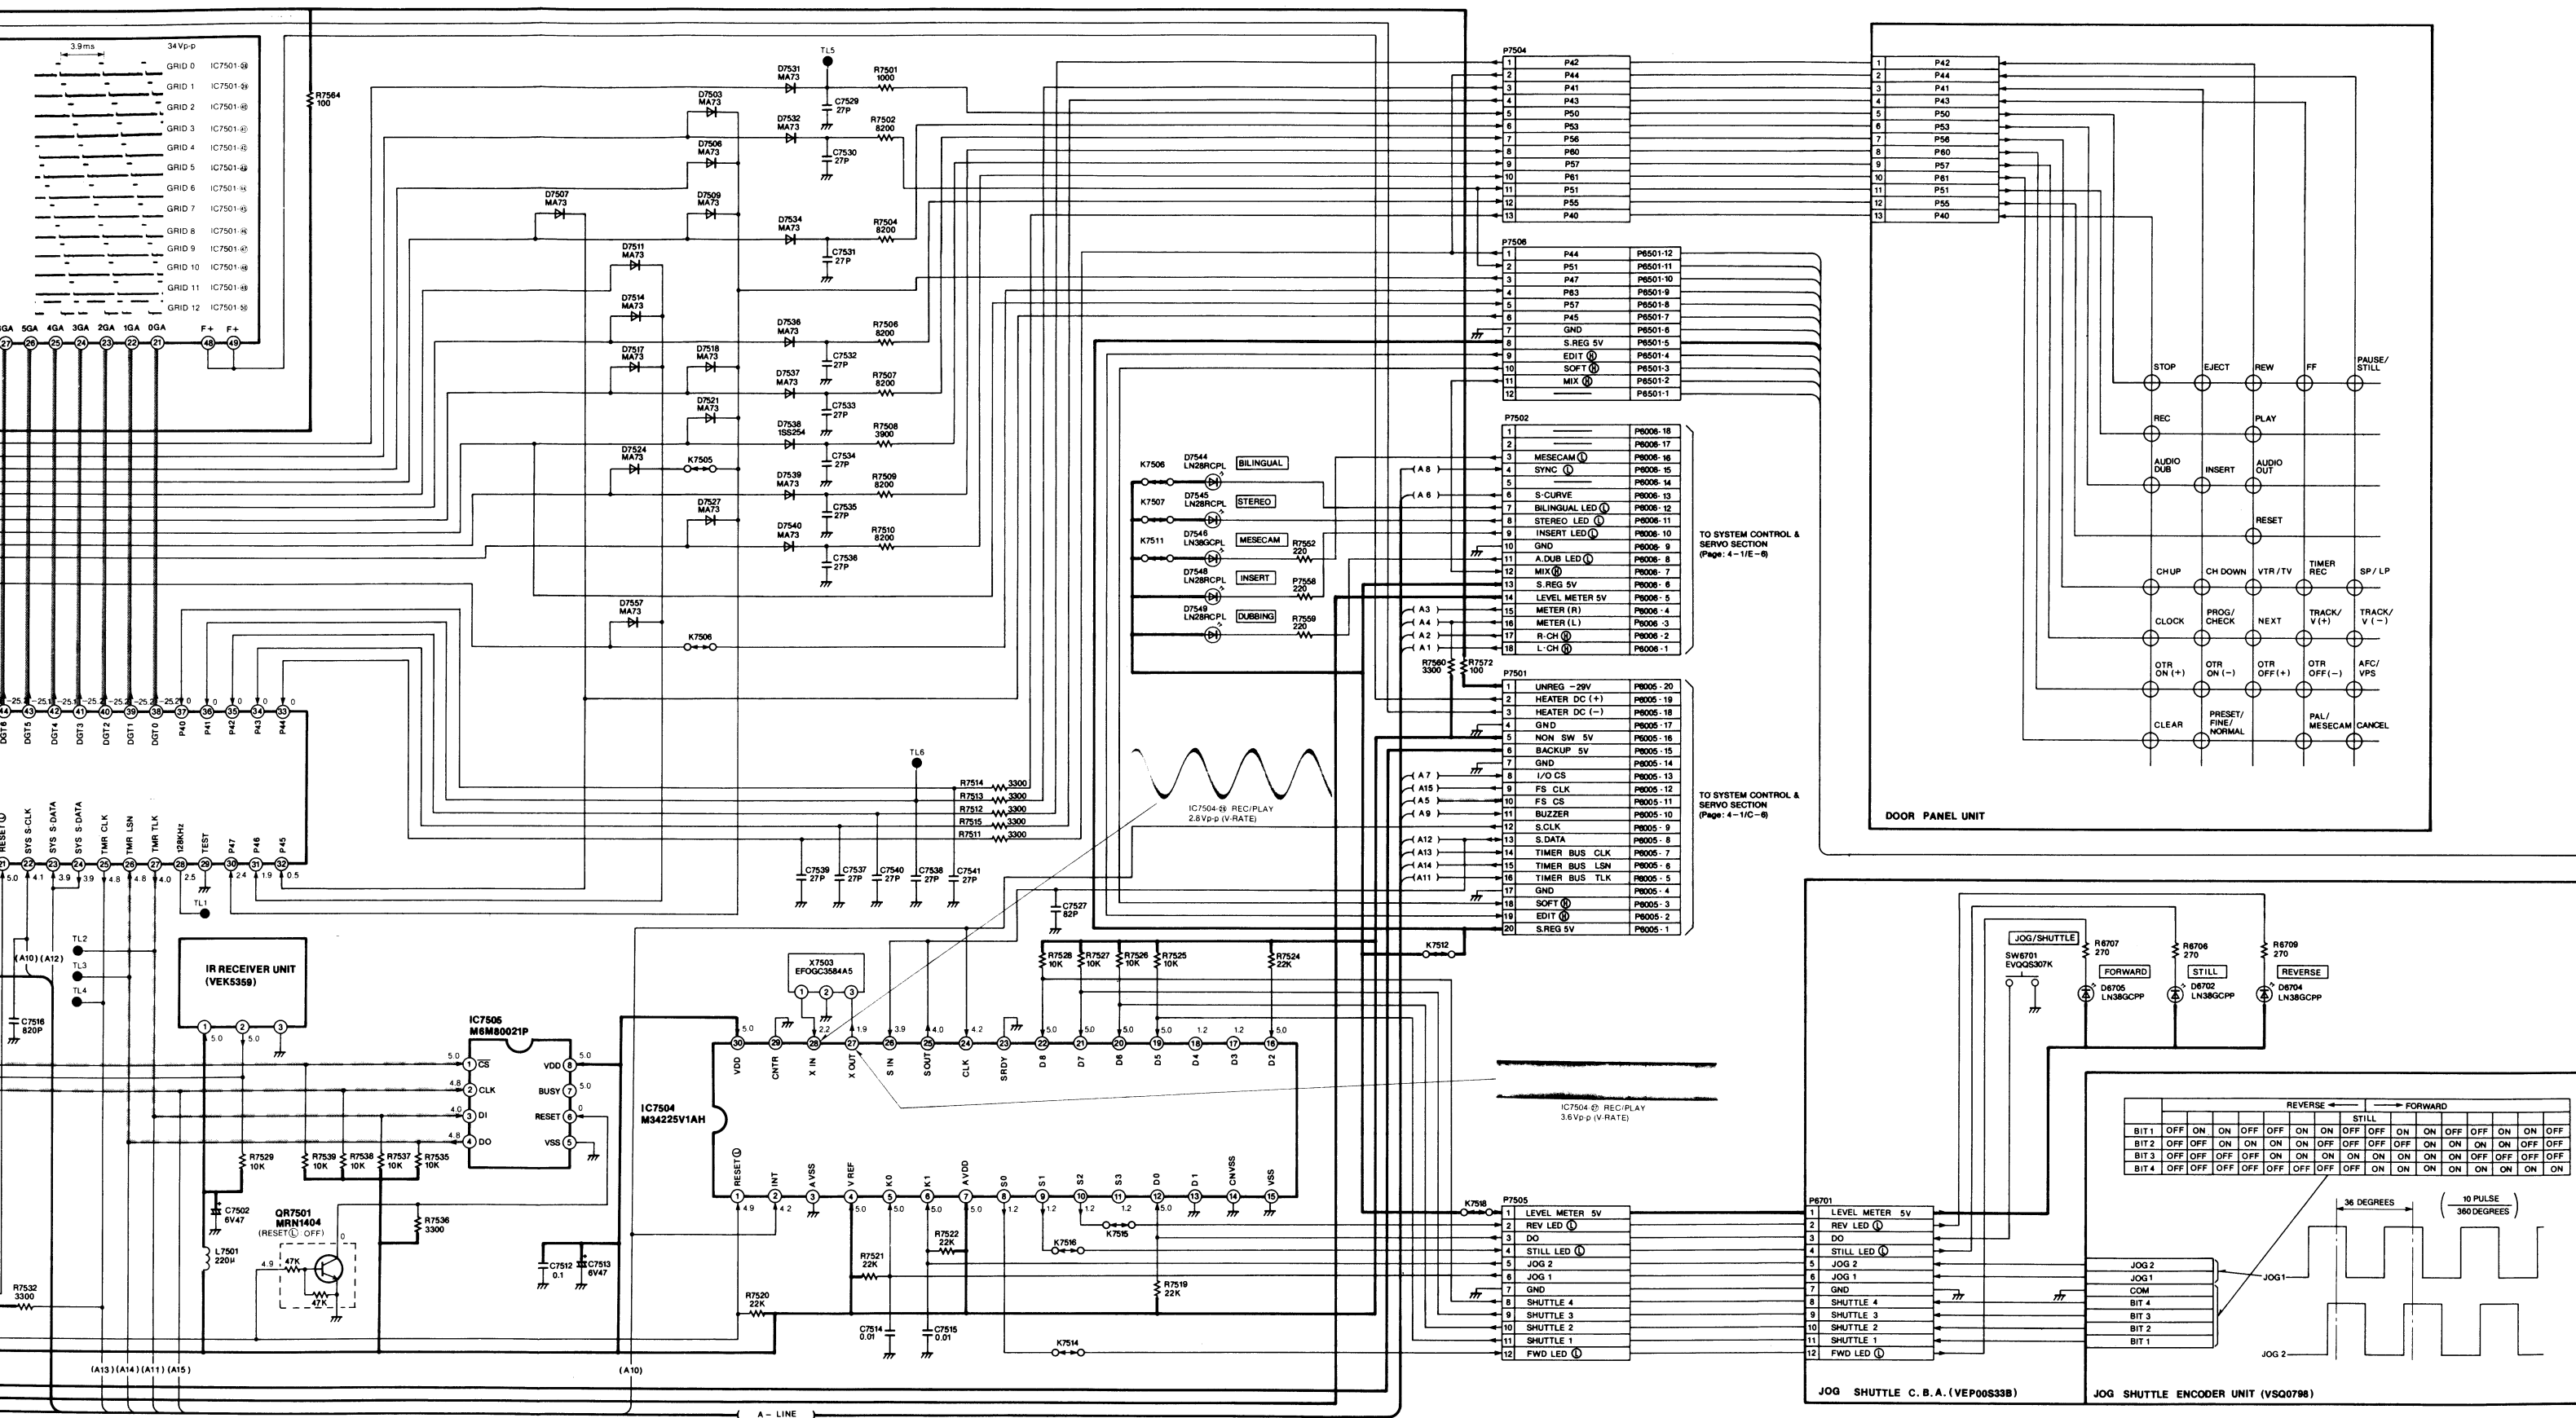


NOTE: THE MEASUREMENT MODE OF THE DC VOLTAGE ON THIS DIAGRAM IS STOP MODE

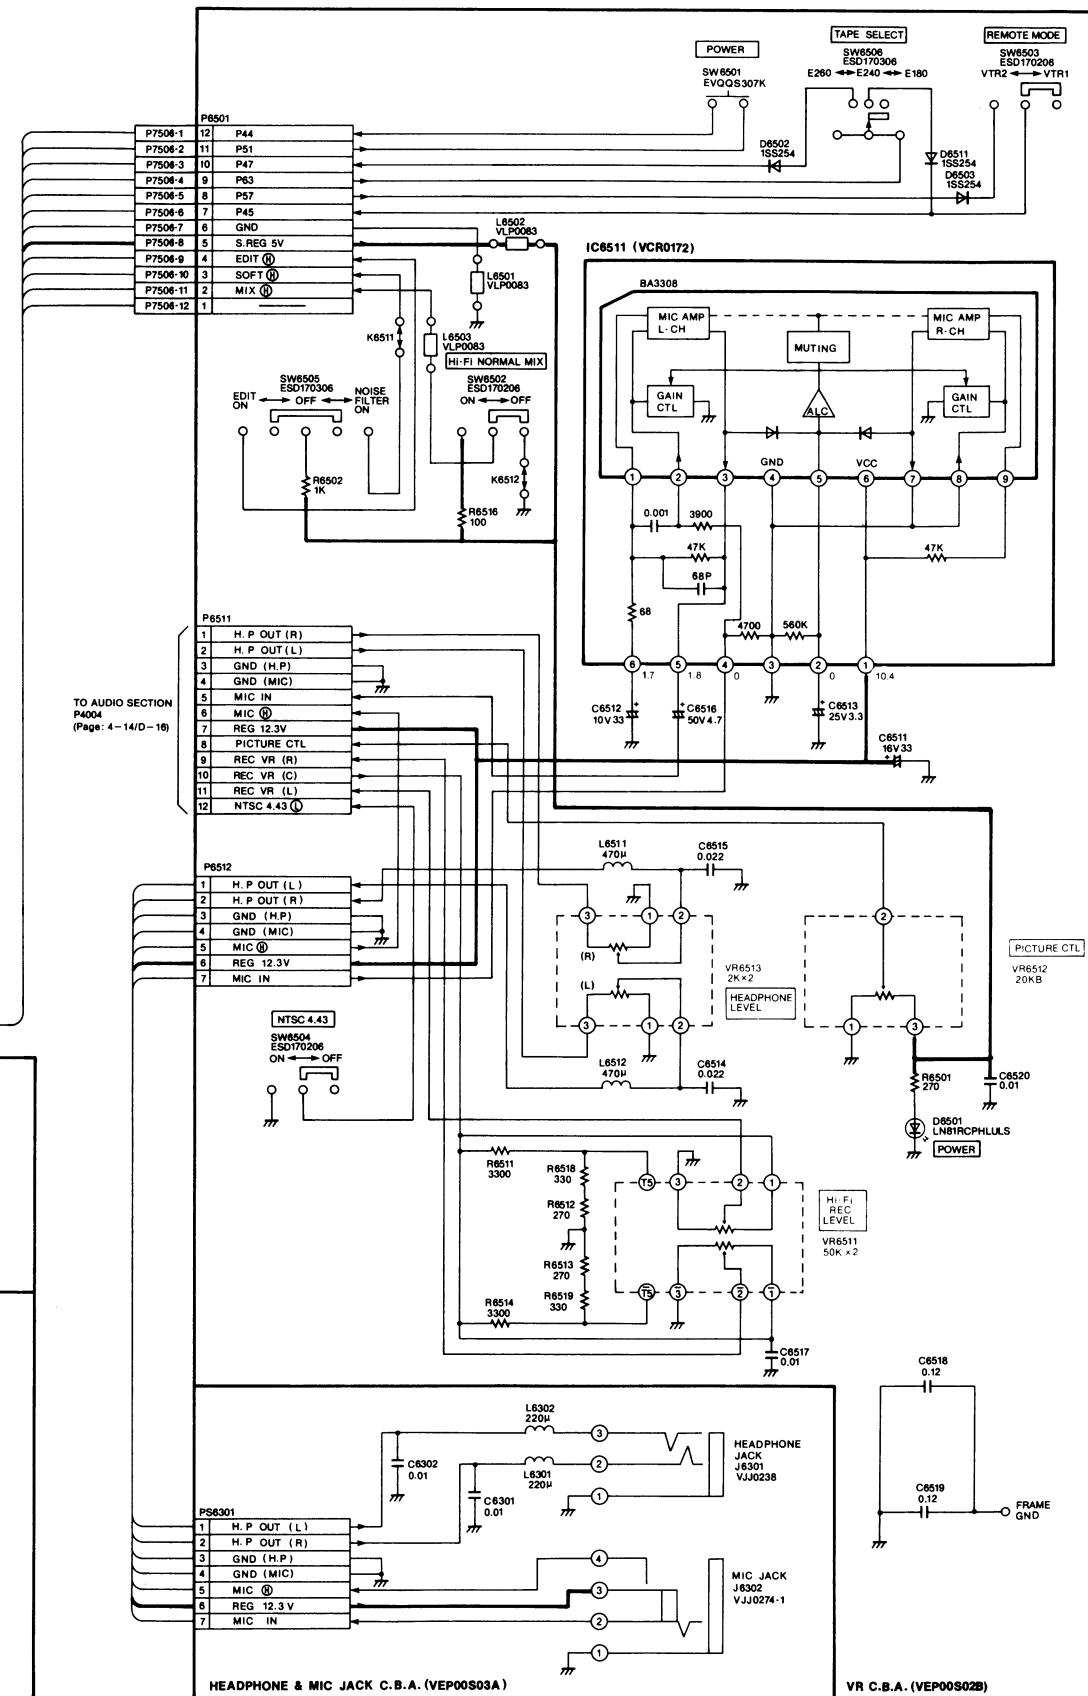


NOTE: DO NOT USE ANY PART NUMBER SHOWN ON THIS SCHEMATIC DIAGRAM FOR ORDERING. WHEN YOU ORDER A PART, PLEASE REFER TO PARTS LIST.

4—39




NOTE: DO NOT USE ANY PART NUMBER SHOWN ON THIS SCHEDULE FOR ORDERING. WHEN YOU ORDER A PART, PLEASE REFER TO THE PART NUMBER SHOWN IN THE PARTS LIST.

CODER PACK SCHEMATIC DIAGRAM

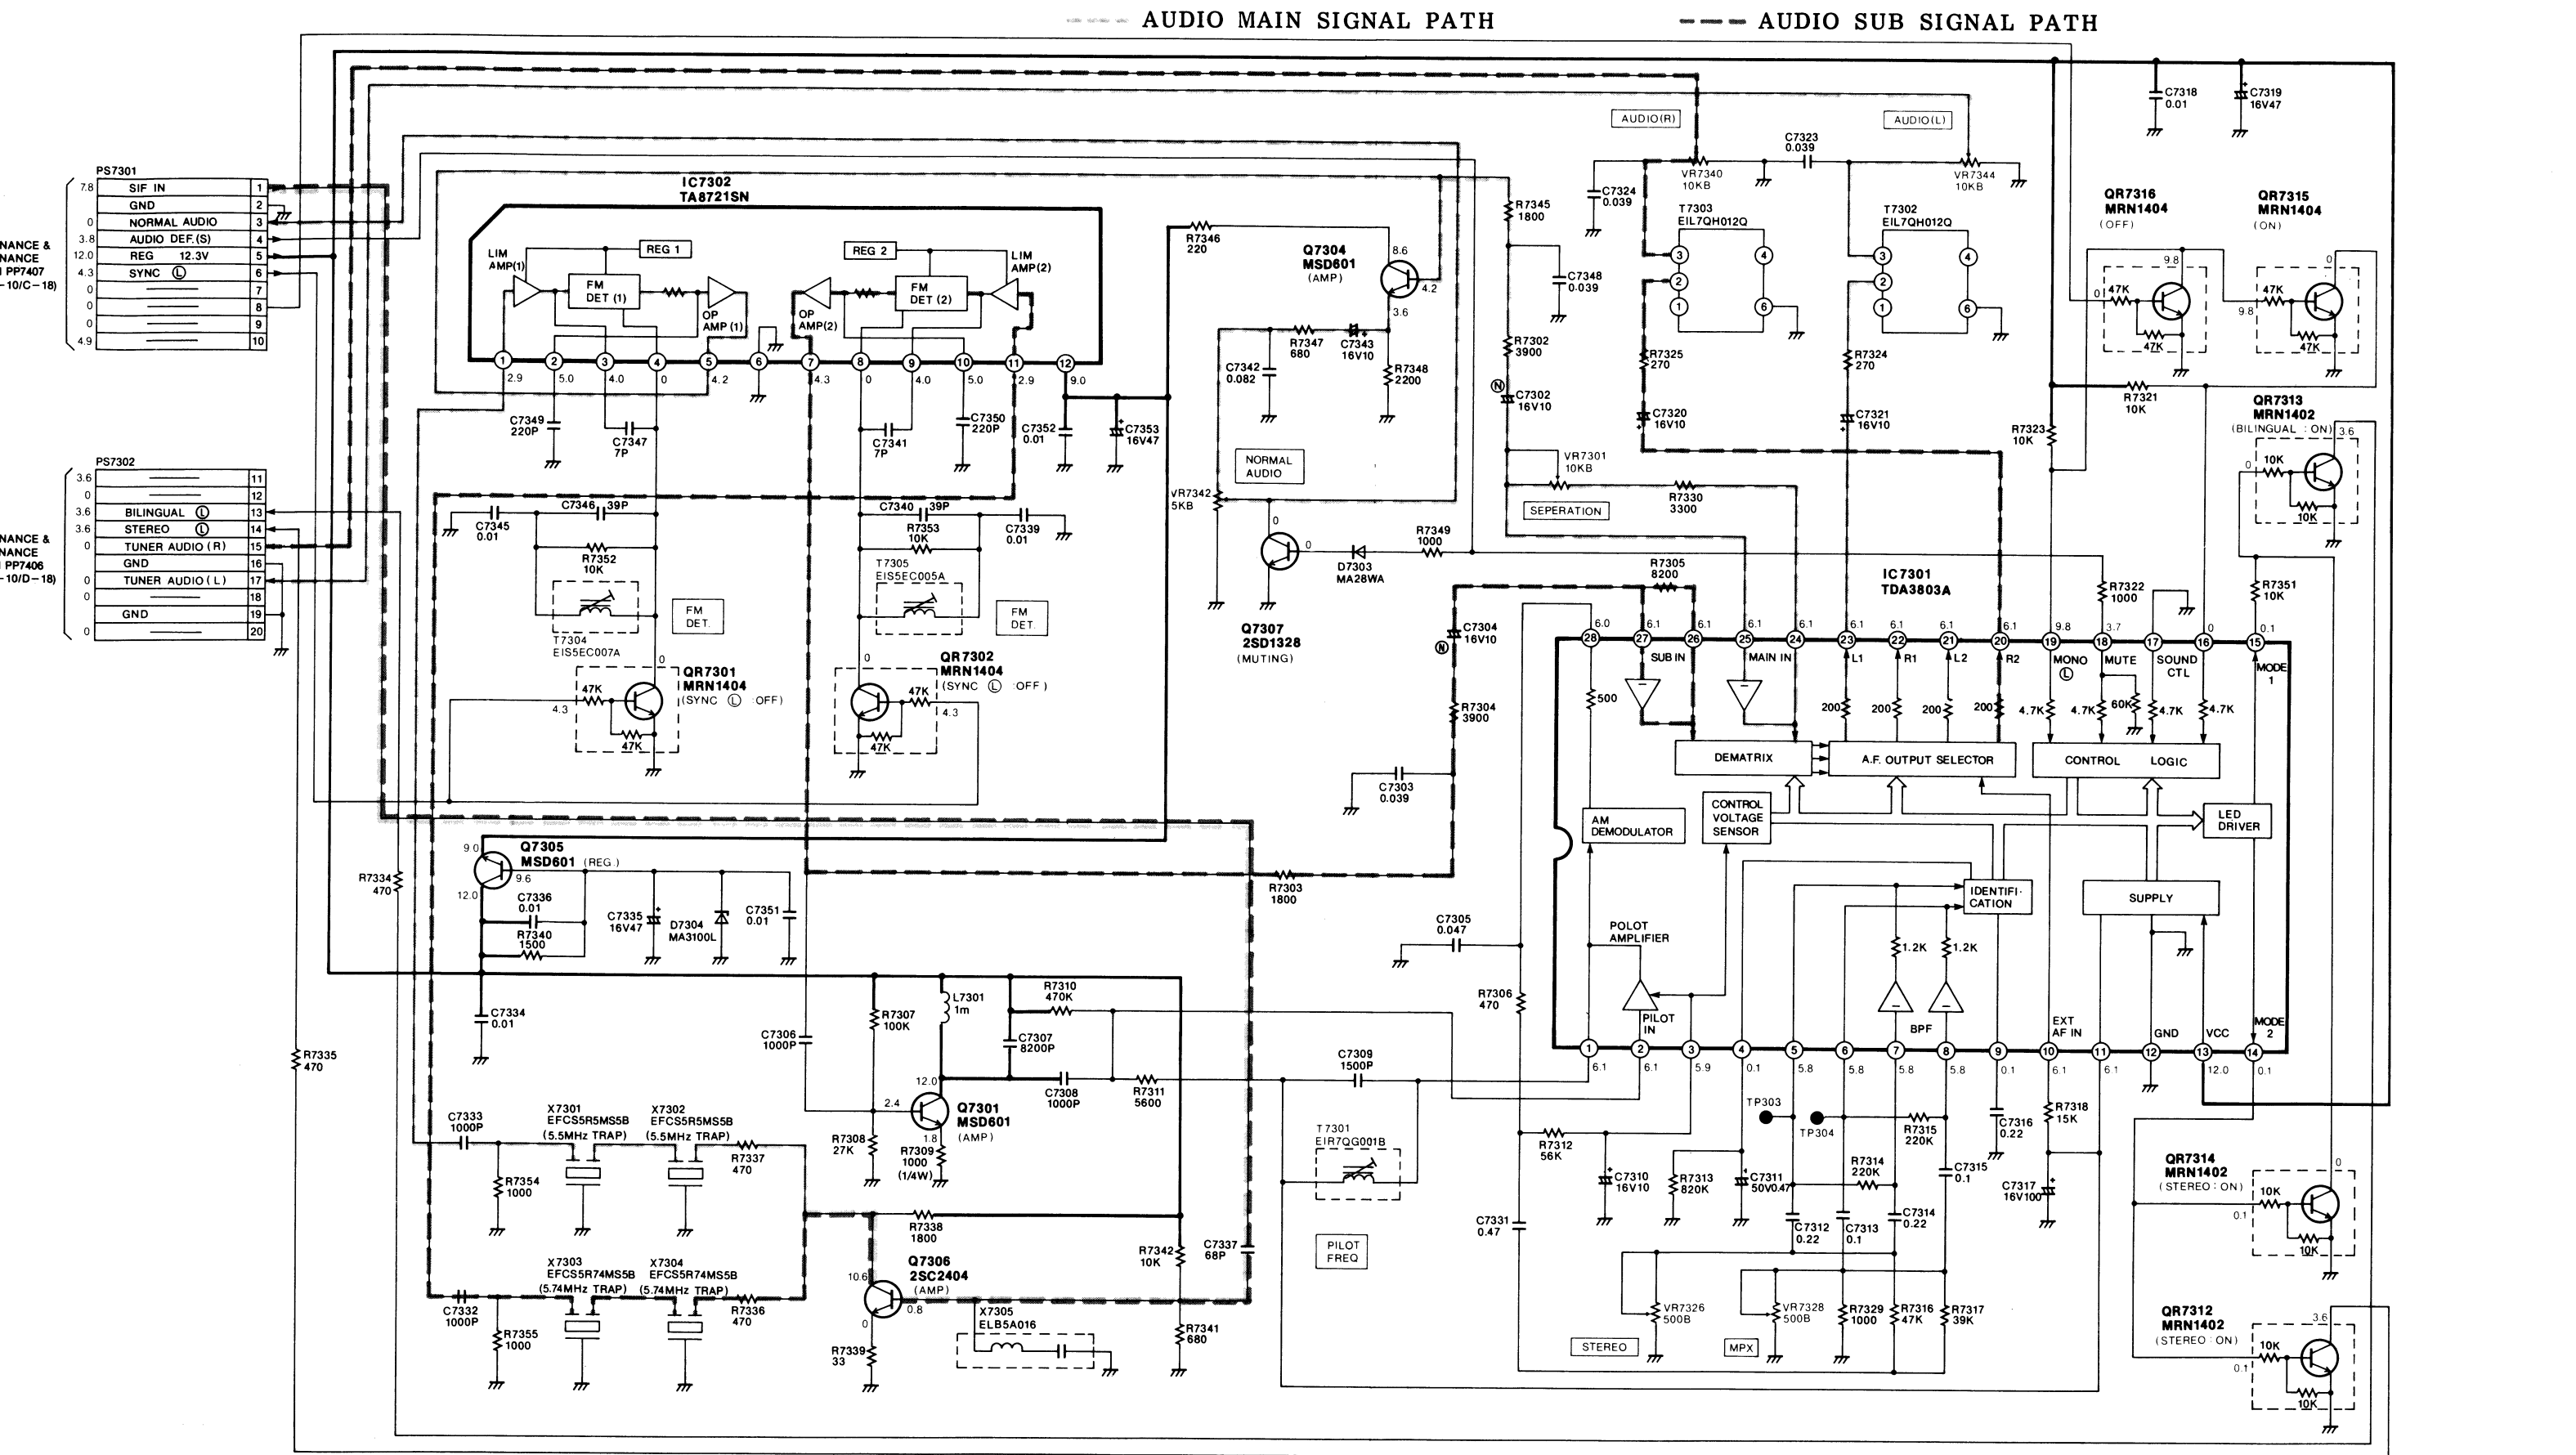


4-14. VPS PACK SCHEMATIC DIAGRAM

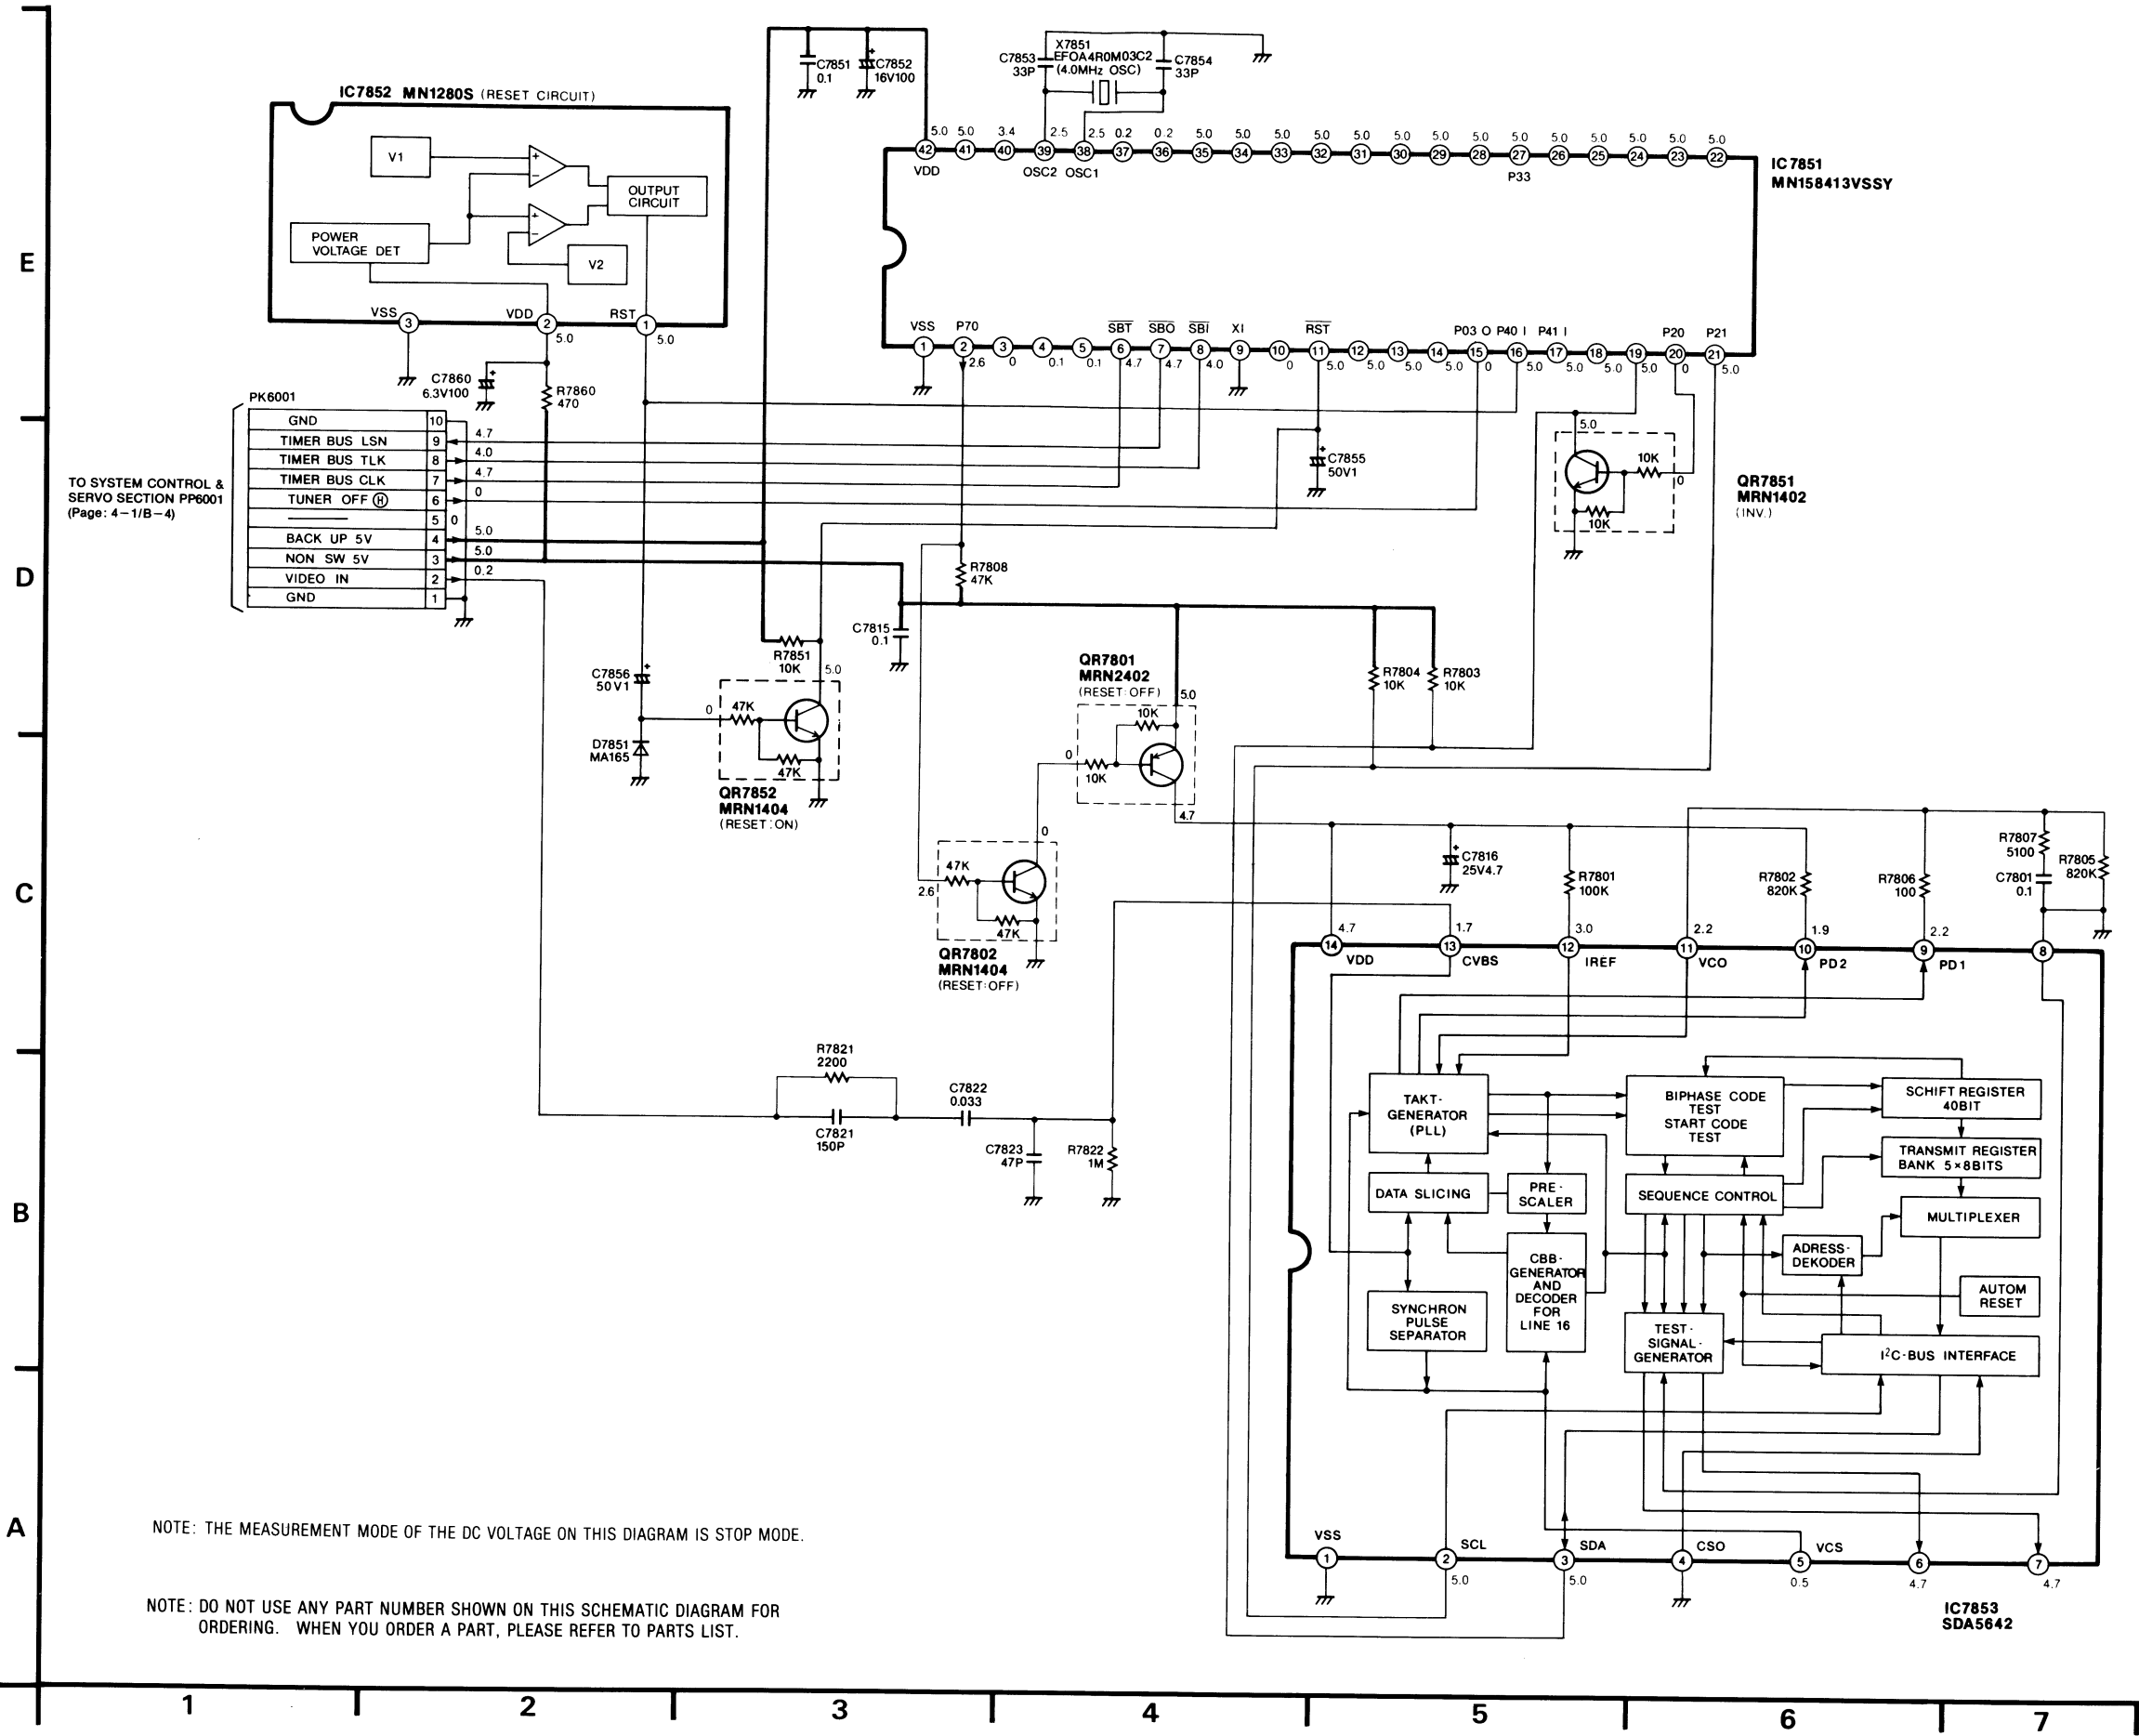


4-15. POWER C.B.A. (VEP01487A)

POWER C.B.A.	
Transistor	
Q1101	A-4
Integrated Circuit	
IC1101	A-3
IC1102	B-4
IC1103	A-4
Connector	
P1101	B-1
P1102	B-4


ADDRESS INFORMATION

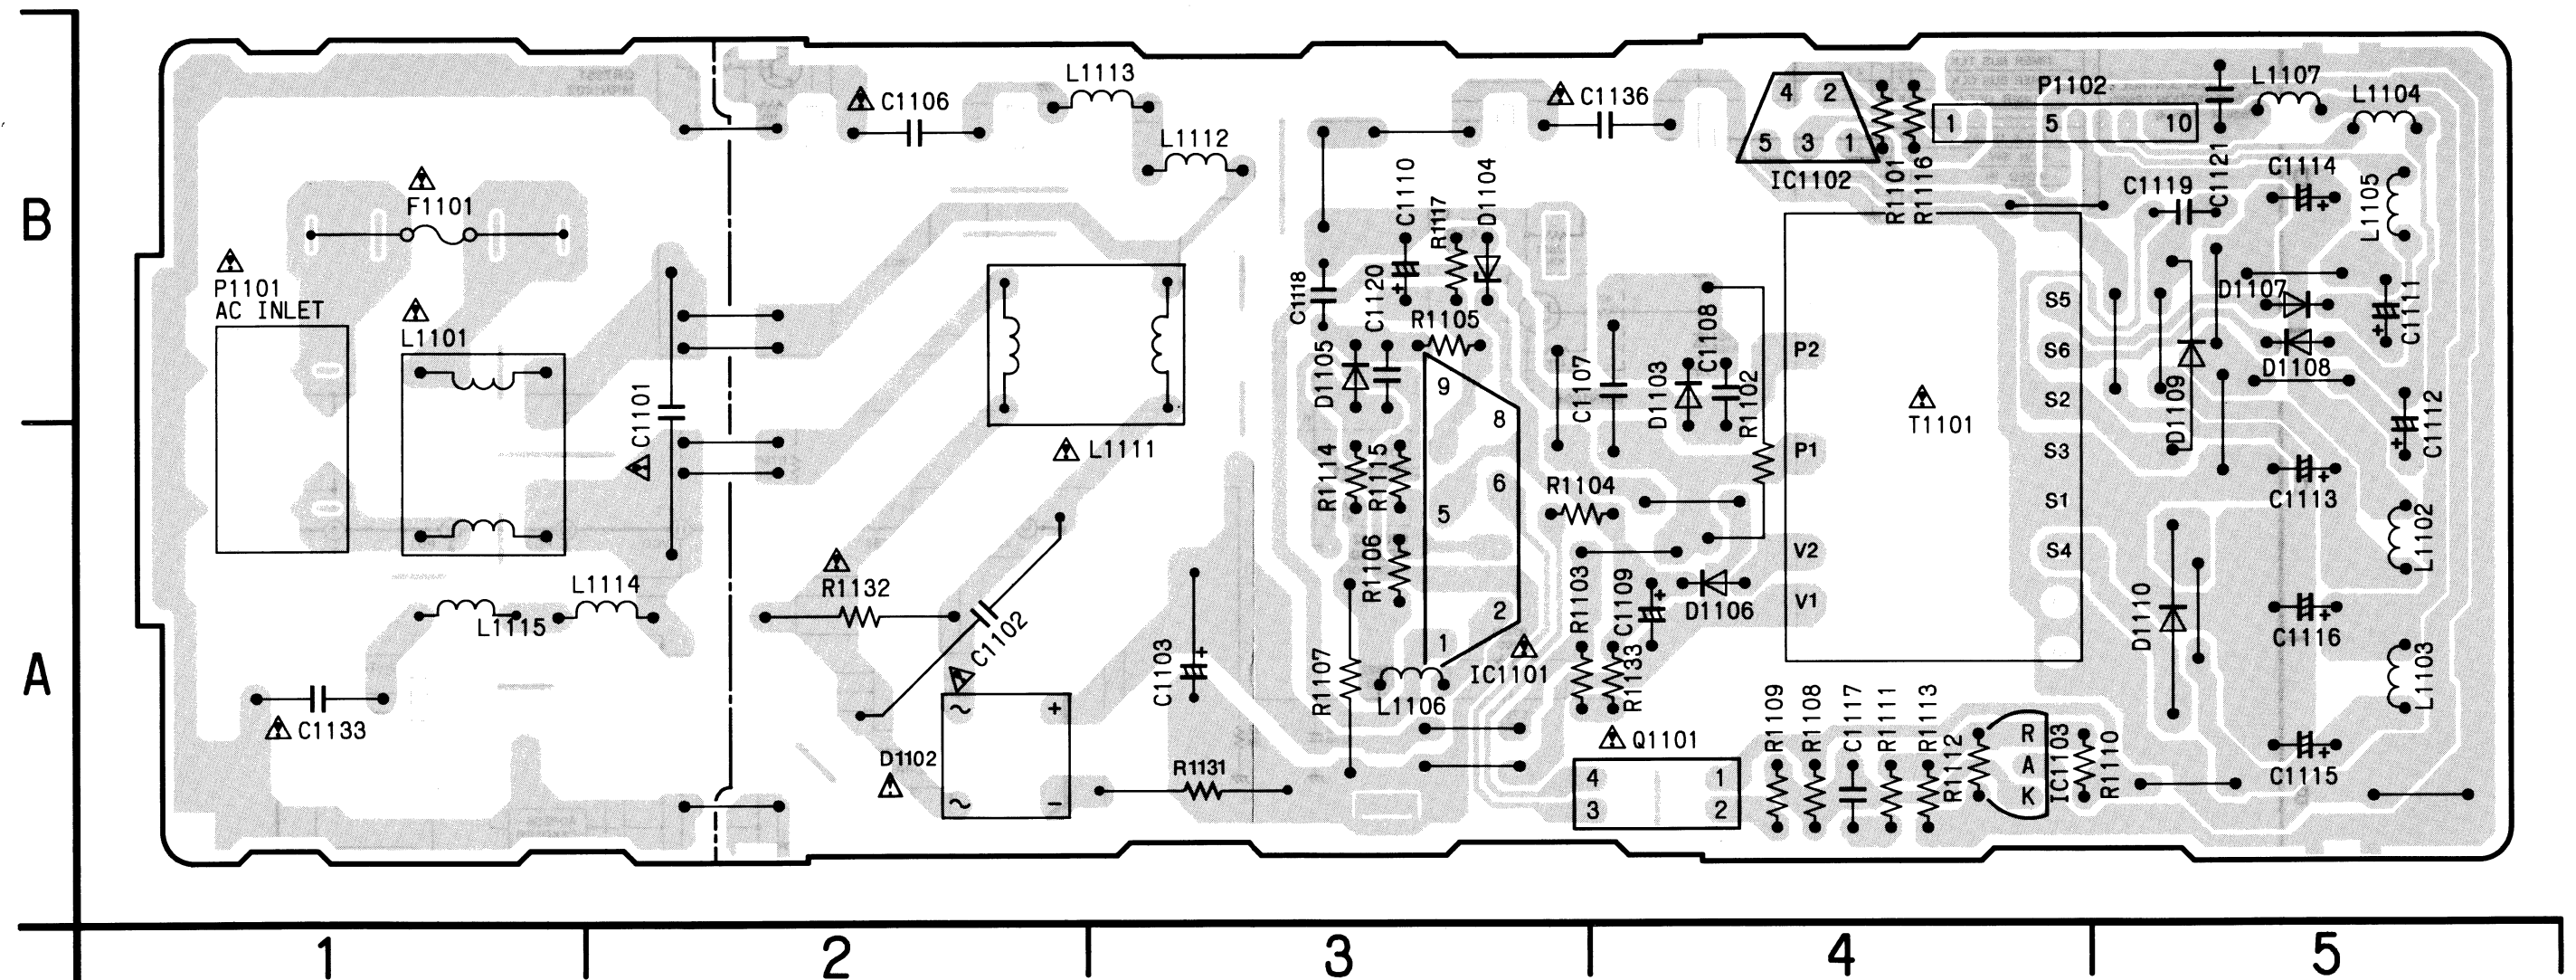

4-16. MAIN C.B.A. (VEP06795B)

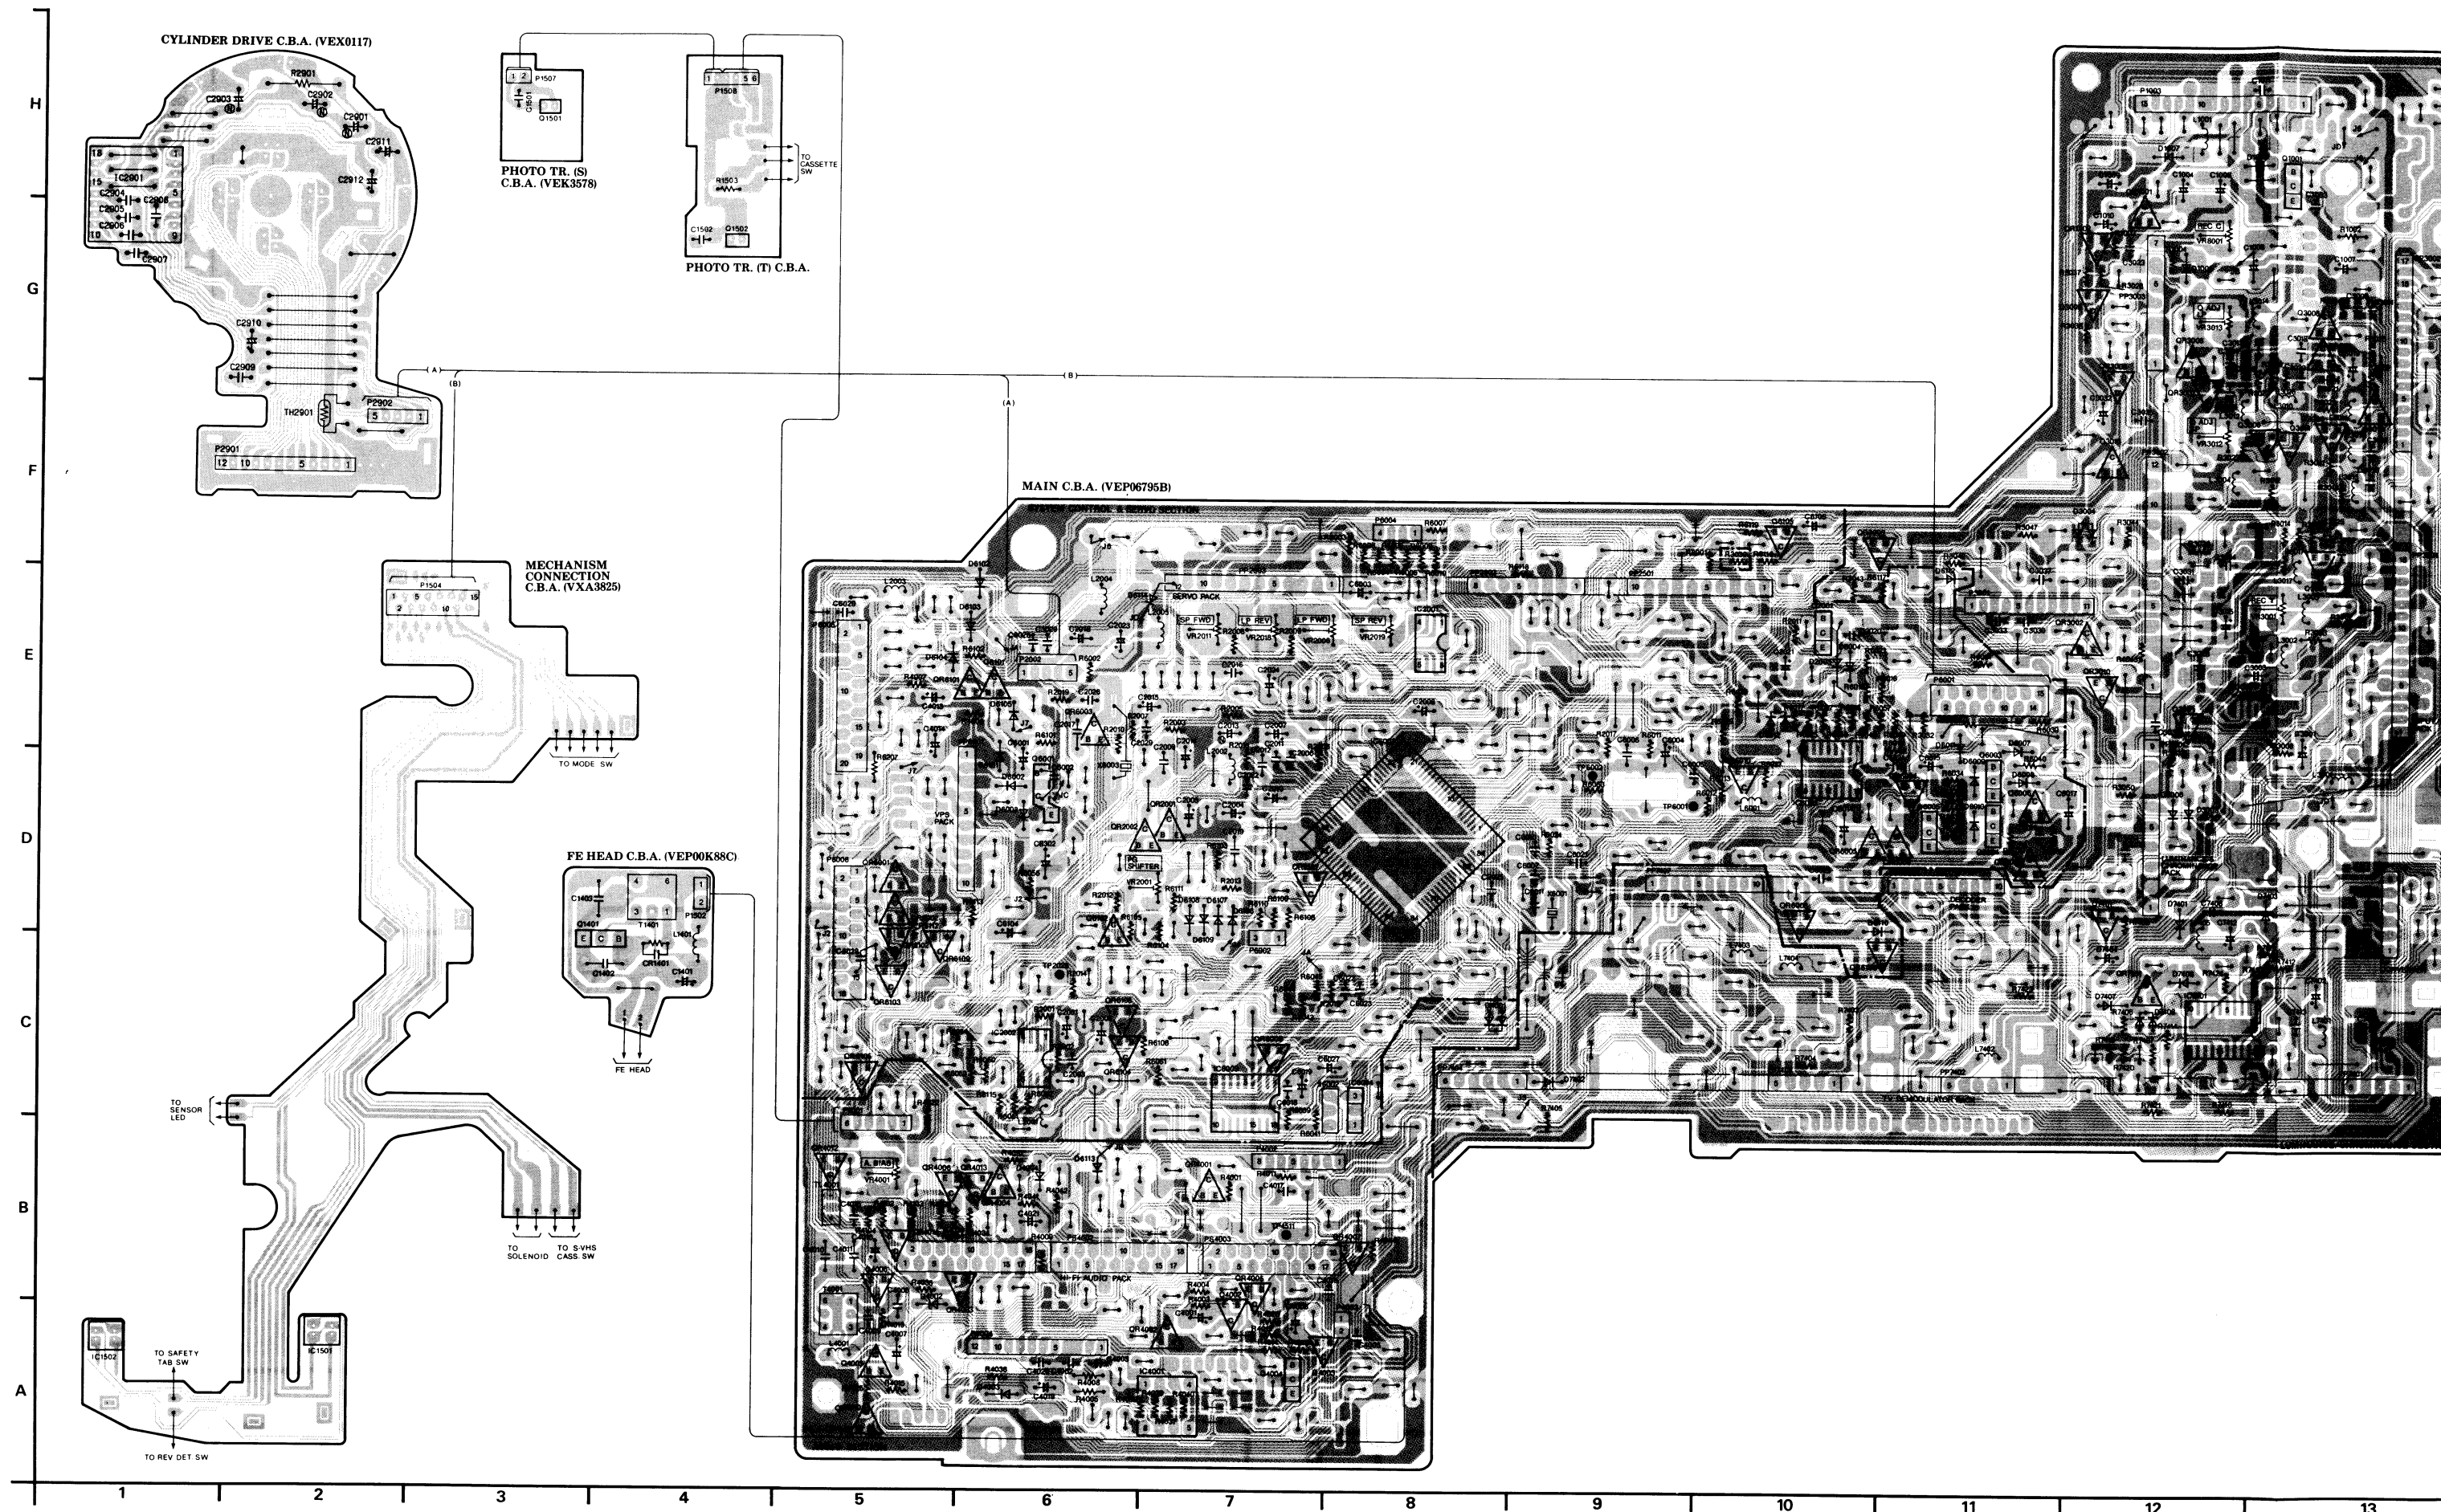

MAIN C.B.A. ADDRESS INFORMATION

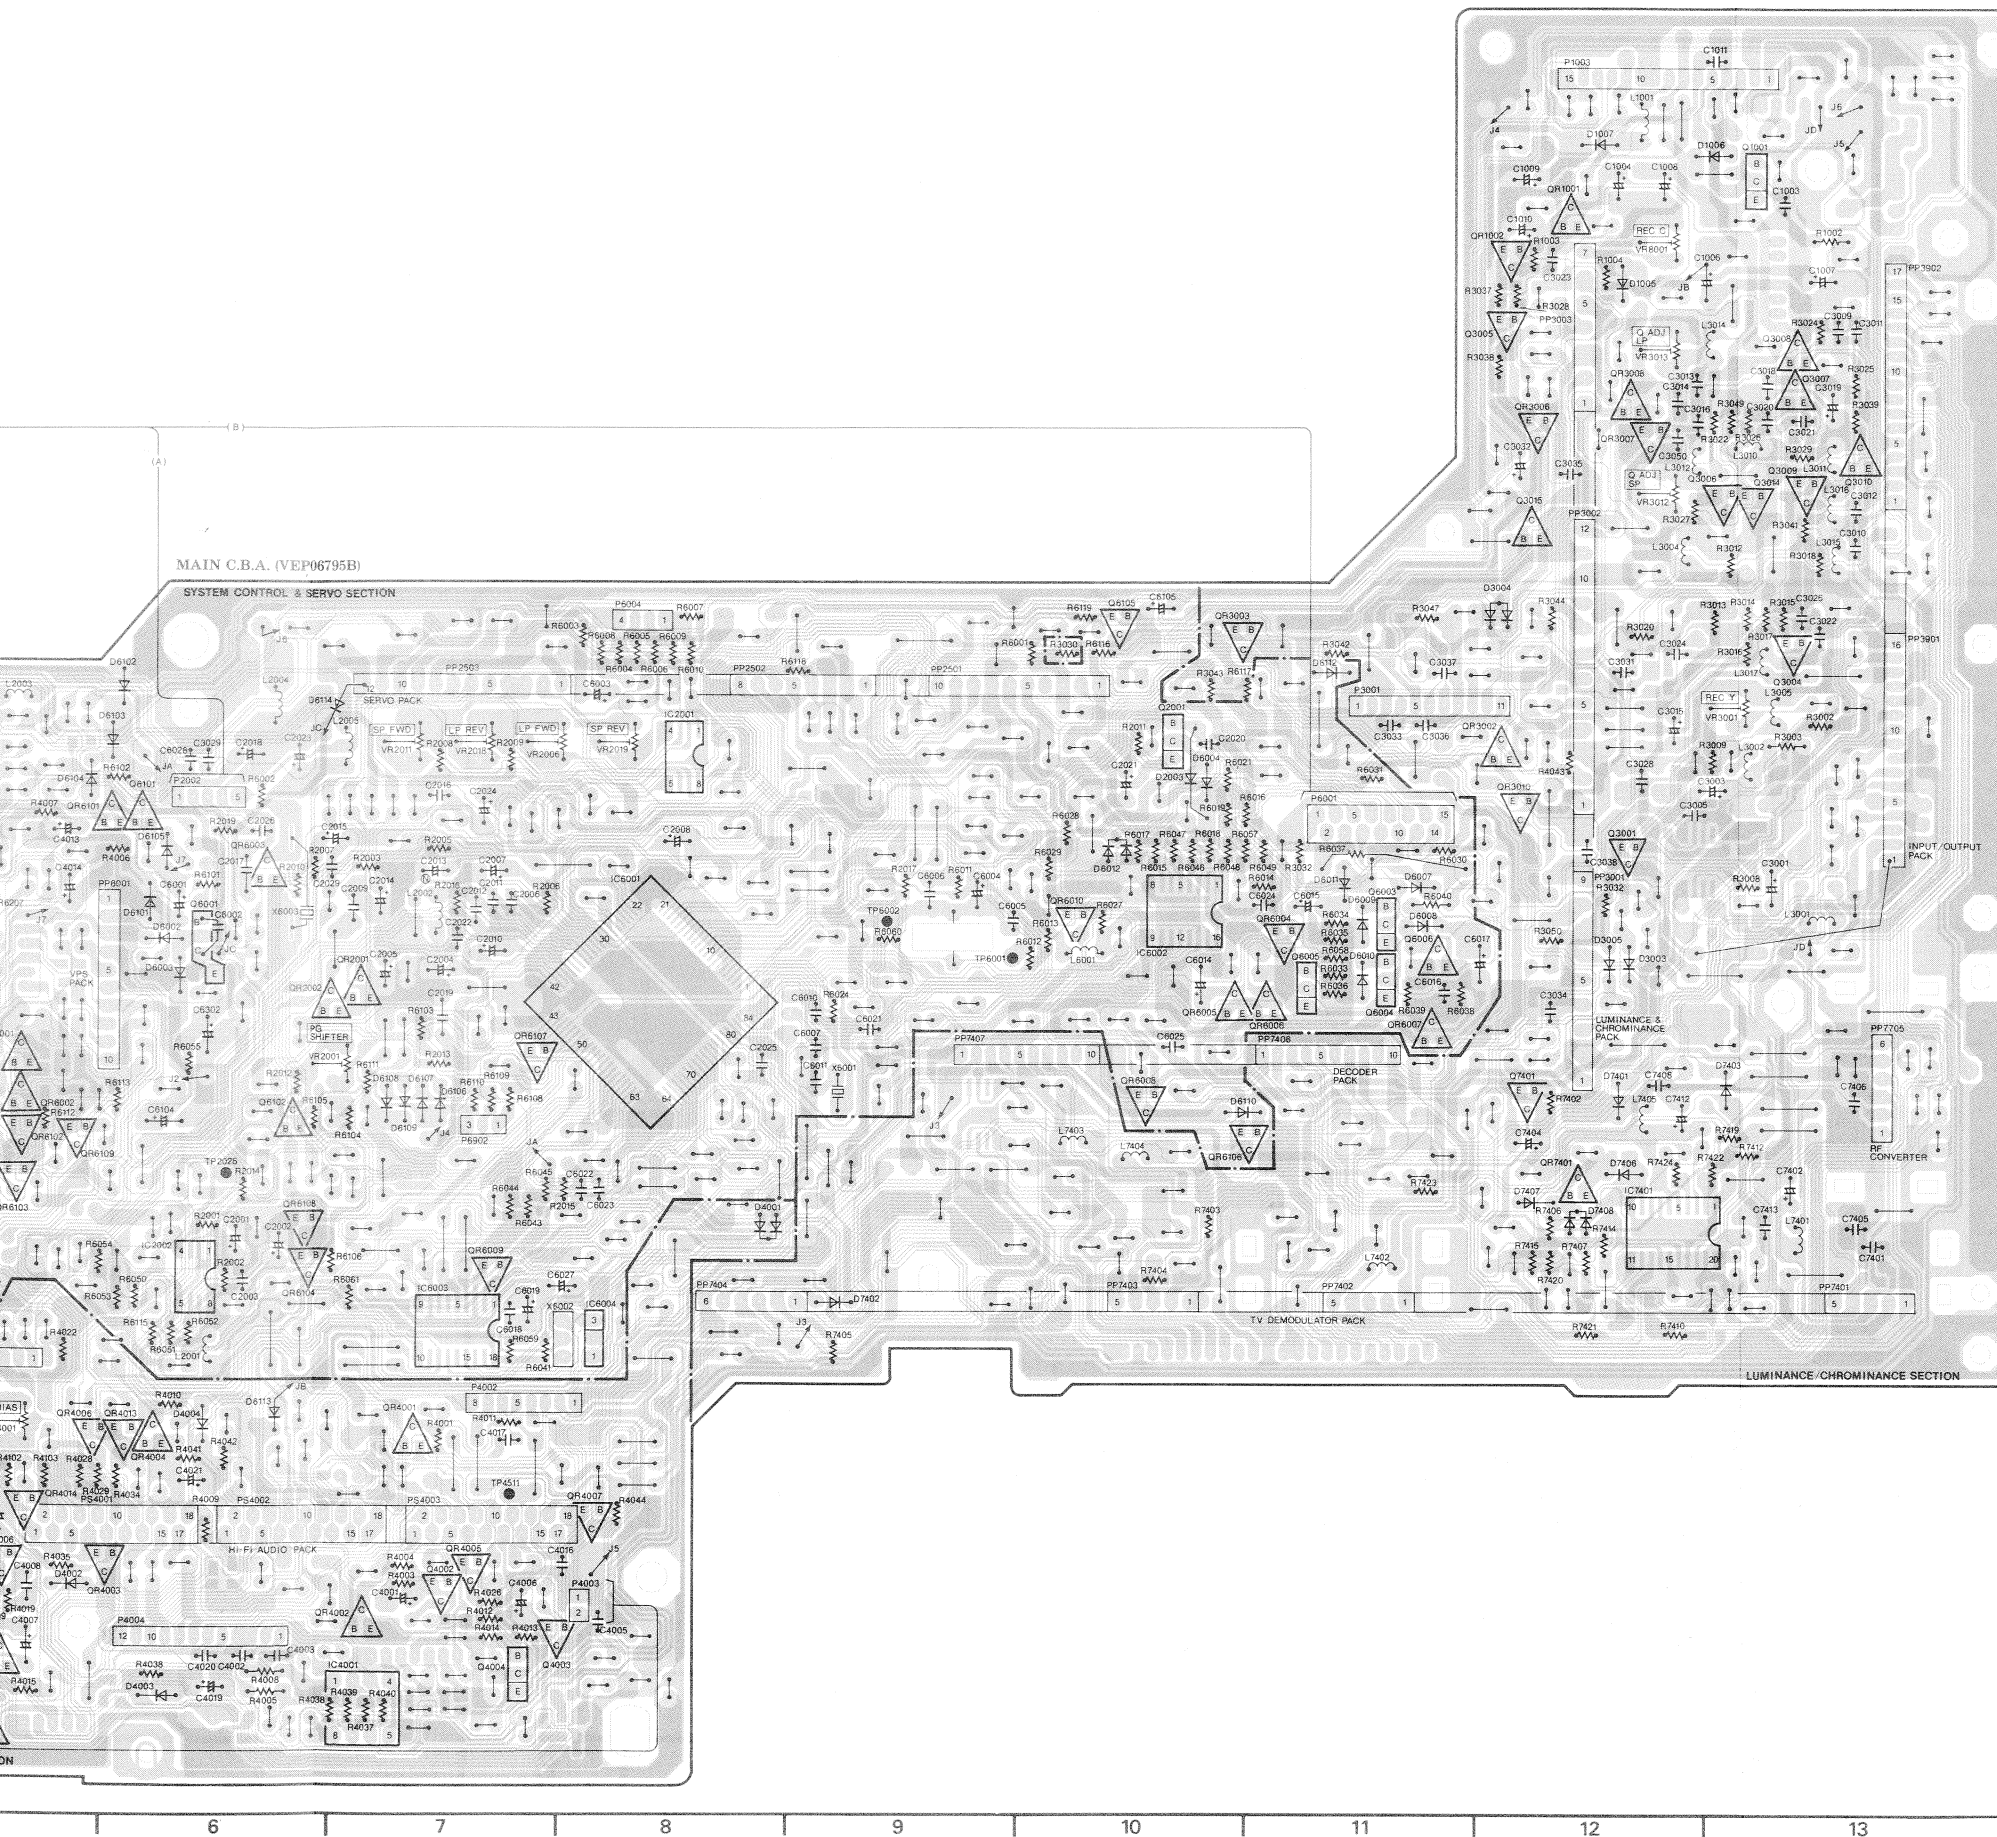

SYSTEM CONTROL & SERVO Section	
Transistor	
Q1401	D-3
Q1501	H-3
Q1502	G-4
Q2001	E-10
Q6001	D-6
Q6003	D-11
Q6004	D-11
Q6005	D-11
Q6006	D-11
Q6101	E-6
Q6102	C-6
Transistor & Resistor	
QR2001	D-7
QR2002	D-6
QR6001	D-5
QR6002	D-5
QR6003	E-6
QR6004	D-11
QR6005	D-10
QR6006	D-11
QR6007	D-11
QR6008	D-10
QR6009	C-7
QR6010	D-10
QR6101	E-6
QR6102	C-5
QR6103	C-5
QR6104	C-6
QR6105	F-10
QR6106	C-11
QR6107	C-7
QR6108	C-6
QR6109	C-5
Integrated Circuit	
IC1501	A-2
IC1502	A-1
IC2001	E-8
IC2002	C-6
IC2901	H-1
IC6001	E-8
IC6002	D-10
IC6003	C-7
IC6004	C-8
Test Point	
TP2026	C-6
TP6001	D-9
TP6002	D-9
Adjustment	
VR2001	D-7
VR2006	E-7
VR2011	E-7
VR2018	E-7
VR2019	E-8
Connector	
P1502	D-4
P1504	E-3
P1507	H-3
P1508	H-4
P2002	E-6
P2901	F-2
P2902	F-2
P6001	E-11
P6004	F-8
P6005	E-5
P6006	D-5
P6902	C-7
PP2501	E-9
PP2502	E-8
PP2503	E-7
PP6001	E-6

ADDRESS INFORMATION

LUMINANCE & CHROMINANCE Section	
Transistor	
Q1001	H-13
Q3001	E-12
Q3004	E-13
Q3005	G-12
Q3006	F-13
Q3007	G-13
Q3008	G-13
Q3009	F-13
Q3010	F-13
Q3014	F-13
Q3015	F-12
Q7401	D-12
Transistor & Resistor	
QR1001	H-12
QR1002	G-12
QR3002	E-12
QR3003	F-10
QR3005	G-12
QR3006	G-12
QR3007	F-12
QR3008	G-13
QR3010	E-12
QR7401	C-12
Integrated Circuit	
IC7401	C-12
Adjustment	
VR3001	E-13
VR3012	F-12
VR3013	G-12
VR8001	G-12
Connector	
P1003	H-12
P3001	E-11
PP3001	E-12
PP3003	G-12
PP3901	E-13
PP3902	G-13
PP7401	C-13
PP7402	C-11
PP7403	C-10
PP7404	C-8
PP7705	D-13
PP7406	D-11
PP7407	D-9

ADDRESS INFORMATION

AUDIO Section	
Transistor	
Q4002	A-7
Q4003	A-8
Q4005	A-5
Q4006	B-5
Transistor & Resistor	
QR4001	B-7
QR4002	A-7
QR4003	B-6
QR4004	B-6
QR4005	B-7
QR4006	B-5
QR4007	B-8
QR4010	A-5
QR4012	B-5
QR4013	B-6
QR4014	B-5
Integrated Circuit	
IC4001	A-7
Test Point	
TP4511	B-7
Adjustment	
VR4001	B-5
Connector	
P4001	B-5
P4002	B-7
P4003	A-8
P4004	A-6
PS4001	B-6
PS4002	B-6
PS4003	B-7


ADDRESS INFORMATION

4-17. LUMINANCE & CHROMINANCE PACK C.B.A. (VEP03928A)

4-18. S-VHS

LUMINANCE & CHROMINANCE PACK C.B.A.			
Transistor		Integrated Circuit	
Q301	B-5	IC301	B-6
Q302	B-5	IC302	A-4
Q303	B-5	IC801	B-1
Q801	A-4	Adjustment	
Q802	A-3		
Q803	B-2		
Q804	B-3		
Q805	B-3	VR301	A-6
Transistor & Resistor		VR801	B-2
		VR802	B-3
		VR803	B-2
		Connector	
QR301	B-4		
QR303	B-6		
QR304	B-5		
QR305	C-5		
QR306	B-4	PK301	C-5
QR801	C-5	PK302	C-3
QR803	B-2	PK303	C-2
QR805	B-4	PP801	A-1
QR807	C-4	PP802	A-2
		PP803	A-3
		PP804	B-2

ADDRESS INFORMATION

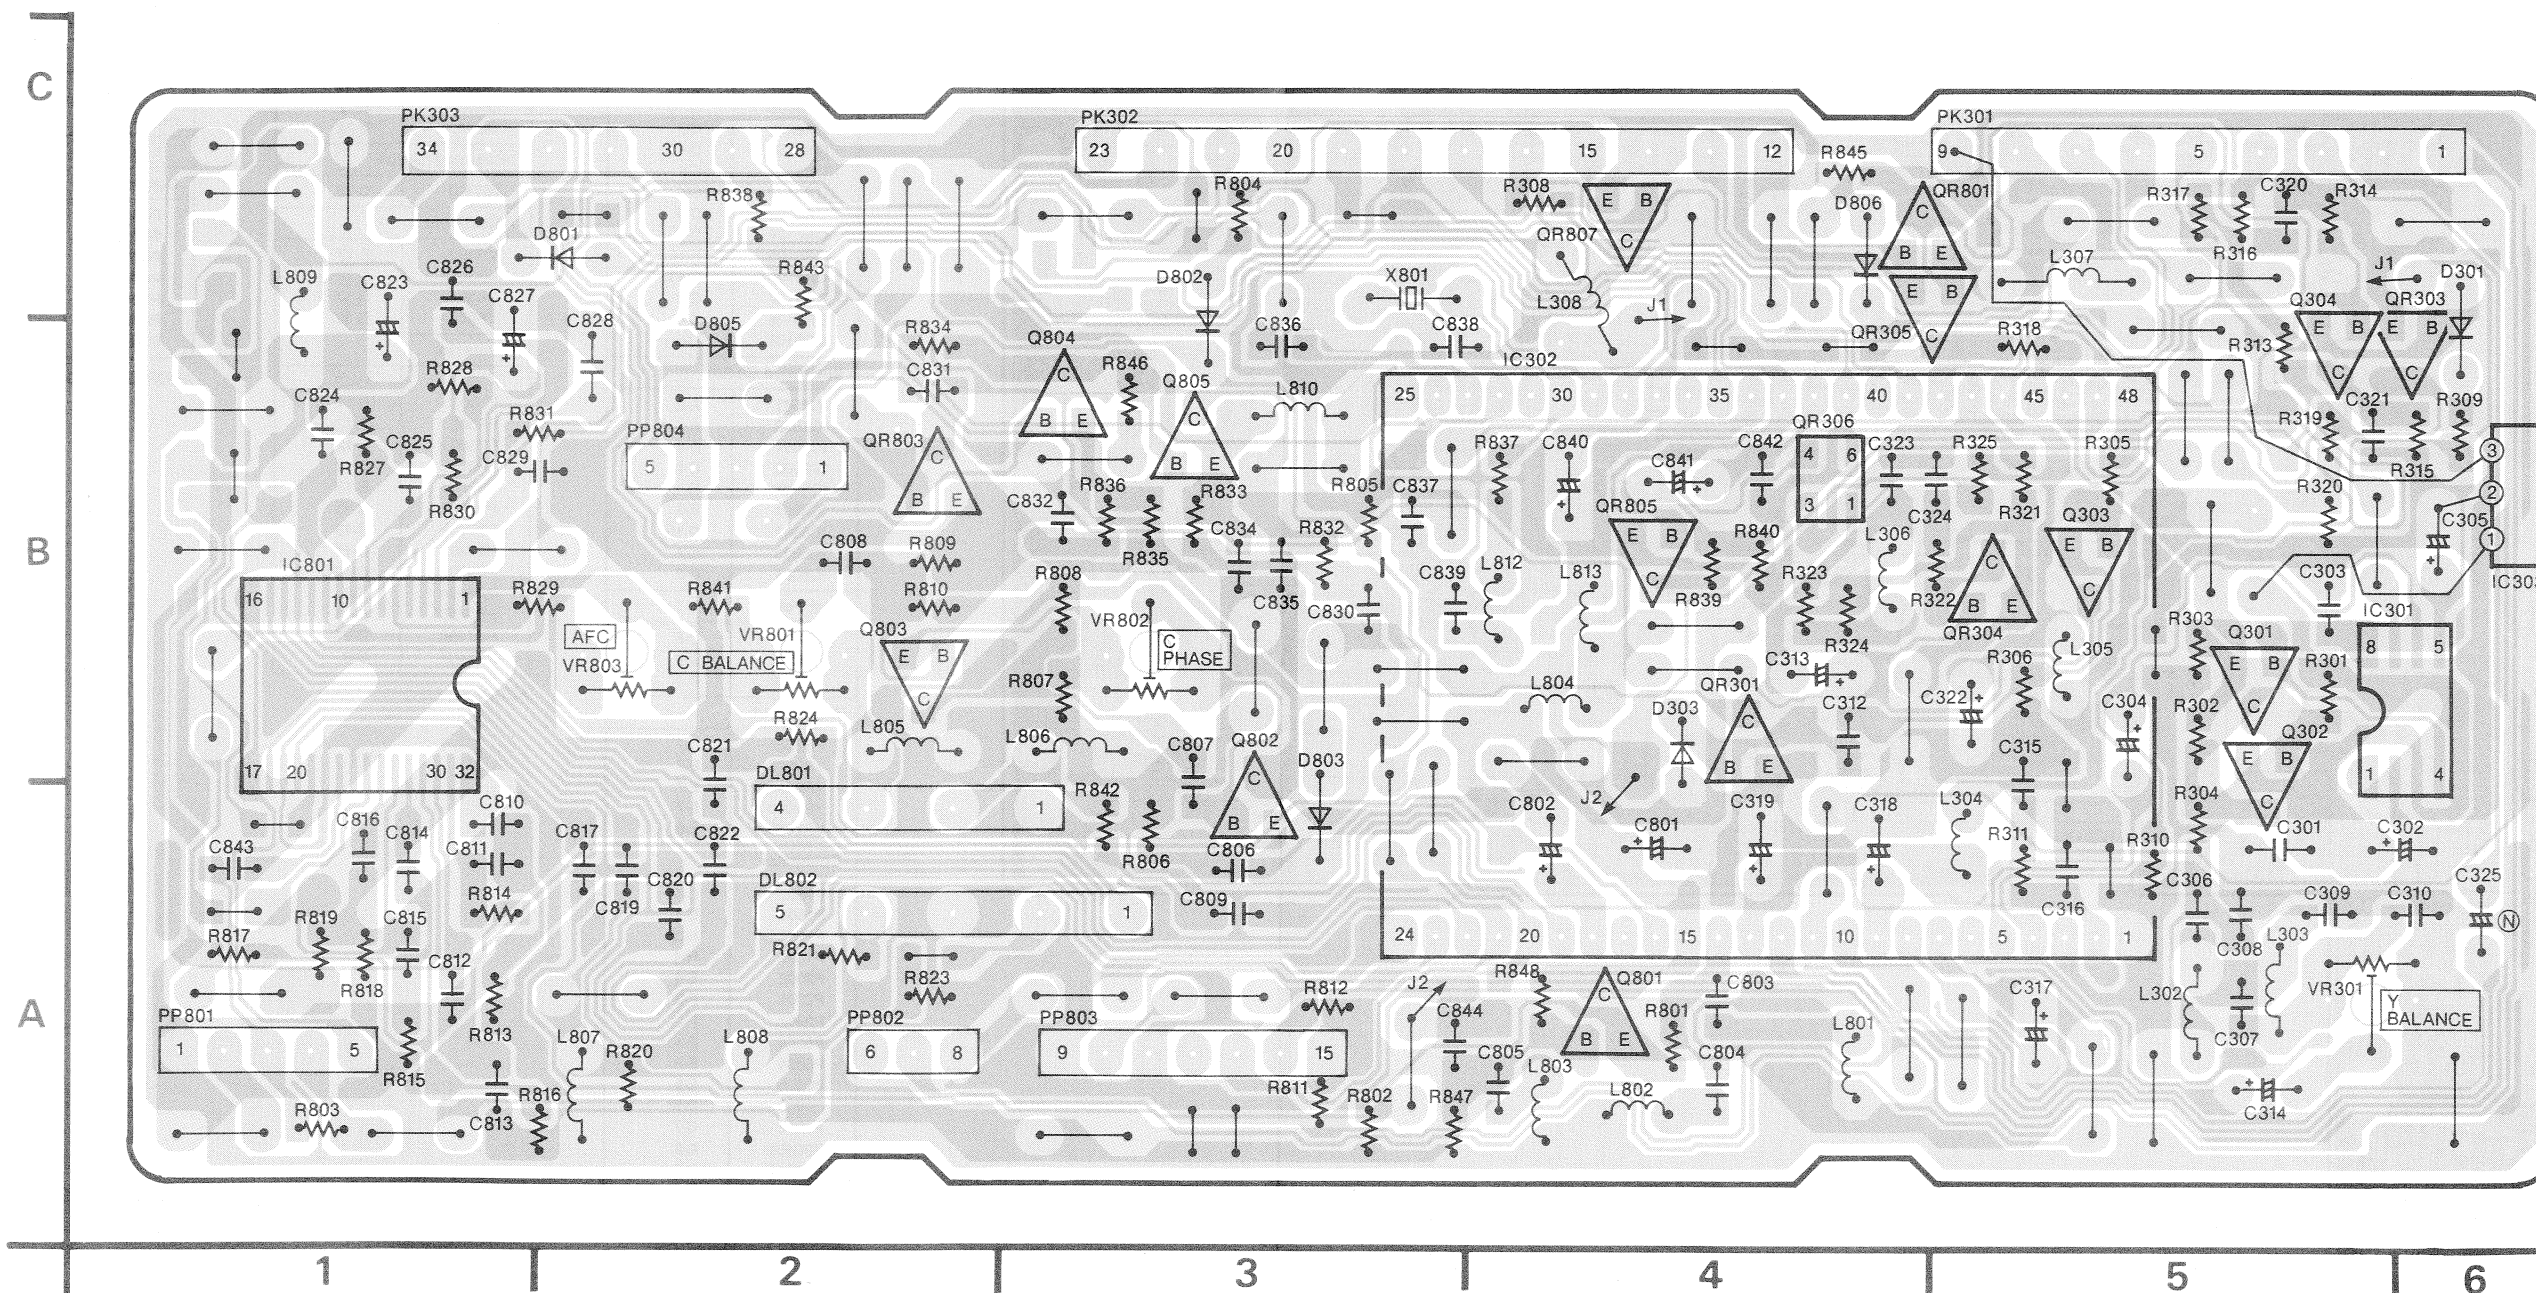


LUMINANCE & CHROMINANCE PACK C.B.A.			
Transistor		Integrated Circuit	
Q301	B-5	IC301	B-6
Q302	B-5	IC302	A-4
Q303	B-5	IC801	B-1
Q801	A-4	Adjustment	
Q802	A-3		
Q803	B-2		
Q804	B-3		
Q805	B-3	VR301	A-6
Transistor & Resistor		VR801	B-2
		VR802	B-3
		VR803	B-2
		Connector	
QR301	B-4		
QR303	B-6		
QR304	B-5		
QR305	C-5		
QR306	B-4		
QR801	C-5		
QR803	B-2		
QR805	B-4		
QR807	C-4		
		PK301	C-5
		PK302	C-3
		PK303	C-2
		PP801	A-1
		PP802	A-2
		PP803	A-3
		PP804	B-2


ADDRESS INFORMATION

S-VHS P.B. PACK C.B.A.	
Transistor	
Q5001	A-1
Q5002	A-1
Q5003	A-1
Q5005	A-1
Q5006	A-1
Q5007	B-2
Q5008	B-2
Q5009	A-2
Q5010	A-2
Q5011	A-2
Q5012	A-2
Q5013	A-2
Connector	
PS5001	A-2


ADDRESS INFORMATION

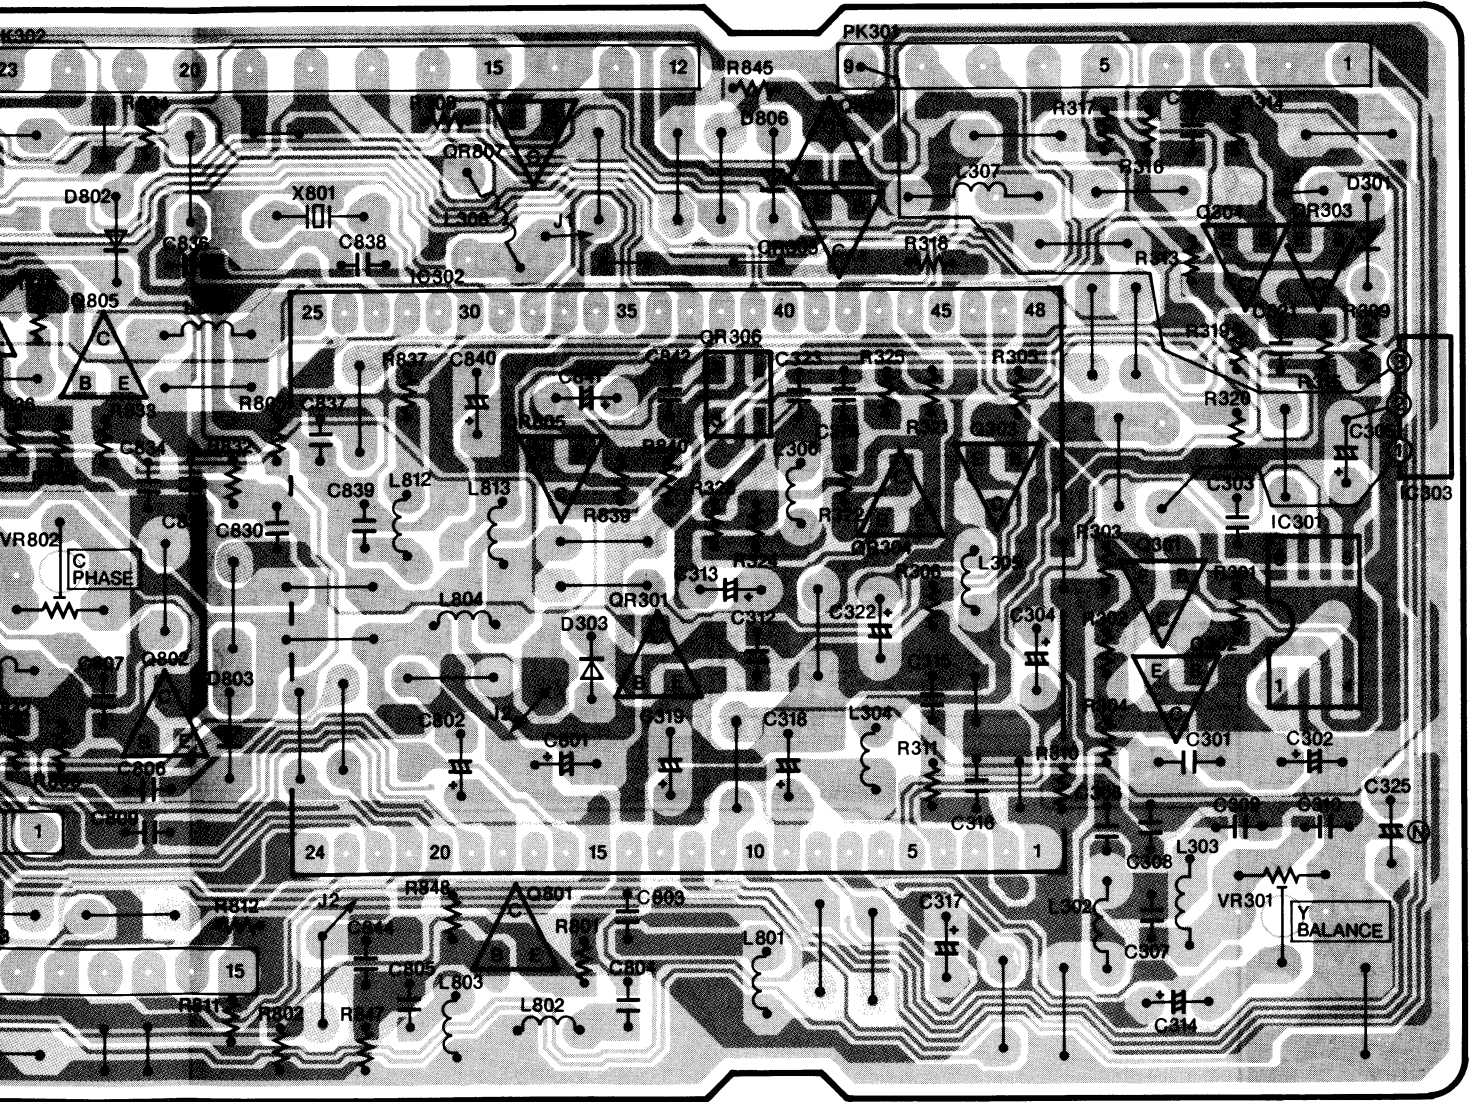

3 4 5 6

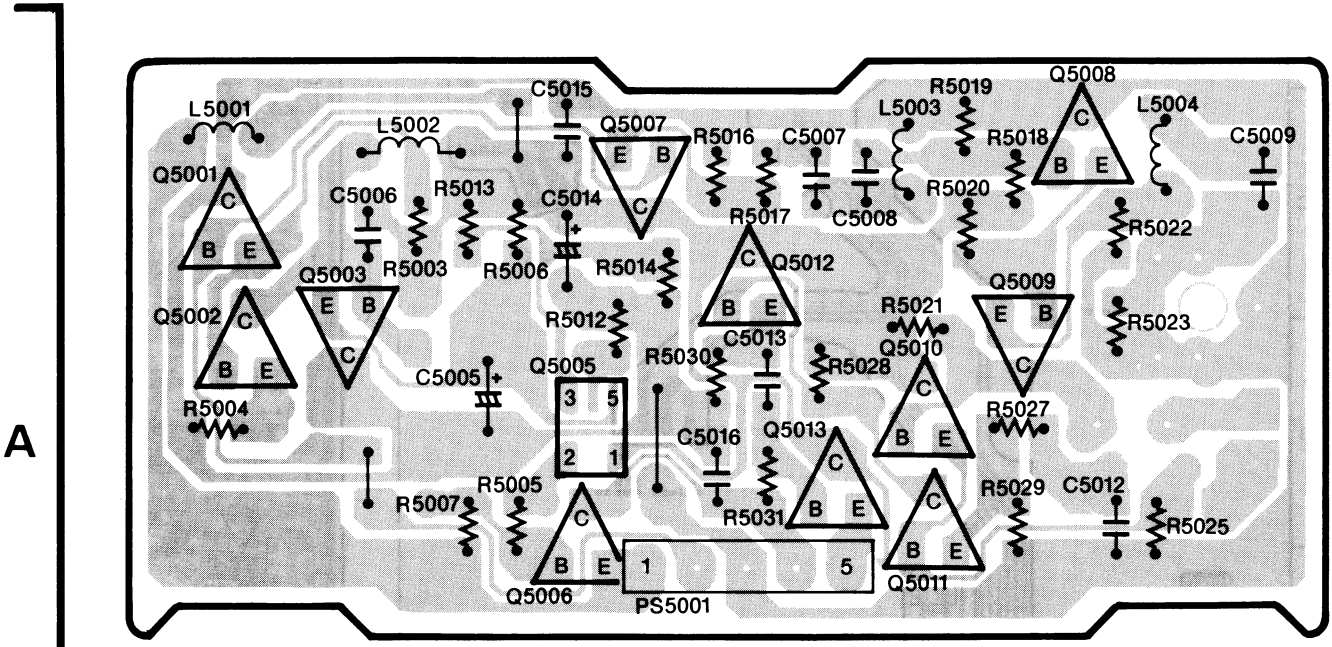

1 2 3

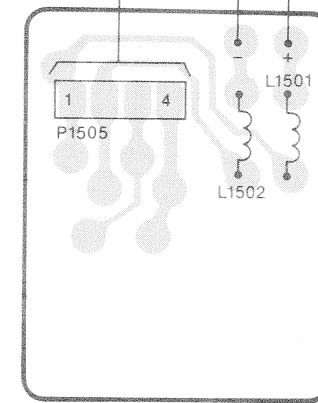
ADDRESS INFORMATION

4-20. HEAD AMP C.B.A. (VEP05178A)





HEAD AMP C.B.A.	
Transistor	
Q501	A-3
Q502	A-3
Integrated Circuit	
IC501	B-2
IC502	A-4
IC551	B-4
Test Point	
TP507	B-1
TP508	B-1
TL551	B-4
Connector	
P501	B-1
P502	A-1
P551	B-3


ADDRESS INFORMATION

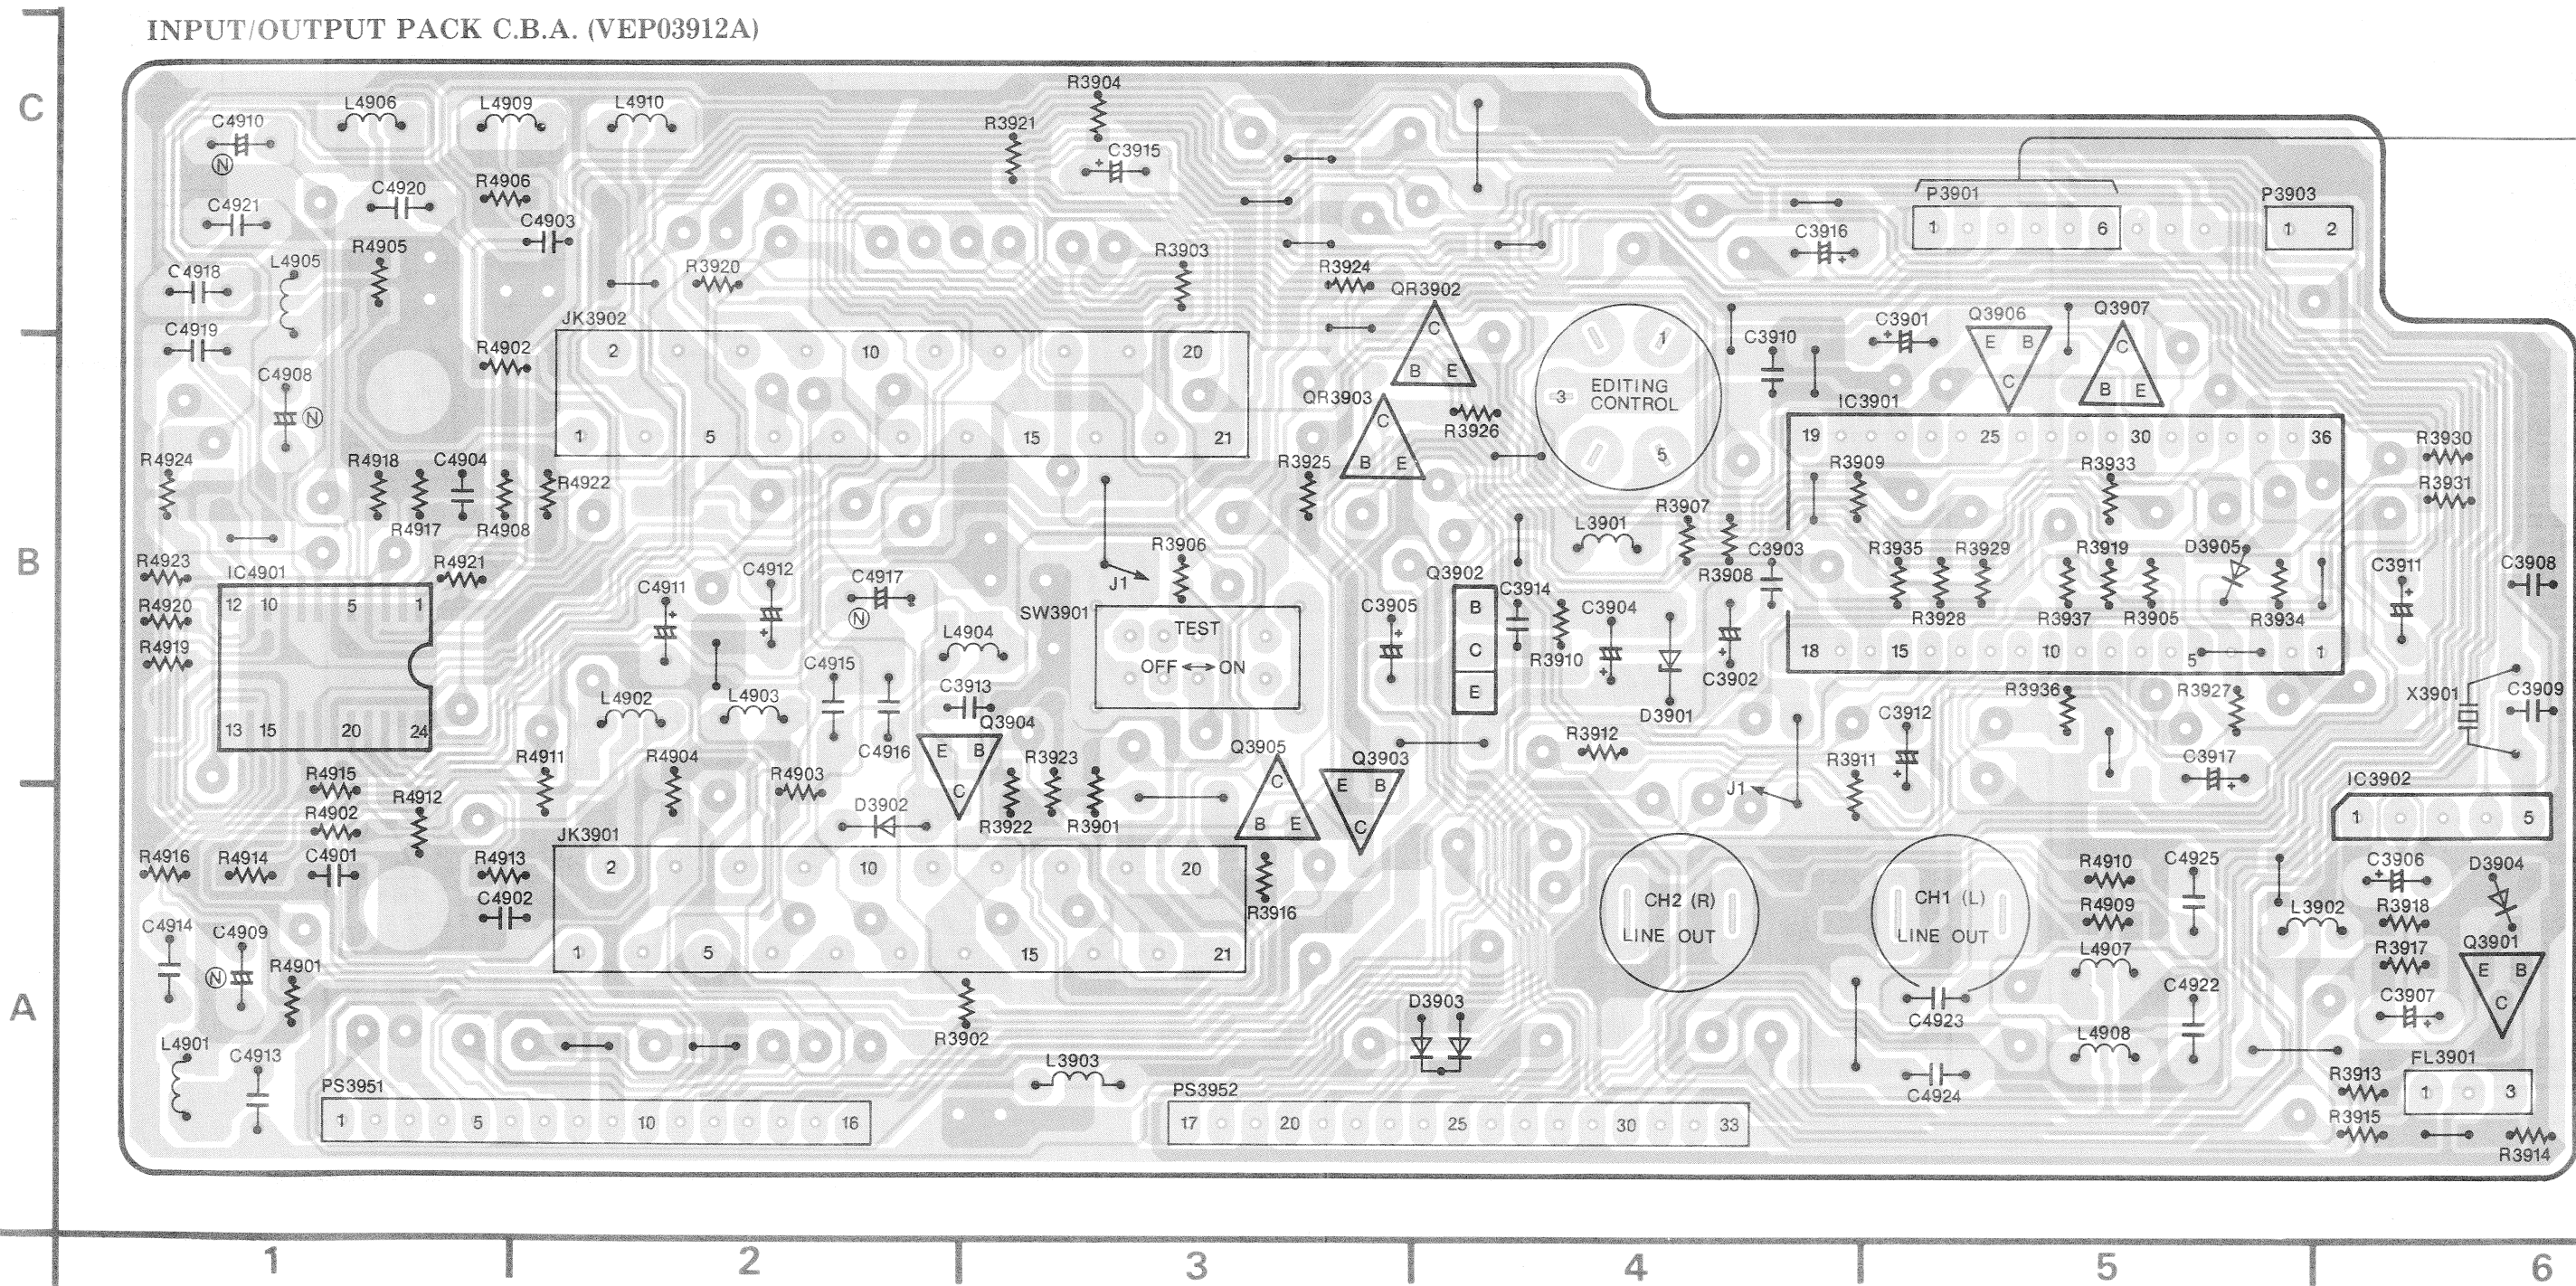

4-22. Hi-Fi AUDIO PACK C.B.A. (VEP04361B)

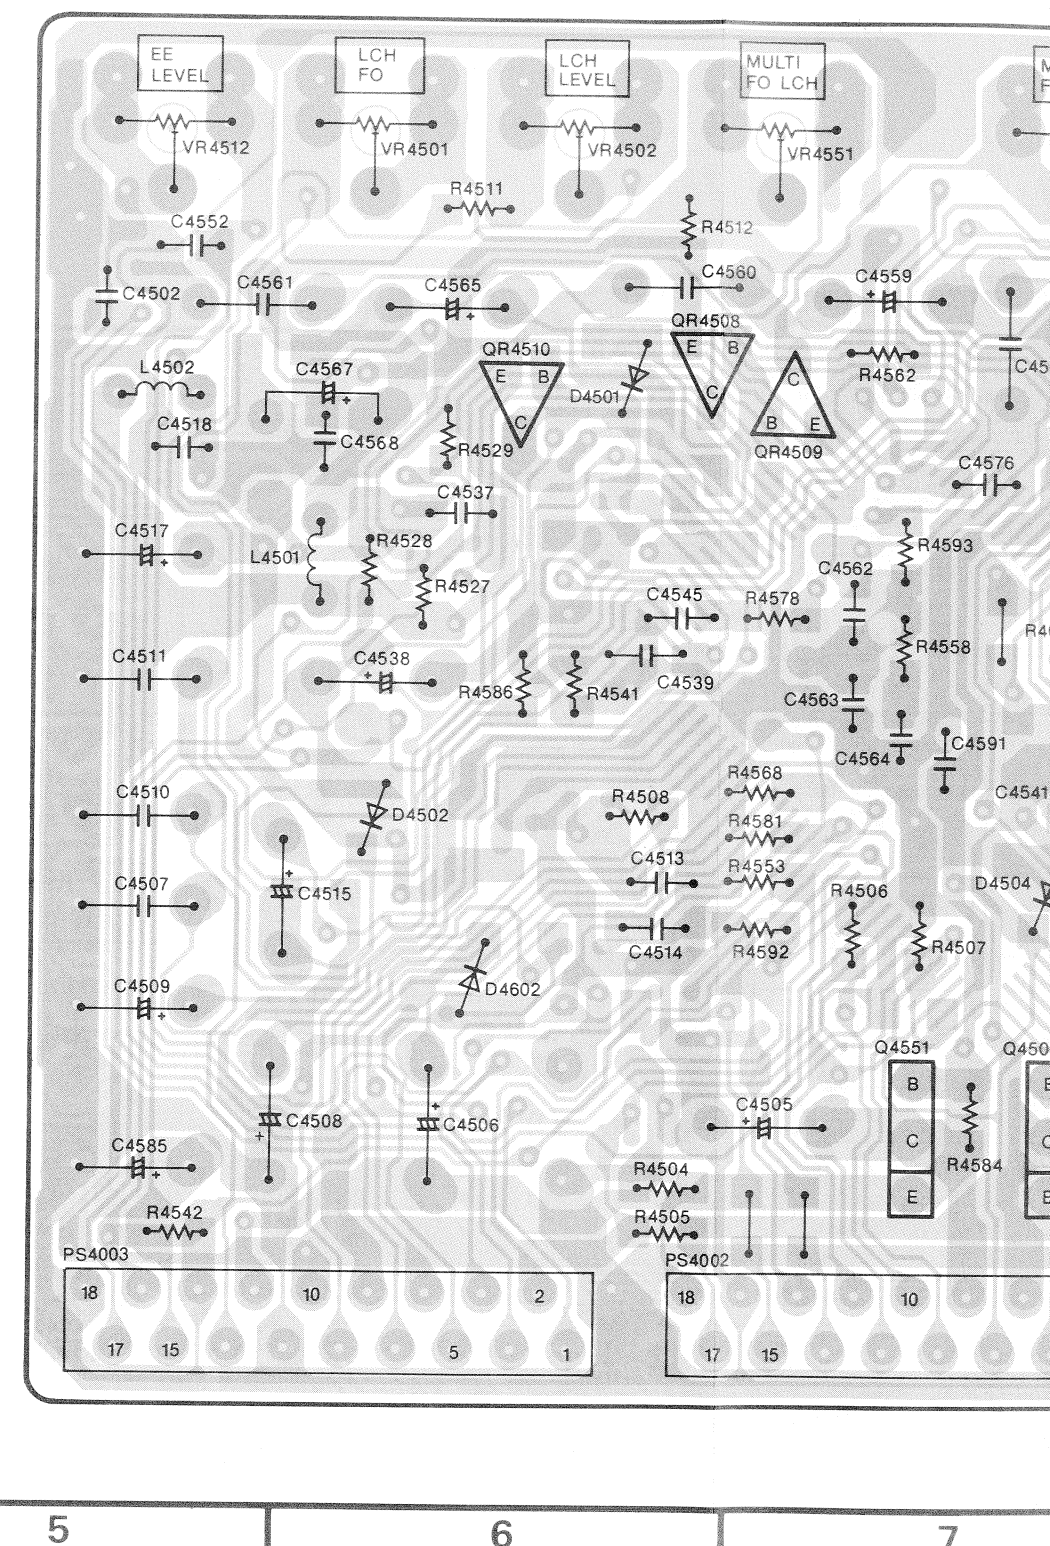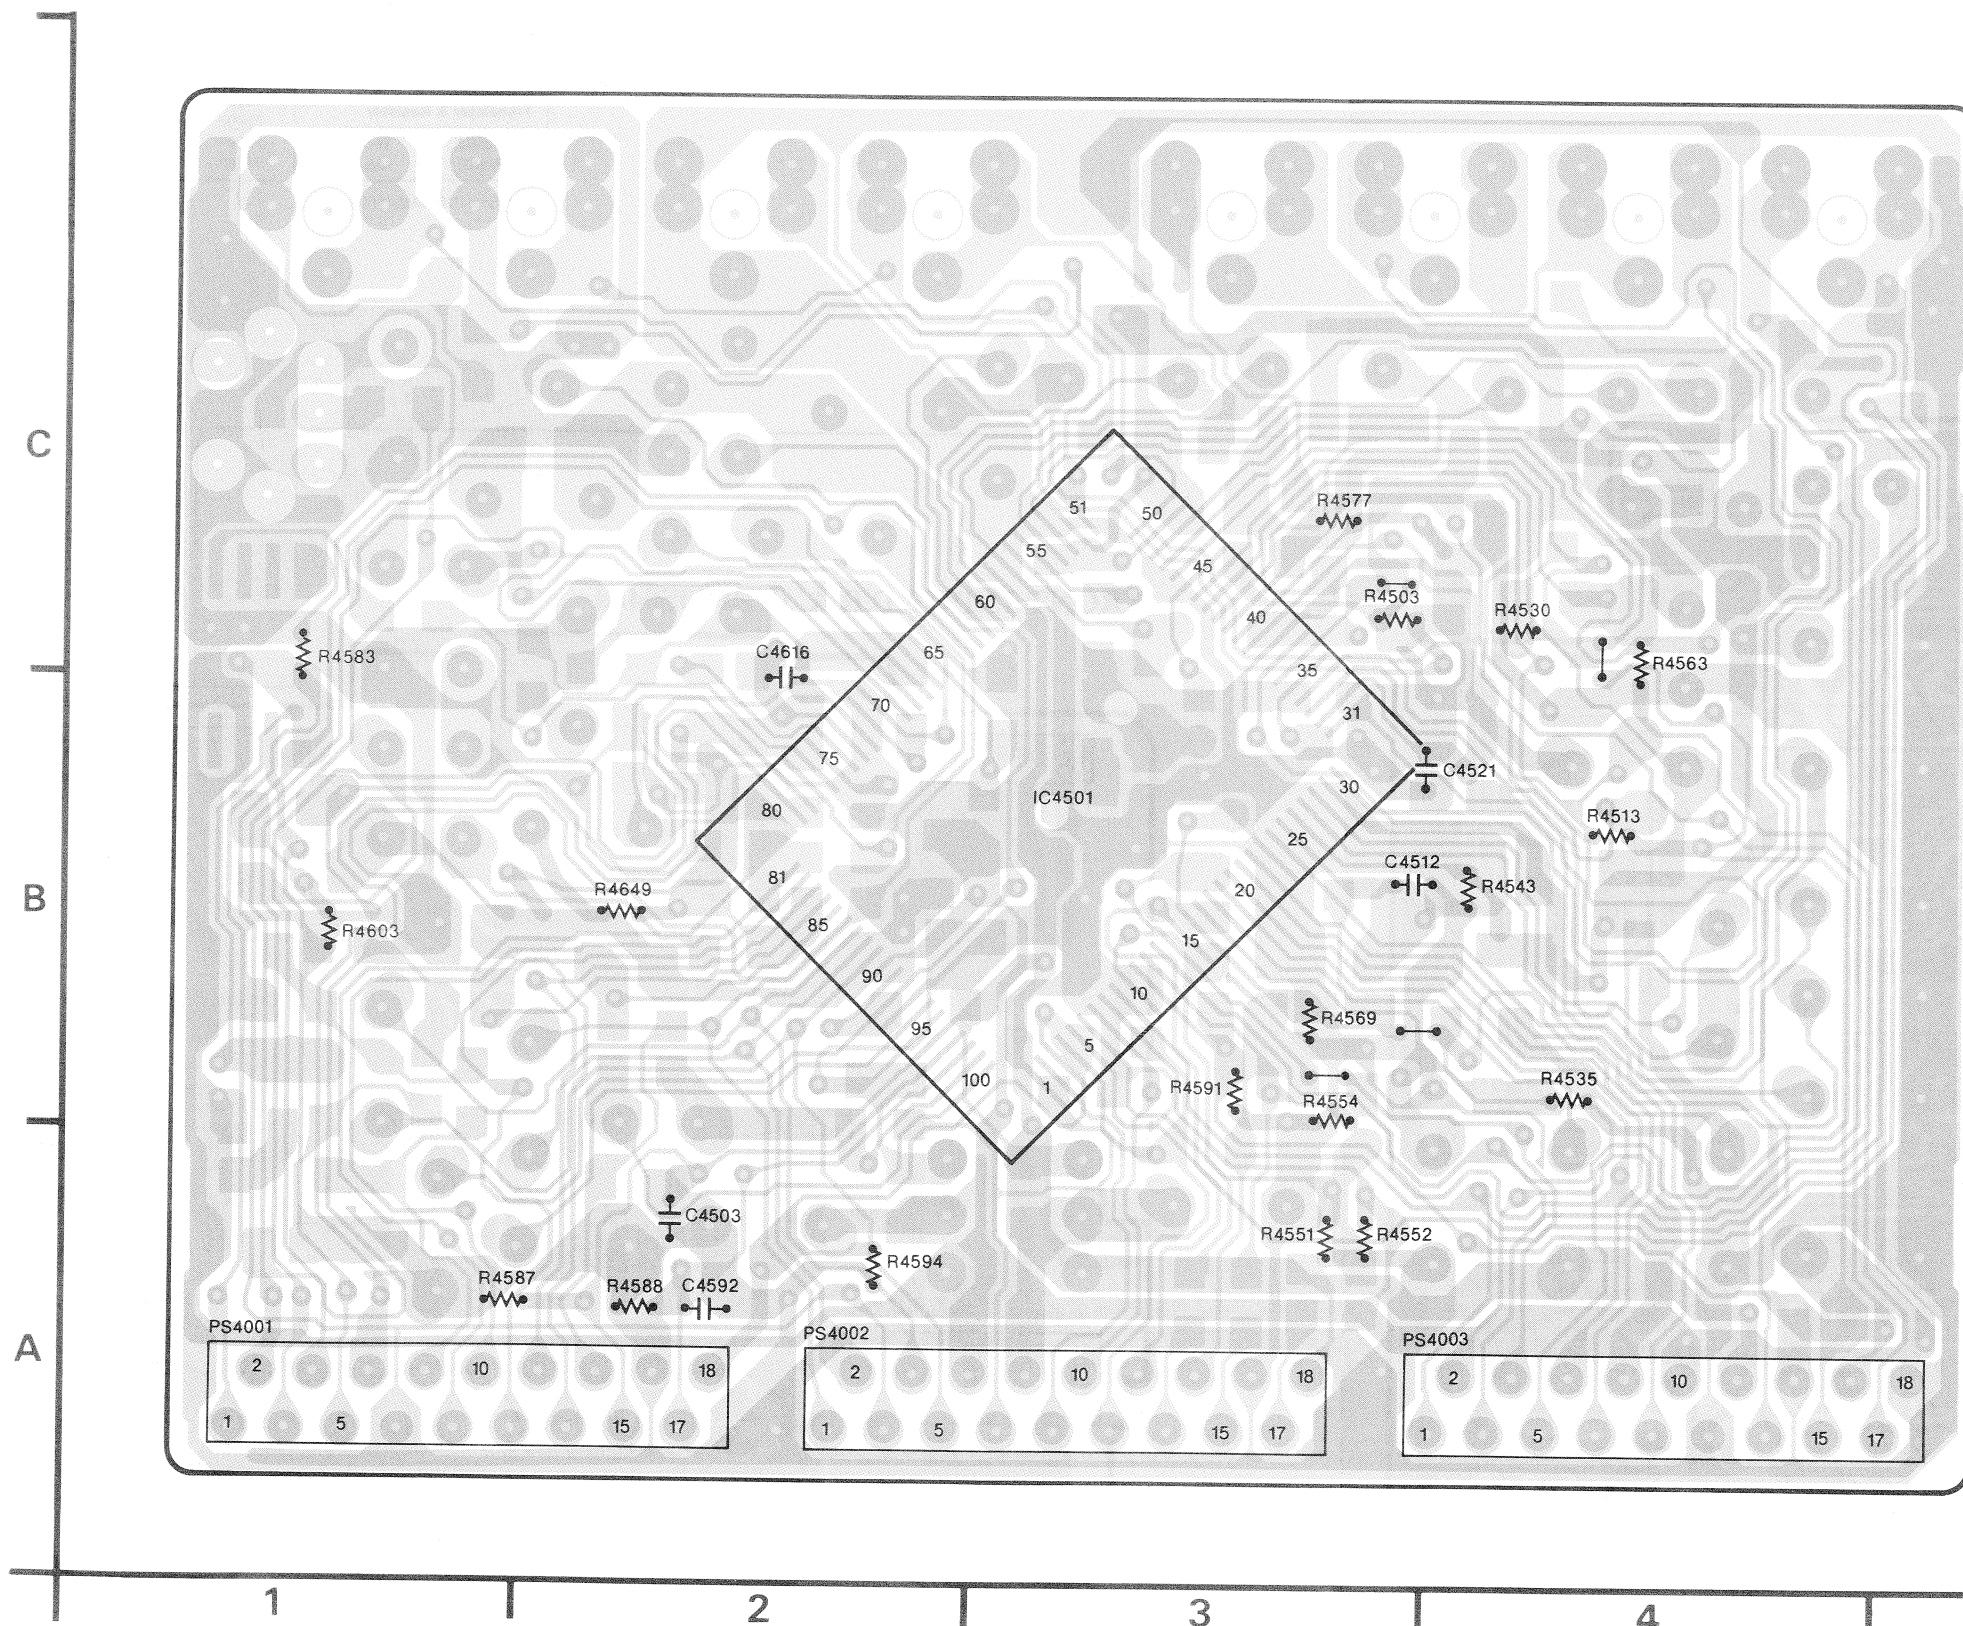

4-23. TIMER C.B.A. (VEP07674B) & VR C.B.A. (VEP00S02B)

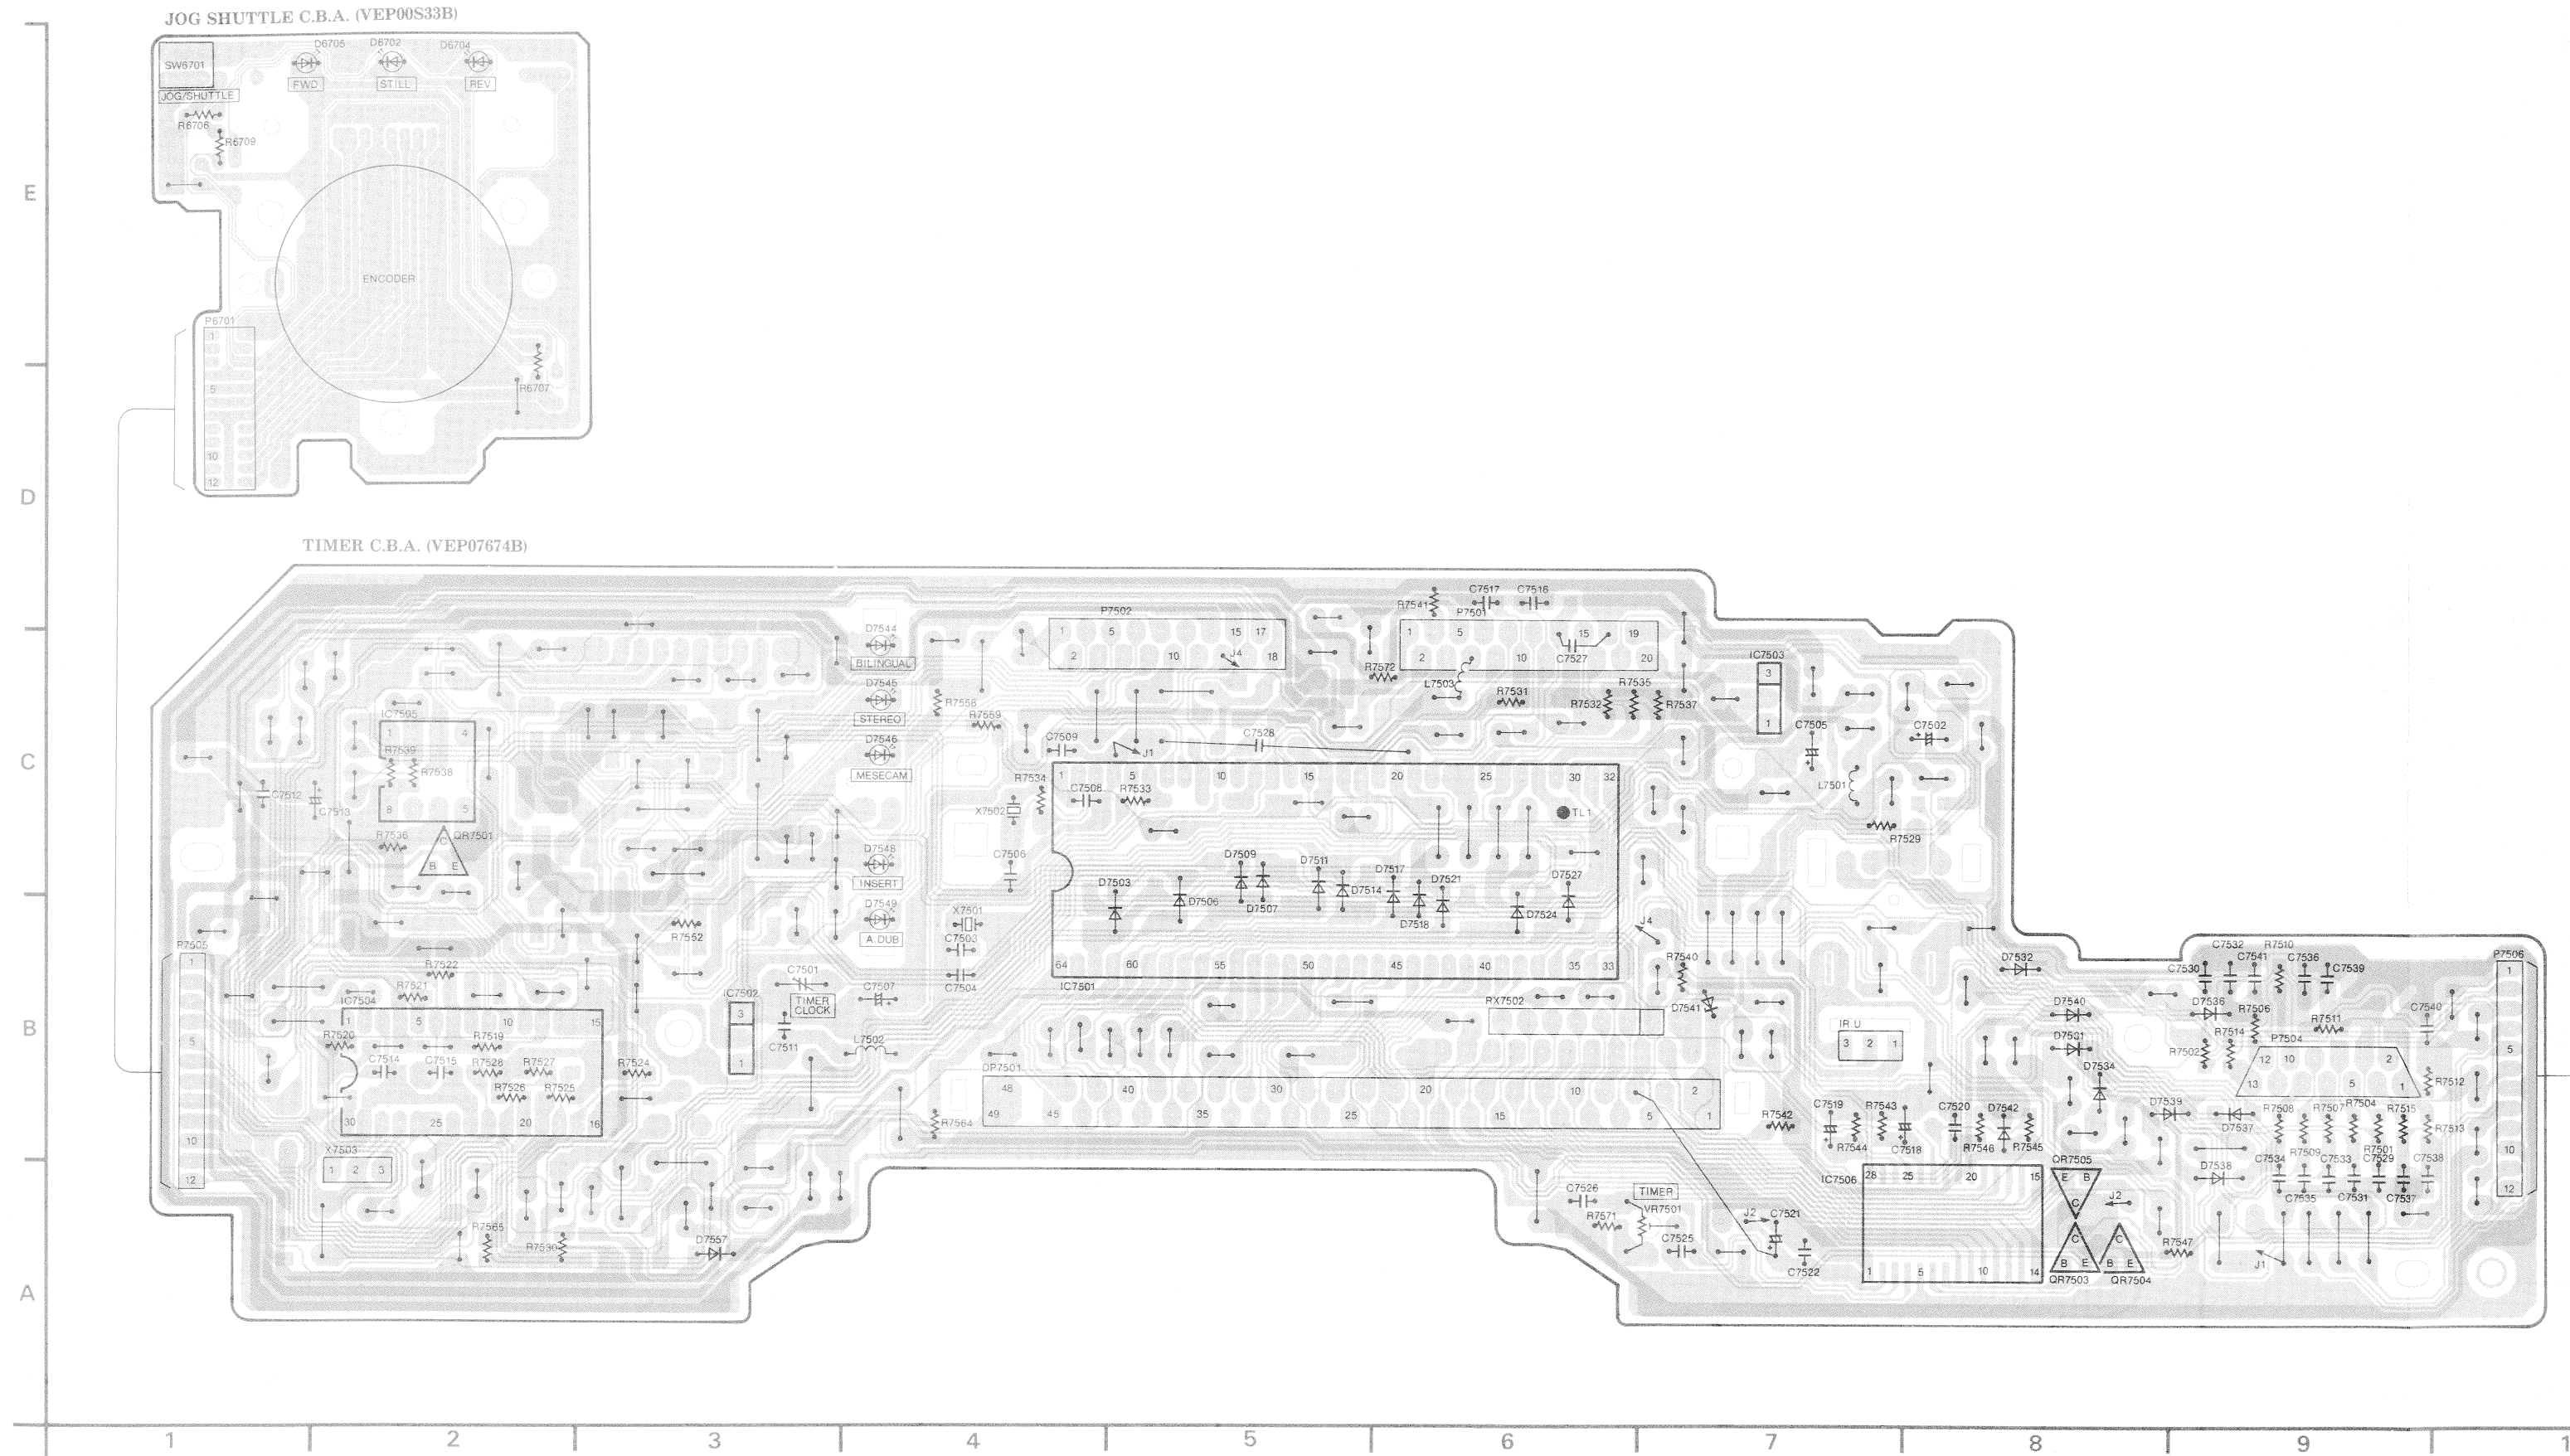


4-24. TV DEMODULATOR PACK C.B.A. (VEP07643E)

4-25. D

TV DEMODULATOR PACK C.B.A.			
Transistor		Adjustment	
Q703	B-4	T703	C-2
Q712	C-3	T704	C-2
Q771	B-5	VR701	B-4
Transistor & Resistor		VR702	B-4
QR701	C-2	VR741	B-3
QR702	C-2	Connector	
QR711	B-5	PS701	C-8
QR712	B-4	PS702	C-5
Integrated Circuit		PS703	C-4
IC701	B-2	PS704	C-2
Test Point			
TP703	C-3		
TP704	C-2		
TP706	B-1		
TP707	B-3		
TP709	B-3		

ADDRESS INFORMATION

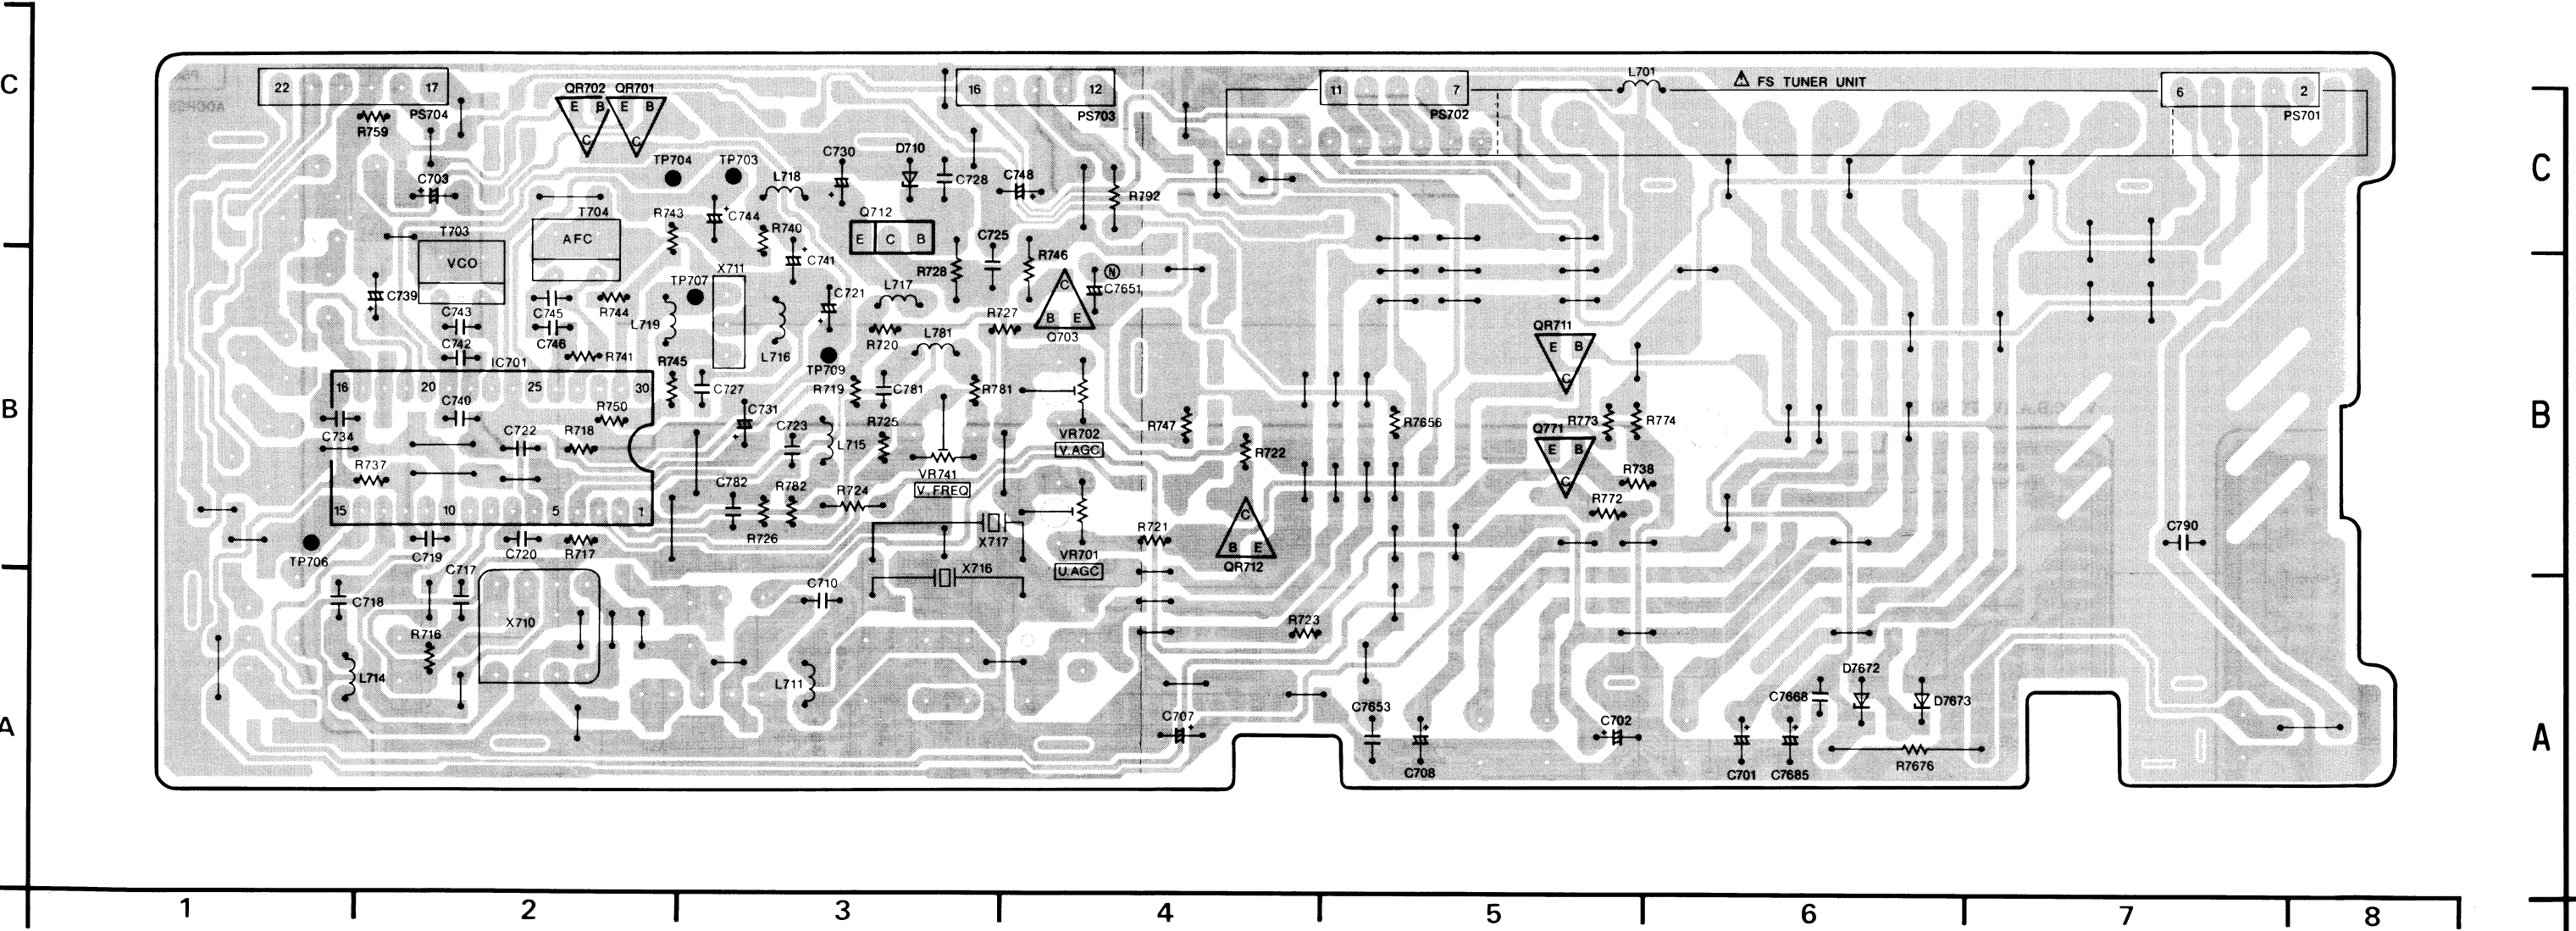

4-25. DECODER PACK C.B.A. (VEP07671C)

K C.B.A.	
tment	
3	C-2
4	C-2
01	B-4
02	B-4
41	B-3
ector	
01	C-8
02	C-5
03	C-4
04	C-2




DECODER PACK C.B.A.			
Transistor		Adjustment	
Q7301	B-2	T7301	C-3
Q7304	B-2	T7302	A-2
Q7305	C-2	T7303	A-4
Q7306	A-1	T7304	C-1
Q7307	A-1	T7305	C-1
Transistor & Resistor		VR7301	A-3
QR7301	B-1	VR7326	C-4
QR7302	B-1	VR7328	C-3
QR7312	B-4	VR7340	A-4
QR7313	B-4	VR7342	A-1
QR7314	B-4	VR7344	A-3
QR7315	B-4	Connector	
QR7316	B-3	PS7301	A-1
Integrated Circuit		PS7302	A-3
IC7301	B-3		
IC7302	B-1		
Test Point			
TP7303	B-3		
TP7304	B-3		

ADDRESS INFORMATION

4-26. VPS PACK C.B.A. (VEP07575A)

VPS PACK C.B.A.	
Transistor & Resistor	
QR7801	B-2
QR7802	B-1
QR7851	B-2
QR7852	A-2
Integrated Circuit	
IC7851	B-2
IC7852	A-2
IC7853	B-1

ADDRESS INFORMATION

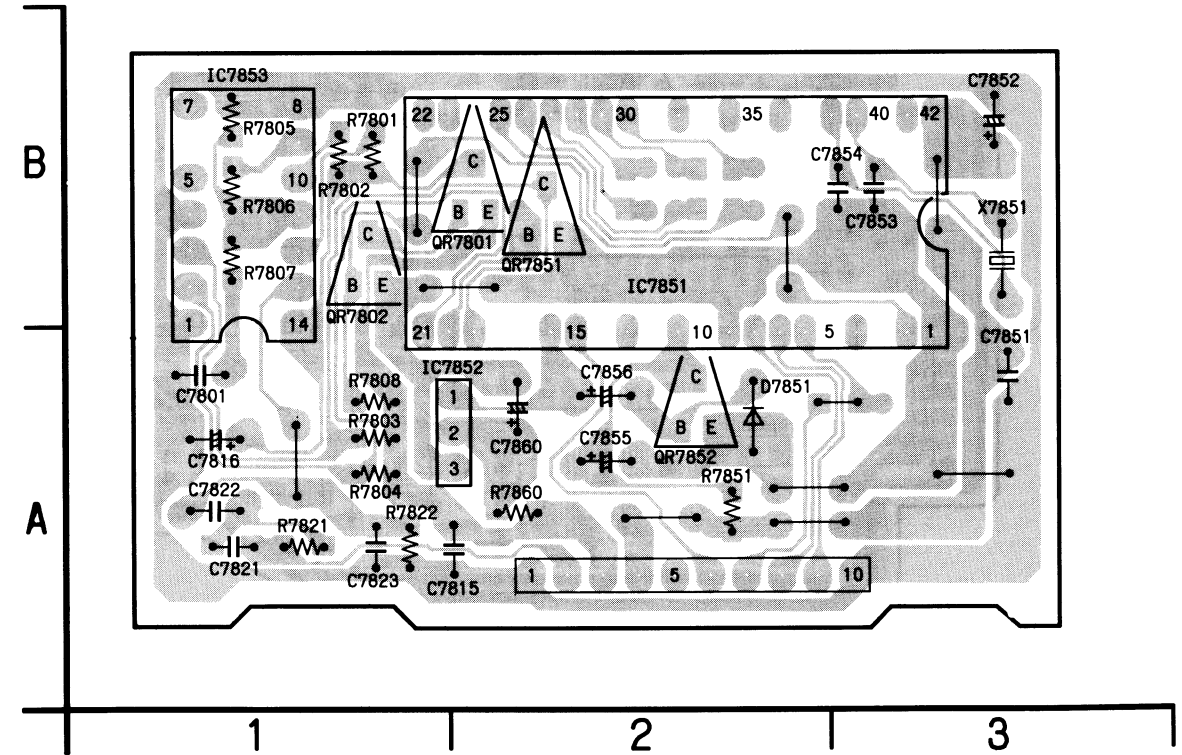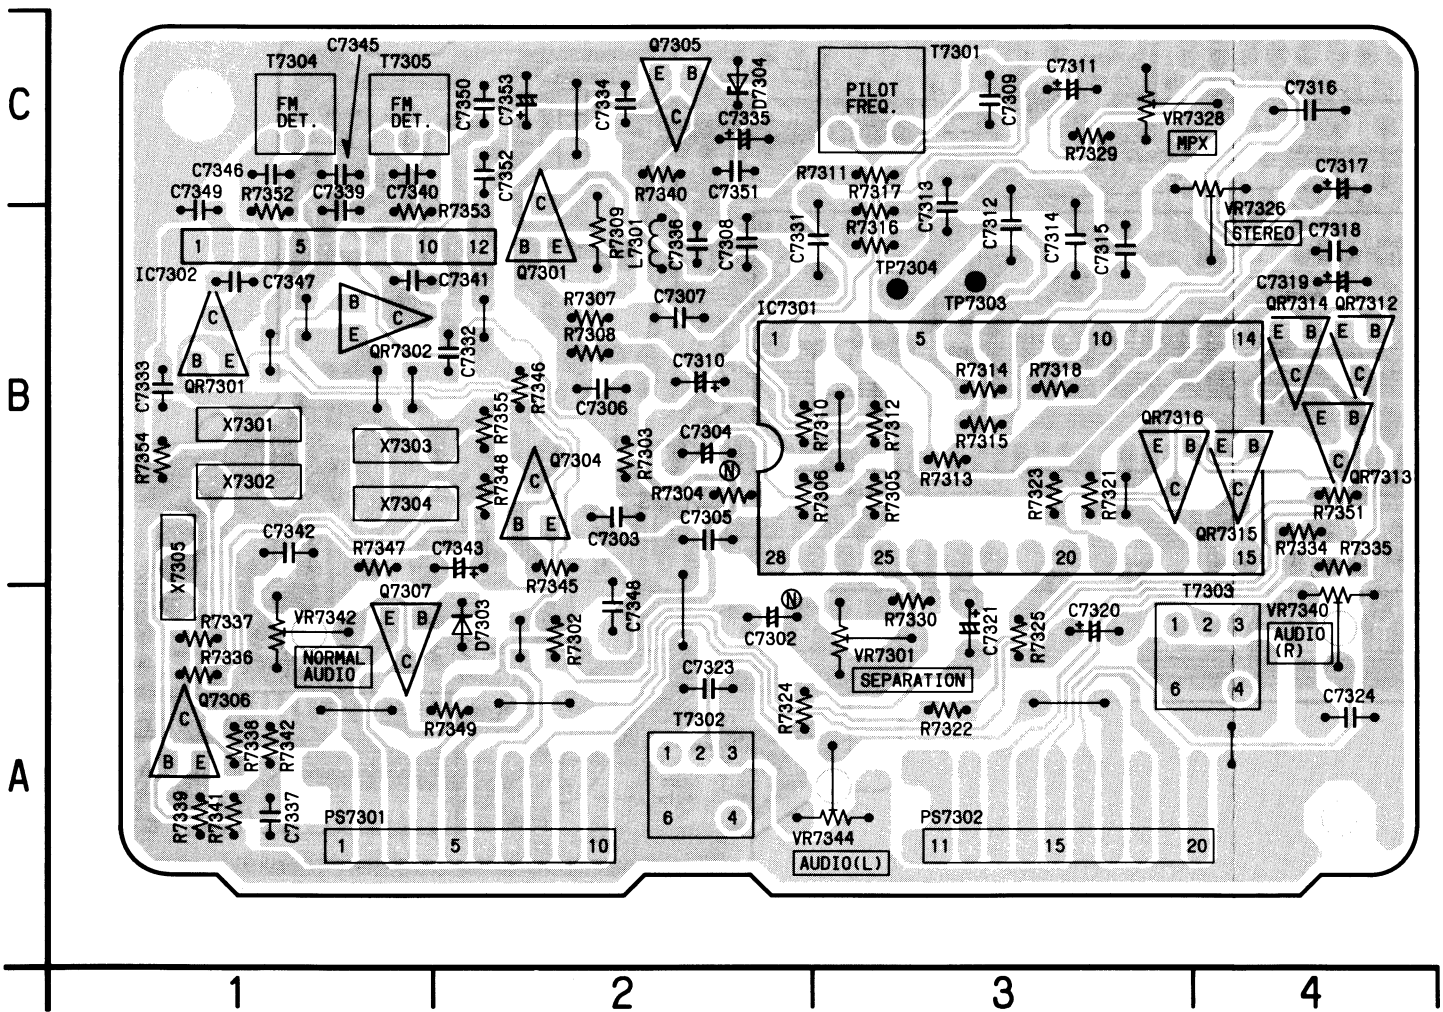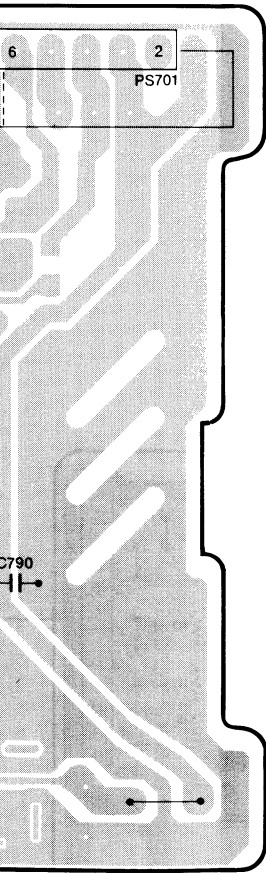


SECTION 5

EXPLODED VIEWS & PARTS LIST

5-1. EXPLODED VIEW & MECHANICAL REPLACEMENT PARTS LIST

1 CHASSIS PARTS SECTION (1)

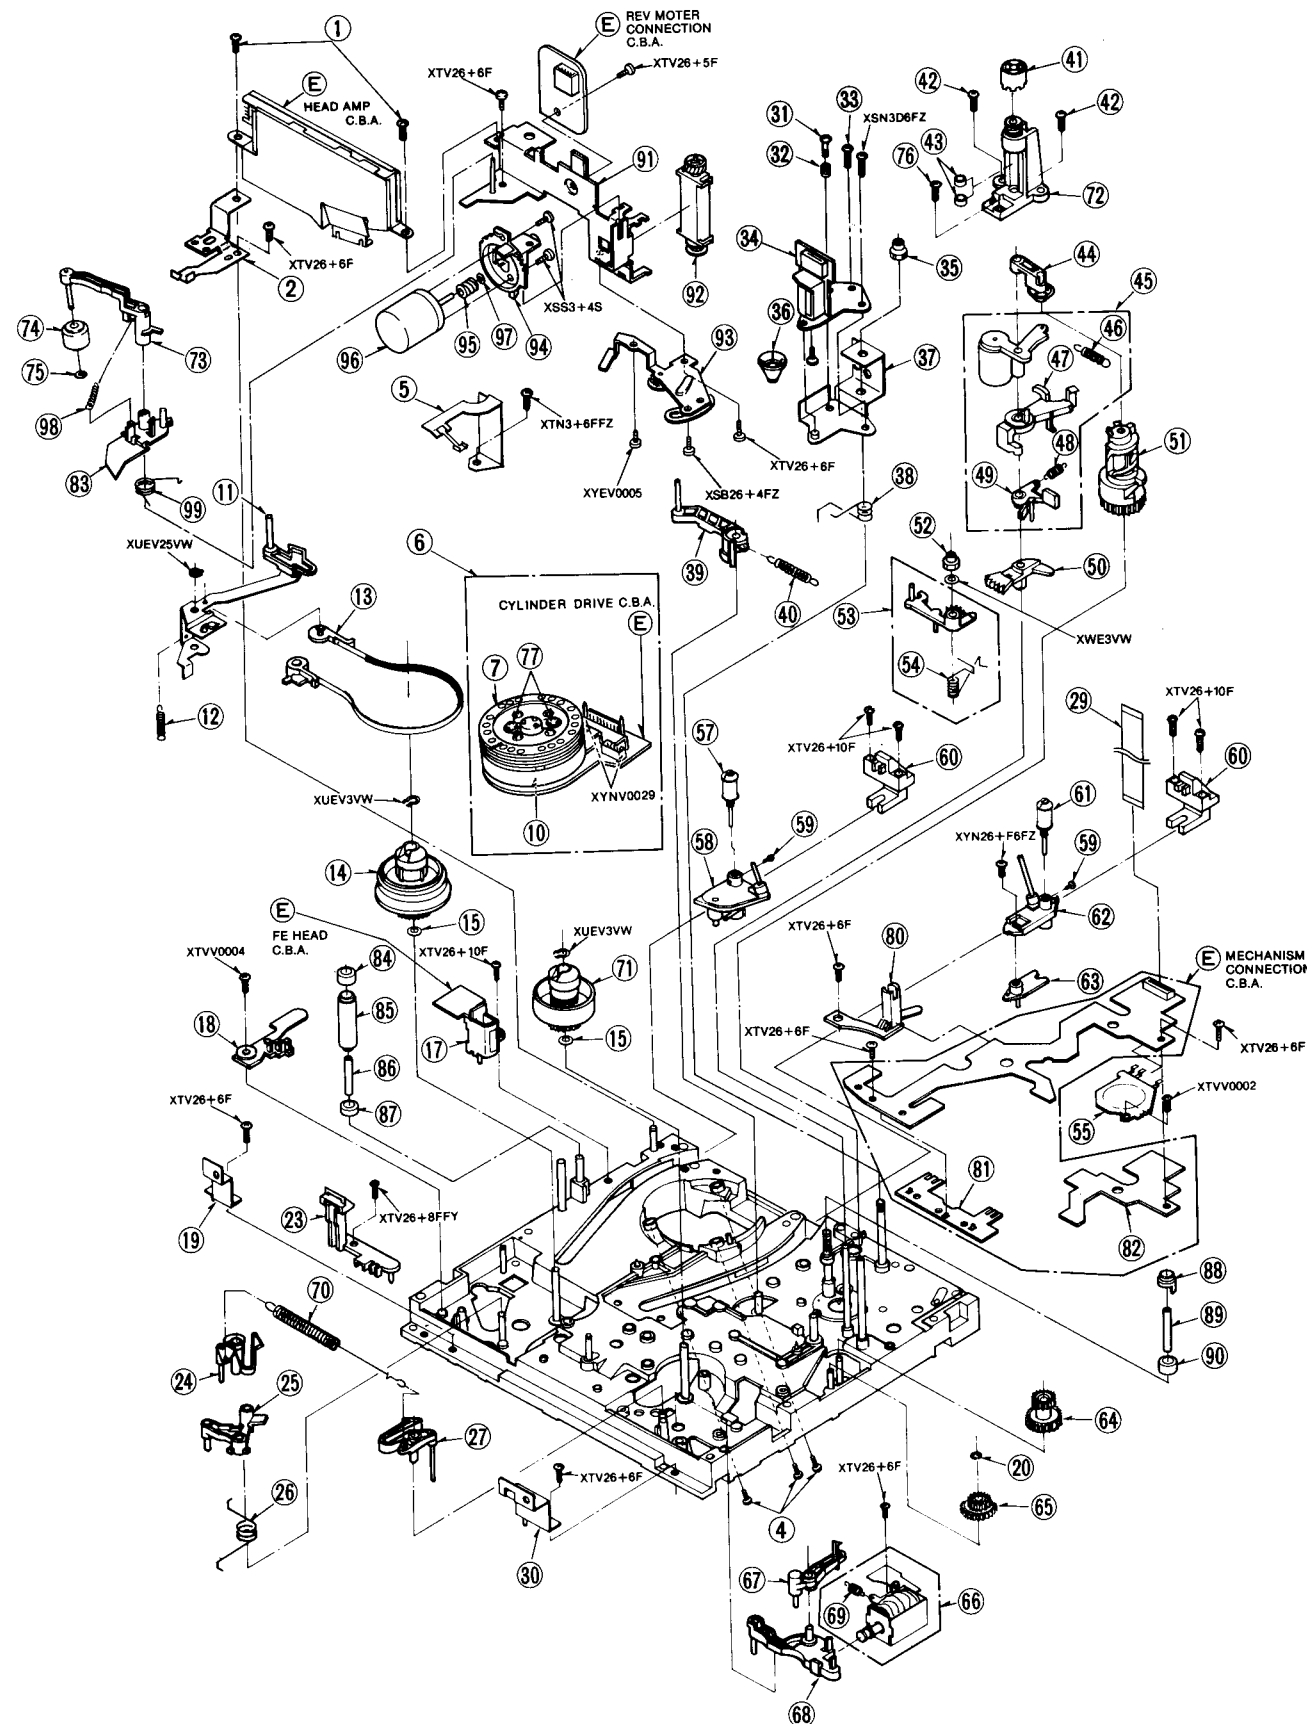


1. CHASSIS PARTS SECTION (1)

Note: 1. * Be sure to make your orders of replacement parts according to this list.
2. IMPORTANT SAFETY NOTICE
Components identified with the mark (1) have the special characteristics for safety. When replacing any of these components, use only the same type.

Ref.No.	Part No.	Part Name & Description	Pcs	Remarks
1(1)	VHDO418	HEAD AMP SET SCREW	2	
2(1)	VMA7174	HEAD AMP MOUNT ANGLE	1	
4(1)	VHDO342	CYLINDER SCREW	3	
5(1)	VXA2702	EARTH PLATE UNIT	1	
6(1)	VEGO967	CYLINDER UNIT	1 (1)	
7(1)	VEHO572	UPPER CYLINDER UNIT	1	
10(1)	VSC2188	CYLINDER C.B.A. SHIELD PLATE	1	
11(1)	VXL1855	TENSION ARM (1) UNIT	1	
12(1)	VMB1563	TENSION SPRING	1	
13(1)	VX20267	TENSION BAND UNIT	1	
14(1)	VXRO179	SUPPLY REEL TABLE UNIT	1	
15(1)	VMD1171	REEL WASHER (0.5mm)	2	
15(1)	VMD1239	REEL WASHER (0.3mm)	2	
15(1)	VMD1238	REEL WASHER (0.2mm)	2	
17(1)	VBS0038	FE HEAD	1	
18(1)	VMD1316	TENSION SPRING HOOK	1	
19(1)	VMA6895	MOUNT ANGLE (L)	1	
20(1)	VMD1079	CUT WASHER	1	
23(1)	VESO486	SAFETY SW	1	
24(1)	VX20259	SUPPLY MAIN BRAKE UNIT	1	
25(1)	VX20274	SUPPLY SOFT BRAKE(1)UNIT	1	
26(1)	VMB1564	SUPPLY SOFT BRAKE SPRING	1	
27(1)	VX20262	TAKE UP MAIN BRAKE UNIT	1	
29(1)	VWJ0615	FLEXIBLE CARD(15P)	1	P6001-P1504
30(1)	VMA6896	MOUNT ANGLE (R)	1	
31(1)	VHDO322	ADJUST SCREW	1	
32(1)	VMB1251	ADJUST SPRING	1	
33(1)	VHDO089B	AZIMUTH ADJUST SCREW	1	
34(1)	VED0082	A/C HEAD (1) UNIT	1	
35(1)	VHNO063	M4 NYLON NUT	1	
36(1)	VHNO110	ADJUST NUT	1	
37(1)	VMA7831	HEAD BASE	1	
38(1)	VMB1567	A/C HEAD SPRING	1	
39(1)	VXL1857	SUB LOADING ARM (1) UNIT	1	
40(1)	VMB1566	SUB POST SPRING	1	
41(1)	VXQ0006	THRUST SCREW UNIT	1	
42(1)	VHDO317	HOUSING SCREW	2	
43(1)	VMD1033	OIL SEAL	2	
44(1)	VMD1353	PINCH CAM CAP	1	
45(1)	VXL1858	PRESSURE ROLLER UNIT	1	
46(1)	VMB1941	PIN PRESSURE SPRING	1	
47(1)	VMD2232	PINCH PRESSURE ARM	1	
48(1)	VMB1569	PINCH PRESSURE ARM RELEASE SPRING	1	
49(1)	VMD1874	PINCH LIFT ARM	1	
50(1)	VDG0597	P5 PULL OUT SECTOR GEAR	1	
51(1)	VDG0421	PINCH CAM	1	
52(1)	VHDO045	M3 NYLON NUT	1	
53(1)	VXL2027	P5 UNIT	1	
54(1)	VMB2718	P5 SPRING	1	
55(1)	VSS0175	MODE SW	1	
57(1)	VXP0863	ROLLER POST (S) UNIT	1	
58(1)	VXA4106	INCLIND BASE (S) (1)UNIT	1	
59(1)	VHDO133	ROLLER POST SCREW	2	
60(1)	VMD0910	POST STOPPER	2	
61(1)	VXP1094	ROLLER POST (T) UNIT	1	
62(1)	VXA3876	INCLIND BASE(T)(1)UNIT	1	
63(1)	VXA2687	INCLIND ADJUST PLATE UNIT	1	
64(1)	VDG0483	PINCH SPEED DOWN GEAR	1	
65(1)	VDG0664	CONNECTION GEAR	1	
66(1)	VXA3735	SOLENOID UNIT	1	
67(1)	VXA2692	KICK ROD UNIT	1	
68(1)	VMD1849	SOLENOID LEVER	1	
69(1)	VMB1553	KICK ROD SPRING	1	
70(1)	VMB2012	MAIN BRAKE SPRING	1	
71(1)	VXRO176	TAKE UP REEL TABLE UNIT	1	
72(1)	VXD0101	HOUSING UNIT	1	

② CHASSIS PARTS SECTION (2)

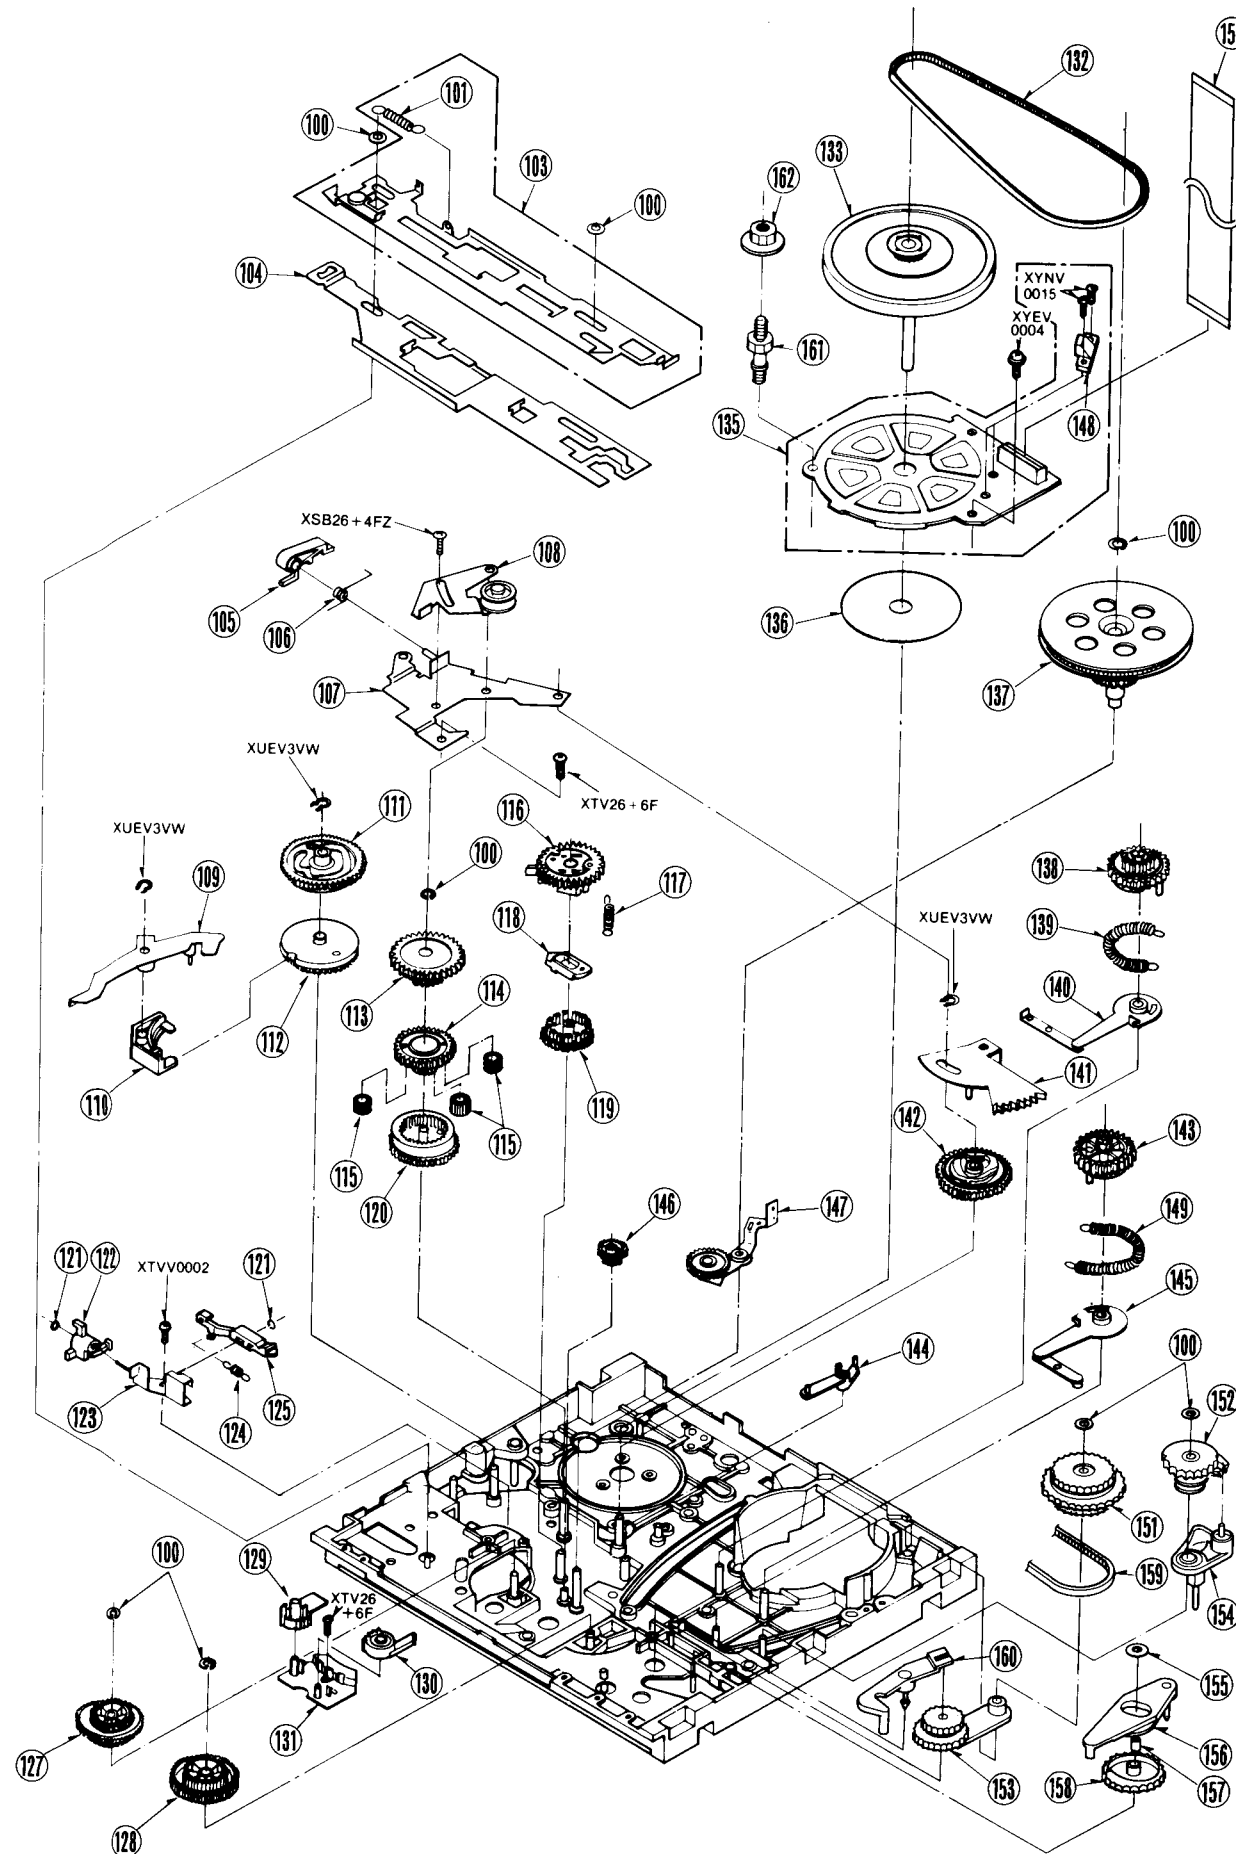

2. CHASSIS PARTS SECTION (2)

Note:1.* Be sure to make your orders of replacement parts according to this list.
2.IMPORTANT SAFETY NOTICE
Components identified with the mark (!) have the special characteristics for safety. When replacing any of these components, use only the same type.


Ref.No.	Part No.	Part Name & Description	Pcs	Remarks
100(2)	VMK1079	CUT WASHER	8	
101(2)	VMB1883	SUB LEVER SPRING	1	
103(2)	VXA3510	SUB LEVER UNIT	1	
104(2)	VMM0204	MAIN LEVER	1	
105(2)	VXL2088	SS BRAKE ARM UNIT	1	
106(2)	VMB1588	SS BRAKE SPRING	1	
107(2)	VXA3512	SS BRAKE BASE (1) UNIT	1	
108(2)	VXA3516	TENSION ROLLER UNIT	1	
109(2)	VXL1632	CAM FOLLOWER ARM UNIT	1	
110(2)	VML1861	DETENT ARM	1	
111(2)	VDG0574	MAIN CAM GEAR	1	
112(2)	VDG0343	SUB CAM GEAR	1	
113(2)	VDG0348	CENTRE GEAR	1	
114(2)	VDG0422	RETAINER GEAR	1	
115(2)	VDG0345	PLANET GEAR	3	
116(2)	VDG0547	CLUTCH DISK	1	
117(2)	VMB1558	CLUTCH SPRING	1	
118(2)	VDG0350	LOCK SLIDE GEAR	1	
119(2)	VDG0335	DRIVE DISK	1	
120(2)	VDG0342	RING GEAR	1	
121(2)	VMK0967	CUT WASHER	2	
122(2)	VML1859	CHANGE LEVER	1	
123(2)	VXA2672	RELEASE LEVER (1) UNIT	1	
124(2)	VMB1557	RELEASE SPRING	1	
125(2)	VML1860	RELEASE LEVER	1	
127(2)	VXP1031	TAKE UP REEL GEAR UNIT	1	
128(2)	VXP0981	SUPPLY REEL GEAR UNIT	1	
129(2)	VML1858	RETURN LEVER (R)	1	
130(2)	VML1857	RETURN LEVER (L)	1	
131(2)	VMD0913	STOPPER BASE	1	
132(2)	VDV0169	TIMING BELT	1	
133(2)	VXP1113	ROTOR UNIT	1	
135(2)	VEK4097	STATOR UNIT	1 (!)	
136(2)	VMA6847	SUB PLATE	1	
137(2)	VXP1050	CENTRE PULLEY UNIT	1	
138(2)	VDG0564	LOADING GEAR (T)	1	
139(2)	VMB1555	LOADING SPRING (T)	1	
140(2)	VXL1489	LOADING ARM (T)(1) UNIT	1	
141(2)	VXA3515	SECTOR GEAR UNIT	1	
142(2)	VDG0516	LOADING CAM GEAR	1	
143(2)	VDG0419	LOADING GEAR (S)	1	
144(2)	VML2266	PLAY CONTROL ARM	1	
145(2)	VXL1487	LOADING ARM (S)(1) UNIT	1	
146(2)	VDG0546	INTERMEDIATE GEAR	1	
147(2)	VXL1861	PLAY ARM UNIT	1	
148(2)	VBK0048	FG HEAD	1	
149(2)	VMB1746	LOADING SPRING(S)	1	
150(2)	VWJ0597	FLEXIBLE CARD (15P)	1	P2001-CAP STATOR UNIT
151(2)	VXP1029	REVIEW CLUTCH UNIT	1	
152(2)	VXP1030	TENSION RELEASE CLUTCH UNIT	1	
153(2)	VXL1851	REVIEW ARM UNIT	1	
154(2)	VML2197	TENSION RELEASE LEVER	1	
155(2)	VMK1536	CUT WASHER	1	
156(2)	VML2233	SUB CAM FOLLOWER	1	
157(2)	VMK1495	RUBBER STOPPER	1	
158(2)	VDG0517	SUB LEVER CAM	1	
159(2)	VDV0199	REVIEW CLUTCH TIMING BELT	1	
160(2)	VML2200	REVIEW CONTROL LEVER	1	
161(2)	VHD0431	STATOR SPACER SCREW	1	
162(2)	VHN0102	STATOR NUT	1	

3. CASSETTE UP MECHANISM SECTION


Note:1.* Be sure to make your orders of replacement parts according to this list.
2.IMPORTANT SAFETY NOTICE
Components identified with the mark (!) have the special characteristics for safety. When replacing any of these components, use only the same type.

Ref.No.	Part No.	Part Name & Description	Pcs	Remarks
201(3)	VMA7223	TOP PLATE	1	
202(3)	VXA3840	CASSETTE HOLDER UNIT	1	
217(3)	VMD1890	SIDE PLATE (L)	1	
218(3)	VML1880	OPENER LEVER	1	
219(3)	VXA4076	SIDE PLATE (R) UNIT	1	
221(3)	VXA4642	SLIDE SW UNIT	1	
229(3)	VXP0987	MAIN SHAFT UNIT	1	
230(3)	VMB1836	SUB WIPER SPRING (L)	1	
231(3)	VML1878	SUB WIPER ARM (L)	1	
232(3)	VML1879	SUB WIPER ARM (R)	1	
233(3)	VMB1837	SUB WIPER SPRING (R)	1	
234(3)	VMA6900	CASSETTE GUIDE	1	
235(3)	VKF1212	BLINDER PANEL	1	
236(3)	VMB1258	BLINDER SPRING	1	
240(3)	VMA7224	CASSETTE HOLDER ANGLE	1	

③ CASSETTE UP MECHANISM SECTION

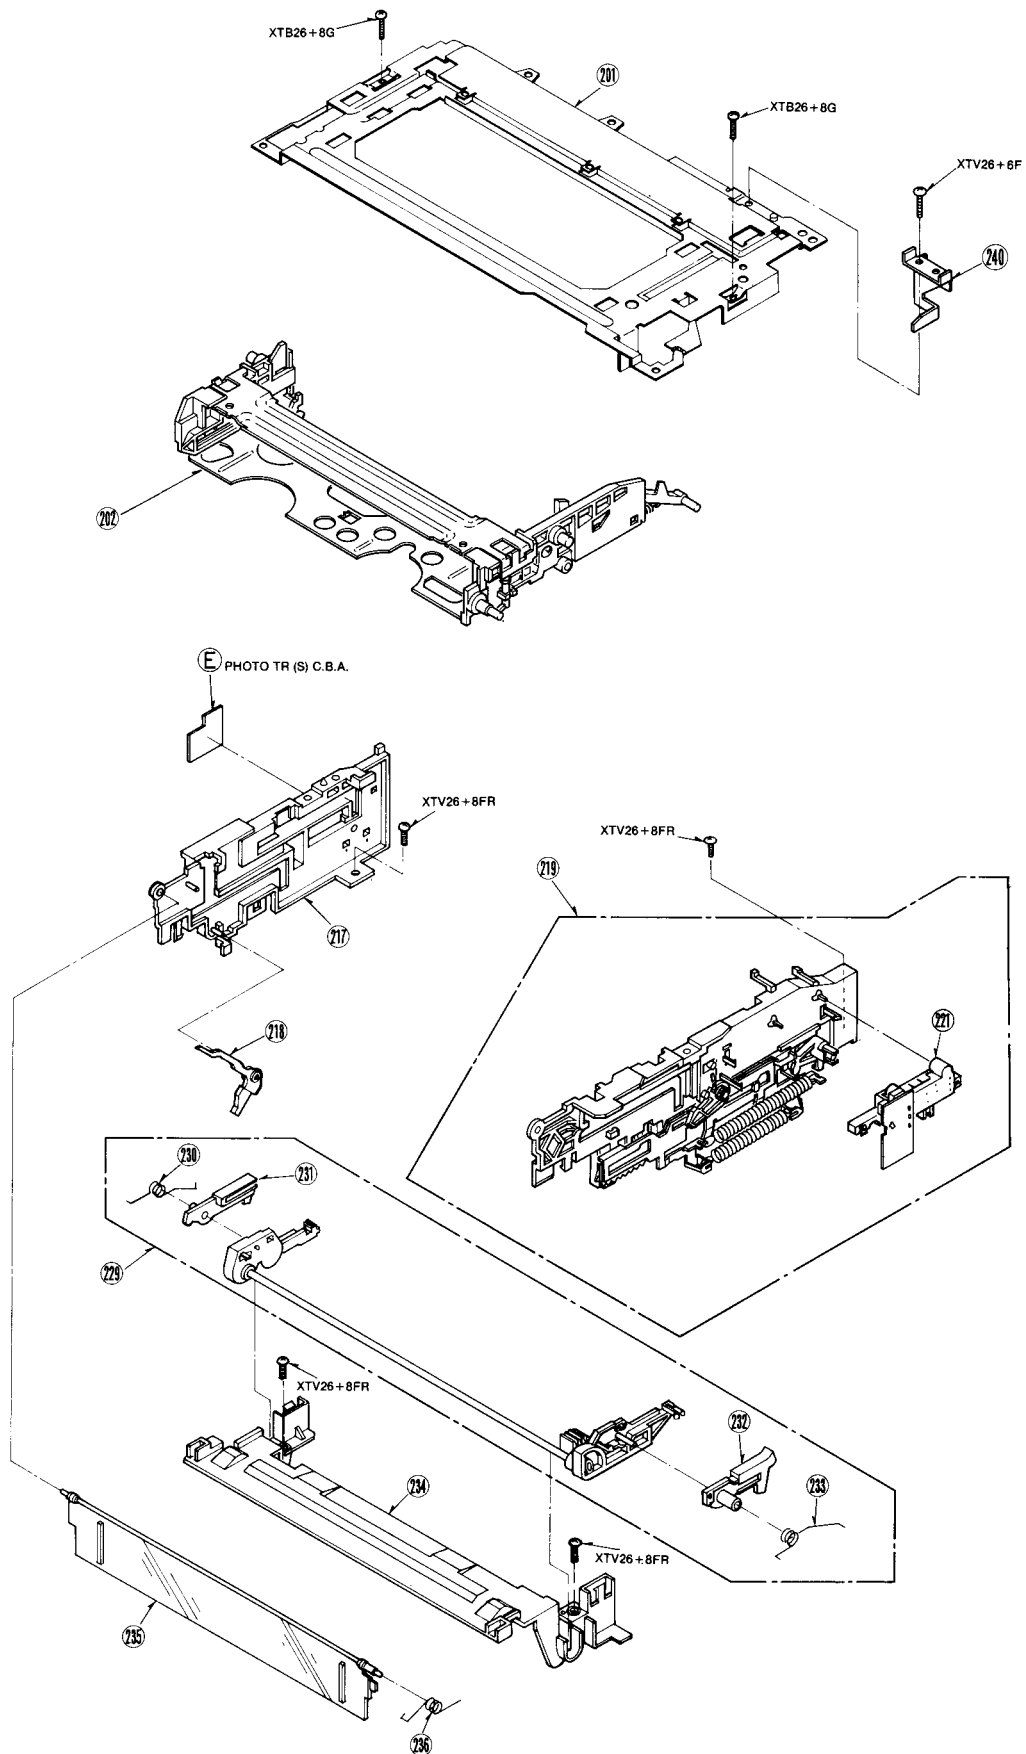

④ CASING PARTS SECTION

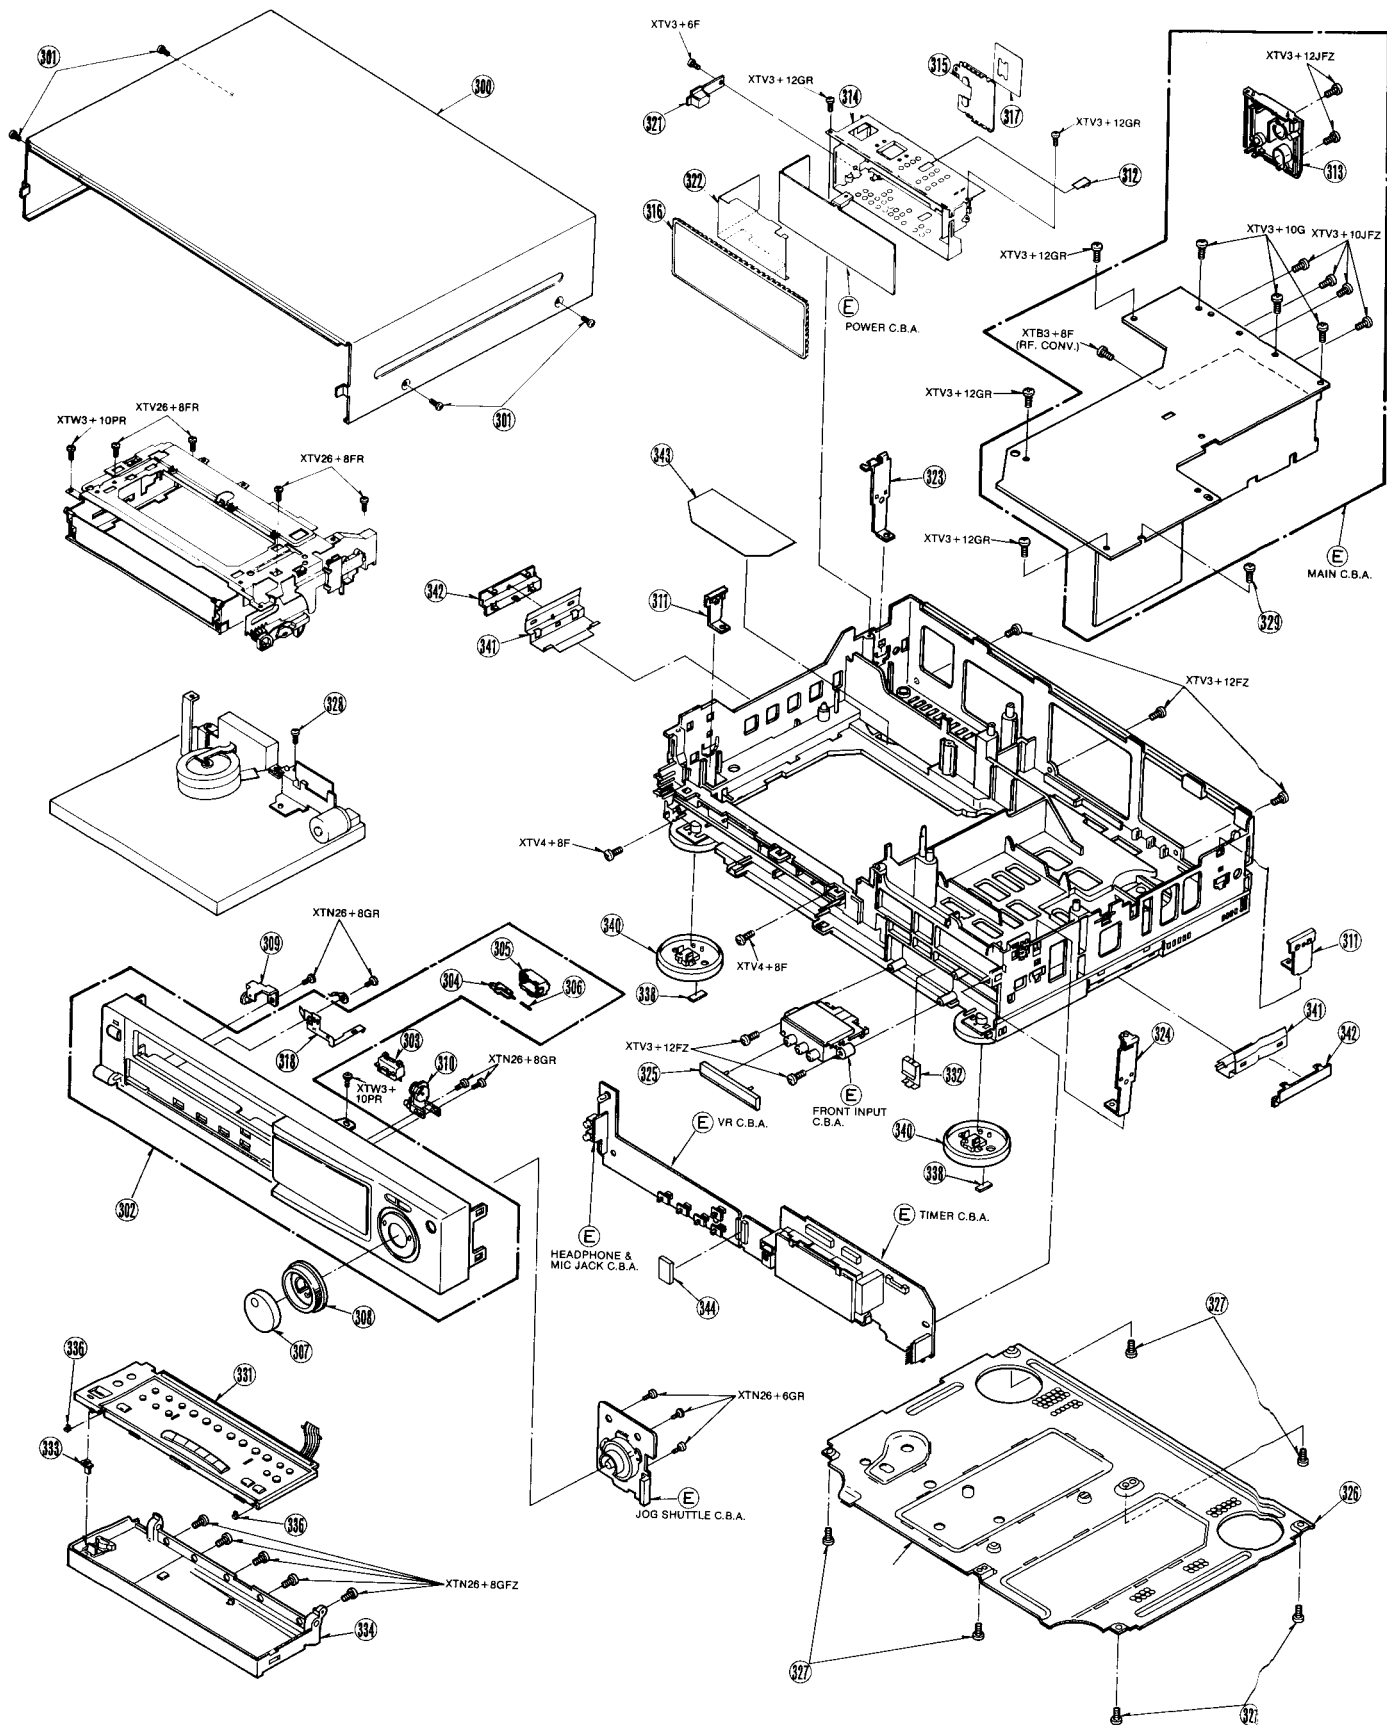


4. CASING PARTS SECTION

Note: 1. * Be sure to make your orders of replacement parts according to this list.
2. IMPORTANT! SAFETY NOTICE
Components identified with the mark (!) have the special characteristics for safety. When replacing any of these components, use only the same type.

[illegible][illegible]

5 PACKING PARTS SECTION

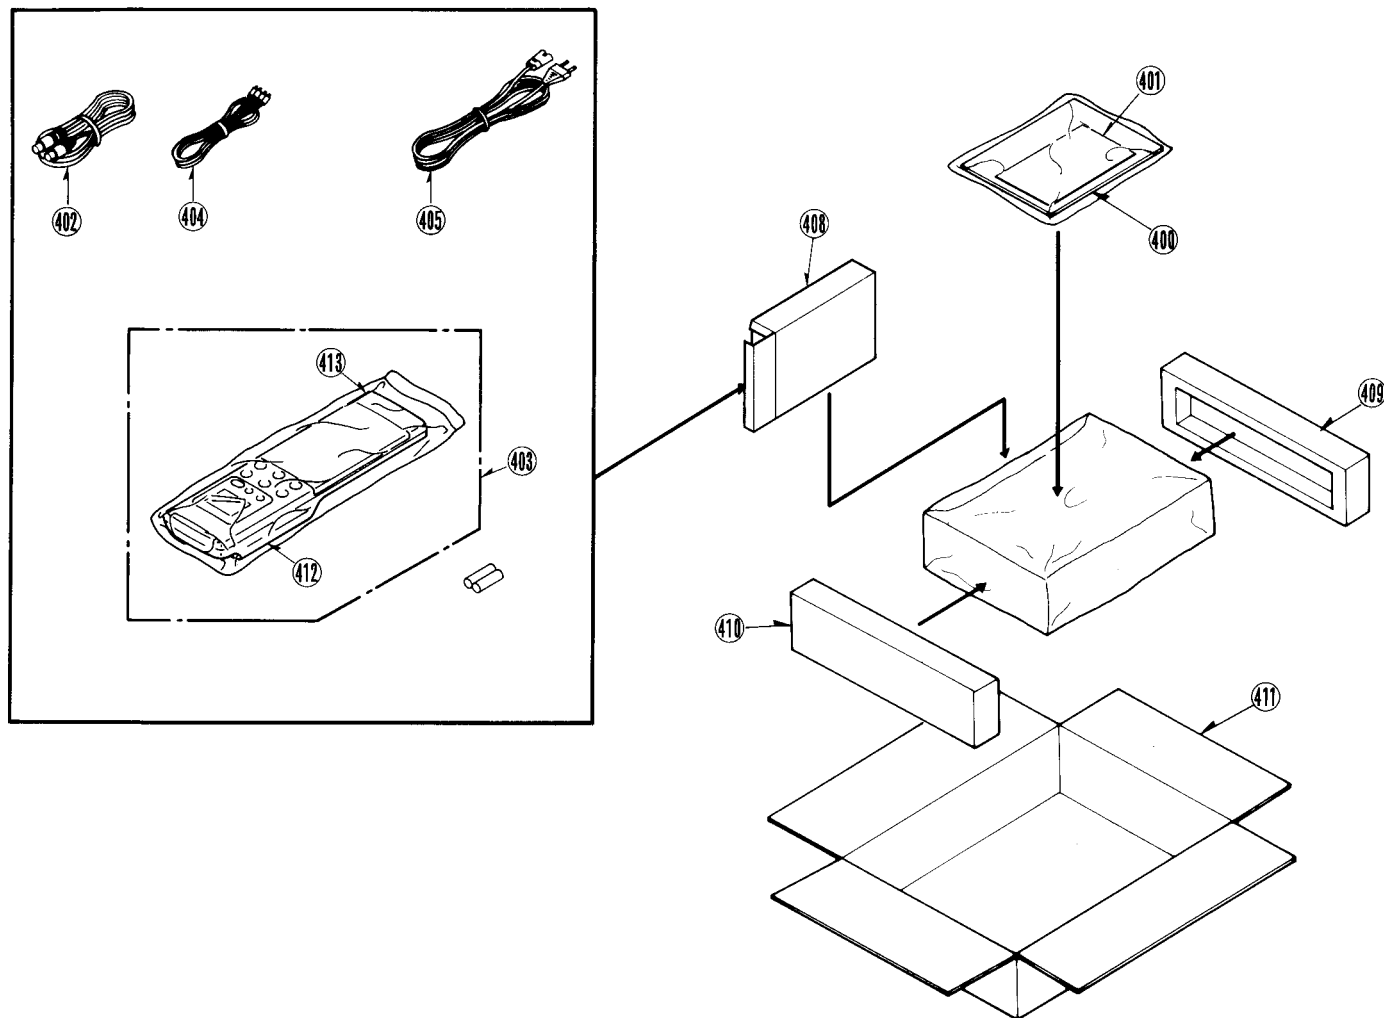

5. PACKING PARTS SECTION

Note:1.* Be sure to make your orders of replacement parts according to this list.
2.IMPORTANT SAFETY NOTICE
Components identified with the mark <I> have the special characteristics for safety. When replacing any of these components,use only the same type.

Ref.No.	Part No.	Part Name & Description	Pcs	Remarks
400(5)	VQT4590	OPERATING INSTRUCTIONS (ENGLISH/GERMAN)	1 <I>	
400(5)	VQT4591	OPERATING INSTRUCTIONS (FRENCH/DUTCH)	1 <I>	
400(5)	VQT4592	OPERATING INSTRUCTIONS (ITALIAN)	1 <I>	
401(5)	VQC1859	PROGRAMME SHEET	1	
402(5)	VJA0710	DIN RF CABLE	1	
403(5)	VEQ1389	REMOTE CONTROLLER UNIT (BUILD IN DIGITAL SCANNER)	1	
404(5)	VJA0231	AUDIO CABLE	1	
405(5)	VJA0665	AC CORD	1 <I>	
408(5)	VFK0834	ACCESSORIES PACKING	1	
409(5)	VPN3396	CUSHION (R)	1	
410(5)	VPN3395	CUSHION (L)	1	
411(5)	VPG6386	PACKING	1	
412(5)	VKF1658	BATTERY COVER	1	
413(5)	VGQ2399	SENSOR CAP	1	
		SERVICING FIXTURES & TOOLS		
	VFJ8125H3F	VHS ALIGNMENT TAPE(PAL)	1	
	VFK0335	RETAINING RING REMOVER (3mm/4mm)	1	
	VFK0387	TENSION POST ADJUSTMENT PLATE	1	
	VFK0191	POST ADJUSTMENT PLATE	1	
	VFK0190	REEL TABLE HEIGHT GAUGE	1	
	VFK0328	H-POSITION ADJUSTMENT SCREWDRIVER	1	
	VFK0329	POST ADJUSTMENT SCREWDRIVER	1	
	VFK62	FAN TYPE TENSION GAUGE	1	
	VFK0326	HEX WRENCH SET	1	
	VFK0132	BACK TENSION METER	1	
	VFK0343	CHECK LIGHT	1	
	VFK0344	HEIGHT ADJUSTMENT FIXTURE	1	
	VFK27	HEAD CLEANING STICK	1	
	MOR265	MORLYTONE GREASE	1	
	VFK0341	UPPER CYLINDER REMOVER	1	
	VFK0680	WHITE GREASE	1	

5-2. ELECTRICAL REPLACEMENT PARTS LIST

Note: 1. * Be sure to make your orders of replacement parts according to this list.
 2. IMPORTANT SAFETY NOTICE
 Components identified with the mark (!) have the special characteristics for safety. When replacing any of these components, use only the same type.
 3. Unless otherwise specified,
 All resistors are in OHMS, K=1,000 OHMS. All capacitors are in MICRO-FARADS (uf), P=pf.
 4. The P.C. Board units marked with (!) show below the main assembled parts.
 5. Printed circuit board assembly with mark (NLA) is no longer available after discontinuation of the product.

Ref.No.	Part No.	Part Name & Description	Pcs	Remarks
	VEPO6795B	MAIN C.B.A.	1	(NLA)
		INCLUDING THE INPUT/ OUTPUT PACK C.B.A. (VEPO3912A), S-VHS P.B. PACK C.B.A. (VEPO3920A), LUMINANCE & CHROMINANCE PACK C.B.A. (VEPO3928A), HI-FI AUDIO PACK C.B.A. (VEPO4361B), SUB SERVO PACK C.B.A. (VEPO6796B), VPS PACK C.B.A. (VEPO7575A), TV DEMODULATOR PACK C.B.A. (VEPO7643E), DECODER PACK C.B.A. (VEPO7671C).		
	VEPO3912A	INPUT/OUTPUT PACK C.B.A.	1	(NLA)
		INCLUDED IN MAIN C.B.A. (VEPO6795B).		
	VEPO3920A	S-VHS P.B. PACK C.B.A.	1	(NLA)
		INCLUDED IN MAIN C.B.A. (VEPO6795B).		
	VEPO3928A	LUMINANCE & CHROMINANCE PACK C.B.A.	1	(NLA)
		INCLUDED IN MAIN C.B.A. (VEPO6795B).		
	VEPO4361B	HI-FI AUDIO PACK C.B.A.	1	(NLA)
		INCLUDED IN MAIN C.B.A. (VEPO6795B).		
	VEPO6796B	SUB SERVO PACK C.B.A.	1	(NLA)
		INCLUDED IN MAIN C.B.A. (VEPO6795B).		
	VEPO7575A	VPS PACK C.B.A.	1	(NLA)
		INCLUDED IN MAIN C.B.A. (VEPO6795B).		
	VEPO7643E	TV DEMODULATOR PACK C.B.A.	1	(NLA)
		INCLUDED IN MAIN C.B.A. (VEPO6795B).		
	VEPO7671C	DECODER PACK C.B.A.	1	(NLA)
		INCLUDED IN MAIN C.B.A. (VEPO6795B).		
	VEPO5178A	HEAD AMP C.B.A.	1	(NLA)
	VEPO7674B	TIMER C.B.A.	1	(NLA)
	VEPO0S02B	VR C.B.A.	1	(NLA)
	VEPO0S03A	HEADPHONE & MIC JACK C.B.A.	1	(NLA)

Ref.No.	Part No.	Part Name & Description	Pcs	Remarks
	VEPO0S04A	FRONT INPUT C.B.A.	1	(NLA)
	VEPO0S33B	JOG SHUTTLE C.B.A.	1	(NLA)
	VEPO1487A	POWER C.B.A.	1	(NLA) (!)
	VEK0117	CYLINDER DRIVE C.B.A.	1	(NLA)
	VXA3825	MECHANISM CONNECTION C.B.A.	1	(NLA)
	VEPO0K88C	FE HEAD C.B.A.	1	(NLA)
	VEPO0P61A	REV MOTOR CONNECTION C.B.A.	1	(NLA)
	VEK3578	PHOTO Tr. (S) C.B.A.	1	(NLA)
	-----	PHOTO Tr. (T) C.B.A.	1	(NLA)
				INCLUDED IN SLIDE SW UNIT. (VXA4642)
	ENC17984	RF CONVERTER	1	(!)
	ENV57884H6	TUNER	1	(!)
F1101	XBA2C16TB0	FUSE	1	(!)
	VEPO6795B	MAIN C.B.A.		(NLA)
		CAPACITORS		
C301	ECQV1H104J2	P. CAPACITOR 50V 0.1U	1	
C302	ECEA1CK100	E. CAPACITOR 16V 10U	1	
C303	ECUM1H104ZFN	C. CAPACITOR 50V 0.1U	1	
C304, 05	ECEA1EK4R7	E. CAPACITOR 25V 4.7U	2	
C306	ECUM1H080DCN	C. CAPACITOR CH 50V 8P	1	
C307	ECUM1H270JCN	C. CAPACITOR CH 50V 27P	1	
C308	ECUM1H390JCN	C. CAPACITOR CH 50V 39P	1	
C309	ECUM1H560JCN	C. CAPACITOR CH 50V 56P	1	
C310	ECUM1H220JCN	C. CAPACITOR CH 50V 22P	1	
C312	ECUM1H561JCN	C. CAPACITOR 50V 560P	1	
C313	ECEAQJK470	E. CAPACITOR 6.3V 47U	1	
C314	ECEA1CK100	E. CAPACITOR 16V 10U	1	
C315	ECUM1H104ZFN	C. CAPACITOR 50V 0.1U	1	
C316	ECUM1H560JCN	C. CAPACITOR CH 50V 56P	1	
C317	ECEA1CK100	E. CAPACITOR 16V 10U	1	
C318	ECEAQJK220	E. CAPACITOR 6.3V 22U	1	
C319	ECEAQJK101	E. CAPACITOR 6.3V 100U	1	
C320, 21	ECUM1H103ZFN	C. CAPACITOR CH 50V 0.01U	2	
C322	ECEAQJK101	E. CAPACITOR 6.3V 100U	1	
C323	ECUM1H680JCN	C. CAPACITOR CH 50V 68P	1	
C324	ECUM1H331JCN	C. CAPACITOR CH 50V 330P	1	
C325	ECEA1EK4R7	E. CAPACITOR 25V 4.7U	1	
C701	ECEA1EK4R7	E. CAPACITOR 25V 4.7U	1	
C702	ECEA1CKS100	E. CAPACITOR 16V 10U	1	
C703	ECEA1HK2R2	E. CAPACITOR 50V 2.2U	1	
C707	ECEA1HK0R1	E. CAPACITOR 50V 0.1U	1	
C708	ECEA1CKS100	E. CAPACITOR 16V 10U	1	

Ref.No.	Part No.	Part Name & Description	Pcs	Remarks	Ref.No.	Part No.	Part Name & Description	Pcs	Remarks
C710	ECUM1H1032FN	C.CAPACITOR CH 50V 0.01U	1		C2005	ECEA1CK100	E.CAPACITOR 16V 10U	1	
C717-20	ECUM1H1032FN	C.CAPACITOR CH 50V 0.01U	4		C2006	ECUM1H471JCN	C.CAPACITOR 50V 470P	1	
C721	ECEA1HKR27K	E.CAPACITOR 50V 0.27U	1		C2007	ECEAQJK470	E.CAPACITOR 6.3V 47U	1	
C722	ECUM1H1032FN	C.CAPACITOR CH 50V 0.01U	1		C2008	ECEAQJK101	E.CAPACITOR 6.3V 100U	1	
C723	ECUM1H180JCN	C.CAPACITOR CH 50V 48P	1		C2009	VCYE1C104MR1	S.CAPACITOR 16V 0.1U	1	
C725	ECQV1H104JZ	P.CAPACITOR 50V 0.1U	1		C2010	ECEAQJK221	E.CAPACITOR 6.3V 220U	1	
C727	ECUM1H080DCN	C.CAPACITOR CH 50V 80P	1		C2011	ECUM1H222KBN	C.CAPACITOR CH 50V 2200P	1	
C728	ECUM1H1032FN	C.CAPACITOR CH 50V 0.01U	1		C2012	ECQB1H222KH	P.CAPACITOR 50V 2200P	1	
C730	ECEA1CK100	E.CAPACITOR 16V 10U	1		C2013	ECEA1HKN3R3	E.CAPACITOR 50V 3.3U	1	
C731	ECEA1CKS100	E.CAPACITOR 16V 10U	1		C2014	ECEA1HK3R3	E.CAPACITOR 50V 3.3U	1	
C734	ECUM1H1032FN	C.CAPACITOR CH 50V 0.01U	1		C2015	ECEA1HKR47	E.CAPACITOR 50V 0.47U	1	
C739	ECEA1HKO10	E.CAPACITOR 50V 1U	1		C2016	ECUM1H472KBN	C.CAPACITOR CH 50V 4700P	1	
C740	ECUM1H1032FN	C.CAPACITOR CH 50V 0.01U	1		C2017	ECQV1H184JZ	P.CAPACITOR 50V 0.18U	1	
C741	ECEA1CK100	E.CAPACITOR 16V 10U	1		C2018	ECEAQJK470	E.CAPACITOR 6.3V 47U	1	
C742	ECUM1H030CCN	C.CAPACITOR CH 50V 3P	1		C2019	ECQV1H683JZ	P.CAPACITOR 50V 0.068U	1	
C743	ECUM1H270RSN	C.CAPACITOR CH 50V 27P	1		C2020	ECUM1H1032FN	C.CAPACITOR CH 50V 0.01U	1	
C744	ECEA1HKR47	E.CAPACITOR 50V 0.47U	1		C2021	ECEA1AK470	E.CAPACITOR 10V 47U	1	
C745	ECUM1H680JPN	C.CAPACITOR CH 50V 68P	1		C2022	ECUM1E223KBN	C.CAPACITOR CH 25V 0.022U	1	
C746	ECUM1H150JCN	C.CAPACITOR CH 50V 15P	1		C2023	ECEA1CK470	E.CAPACITOR 16V 47U	1	
C748	ECEA1CK470	E.CAPACITOR 16V 47U	1		C2024	ECEAQJK220	E.CAPACITOR 6.3V 22U	1	
C781	ECUM1H202JCN	C.CAPACITOR CH 50V 22P	1		C2025	ECUM1H472KBN	C.CAPACITOR CH 50V 4700P	1	
C782	ECUM1H060DCN	C.CAPACITOR CH 50V 6P	1		C2026	ECUM1H101JCN	C.CAPACITOR CH 50V 100P	1	
C790	ECUM1H1032FN	C.CAPACITOR CH 50V 0.01U	1		C2029	ECUM1H392KBN	C.CAPACITOR CH 50V 3900P	1	
C801,02	ECEAQJK101	E.CAPACITOR 6.3V 100U	2		C2501	ECEA1CK101	E.CAPACITOR 16V 100U	1	
C803	ECUM1H181JCN	C.CAPACITOR CH 50V 180P	1		C2502	ECEAQJM221	E.CAPACITOR 6.3V 220U	1	
C804	ECUM1H270JCN	C.CAPACITOR CH 50V 27P	1		C2503,04	ECUM1H333KBN	C.CAPACITOR CH 50V 0.033U	2	
C805	ECUM1H470JCN	C.CAPACITOR CH 50V 47P	1		C2505	ECEA1CU470	E.CAPACITOR 16V 47U	1	
C806	ECUM1H1032FN	C.CAPACITOR CH 50V 0.01U	1		C2506-09	ECUM1H333KBN	C.CAPACITOR CH 50V 0.033U	4	
C807	ECUM1H151JCN	C.CAPACITOR CH 50V 150P	1		C2510-12	ECEA1HK2R2	E.CAPACITOR 50V 2.2U	3	
C808-10	ECUM1H1032FN	C.CAPACITOR CH 50V 0.01U	3		C2513,14	ECUM1C1052FN	C.CAPACITOR 16V 1U	2	
C811	ECUM1H560JCN	C.CAPACITOR CH 50V 56P	1		C2515	ECEAQJK470	E.CAPACITOR 6.3V 47U	1	
C812	ECUM1H1032FN	C.CAPACITOR CH 50V 0.01U	1		C2516	ECEA1HKR47	E.CAPACITOR 50V 4.7U	1	
C813	ECUM1H560JCN	C.CAPACITOR CH 50V 56P	1		C2517	ECUM1H101JCN	C.CAPACITOR CH 50V 100P	1	
C814	ECUM1H1032FN	C.CAPACITOR CH 50V 0.01U	1		C2518	ECEA1HKNR47	E.CAPACITOR 50V 0.47U	1	
C815	ECUM1H470JCN	C.CAPACITOR CH 50V 47P	1		C2519	ECUM1H101JCN	C.CAPACITOR CH 50V 100P	1	
C816,17	ECUM1H1032FN	C.CAPACITOR CH 50V 0.01U	2		C2520	ECEA1HKNR47	E.CAPACITOR 50V 0.47U	1	
C819-22	ECUM1H1032FN	C.CAPACITOR CH 50V 0.01U	4		C2521	ECEA1EM470	E.CAPACITOR 25V 47U	1	
C823	ECEAQJK101	E.CAPACITOR 6.3V 100U	1		C2522	ECUM1E1042FN	C.CAPACITOR CH 25V 0.1U	1	
C824	ECUM1H1032FN	C.CAPACITOR CH 50V 0.01U	1		C2523	ECUM1E223KBN	C.CAPACITOR CH 25V 0.022U	1	
C825	ECUM1H470JCN	C.CAPACITOR CH 50V 47P	1		C2524,25	ECEA1CM221	E.CAPACITOR 16V 220U	2	
C826	ECUM1H1032FN	C.CAPACITOR CH 50V 0.01U	1		C2526	ECEAQJK220	E.CAPACITOR 6.3V 22U	1	
C827	ECEA1HKR01	E.CAPACITOR 50V 0.1U	1		C2527	ECUM1H102KBN	C.CAPACITOR CH 50V 1000P	1	
C828	ECQB1H332JH	P.CAPACITOR 50V 0.27U	1		C2528	ECUM1E1042FN	C.CAPACITOR CH 25V 0.1U	1	
C829	ECUM1H331JCN	C.CAPACITOR CH 50V 330P	1		C2529	ECUM1C2242FN	C.CAPACITOR CH 16V 0.22U	1	
C830	ECUM1H1042FN	C.CAPACITOR 50V 0.1U	1		C2531	VCYD1C104MR1	S.CAPACITOR 16V 0.1U	1	
C831	ECUM1H681JCN	C.CAPACITOR 50V 680P	1		C3001	ECEAQJM471	E.CAPACITOR 6.3V 470U	1	
C832	ECUM1H1032FN	C.CAPACITOR CH 50V 0.01U	1		C3003	ECEA1CK470	E.CAPACITOR 16V 47U	1	
C834,35	ECUM1H121JCN	C.CAPACITOR CH 50V 120P	2		C3005	ECUM1H1032FN	C.CAPACITOR CH 50V 0.01U	1	
C836,37	ECUM1H1042FN	C.CAPACITOR 50V 0.1U	2		C3009	ECUM1H220JCN	C.CAPACITOR CH 50V 22P	1	
C838	ECUM1H100DCN	C.CAPACITOR CH 50V 10P	1		C3010	ECUM1H681JCN	C.CAPACITOR 50V 680P	1	
C839	ECUM1H102KBN	C.CAPACITOR CH 50V 1000P	1		C3011	ECUM1H330JCN	C.CAPACITOR CH 50V 33P	1	
C840	ECEAQJK101	E.CAPACITOR 6.3V 100U	1		C3012	ECUM1H180JCN	C.CAPACITOR CH 50V 18P	1	
C841	ECEA1HKR47	E.CAPACITOR 50V 4.7U	1		C3013	ECUM1H181JCN	C.CAPACITOR CH 50V 180P	1	
C842	ECUM1H123KBN	C.CAPACITOR 50V 0.012U	1		C3014	ECUM1H180JCN	C.CAPACITOR CH 50V 18P	1	
C843,44	ECUM1H1032FN	C.CAPACITOR CH 50V 0.01U	2		C3015	ECEAQJK470	E.CAPACITOR 6.3V 47U	1	
C1002,03	ECUM1H1032FN	C.CAPACITOR CH 50V 0.01U	2		C3016	ECUM1H151JCN	C.CAPACITOR CH 50V 150P	1	
C1004	ECEA1CK101	E.CAPACITOR 16V 100U	1		C3018	ECUM1H1042FN	C.CAPACITOR 50V 0.1U	1	
C1006	ECEA1EK470	E.CAPACITOR 25V 47U	1		C3019	ECEAQJK470	E.CAPACITOR 6.3V 47U	1	
C1007	ECEA1AK330	E.CAPACITOR 10V 33U	1		C3020	ECUM1H560JCN	C.CAPACITOR CH 50V 56P	1	
C1008	ECEA1CK330	E.CAPACITOR 16V 33U	1		C3021	ECUM1H080DCN	C.CAPACITOR CH 50V 8P	1	
C1009	ECEAQJK470	E.CAPACITOR 6.3V 47U	1		C3022	ECUM1H1032FN	C.CAPACITOR CH 50V 0.01U	1	
C1010	ECEA1EK47	E.CAPACITOR 25V 4.7U	1		C3023	ECUM1H1042FN	C.CAPACITOR 50V 0.1U	1	
C1011	ECUM1H1042FN	C.CAPACITOR 50V 0.1U	1		C3024	ECUM1H1032FN	C.CAPACITOR CH 50V 0.01U	1	
C1701	ECQD2H471KB	E.CAPACITOR 500V 470P	1		C3026	ECUM1H220JCN	C.CAPACITOR CH 50V 22P	1	
C1702	ECEA1CM101	E.CAPACITOR 16V 100U	1		C3027	FRJ6GM20R00	M.RESISTOR CH 1/10W 0	1	
C1703	ECUM1H1032FN	C.CAPACITOR CH 50V 0.01U	1		C3028	ECUM1H680JCN	C.CAPACITOR CH 50V 68P	1	
C1704	ECEA1CK101	E.CAPACITOR 16V 100U	1		C3029	ECUM1H1032FN	C.CAPACITOR CH 50V 0.01U	1	
C1705	ECUM1C1052FN	C.CAPACITOR 16V 1U	1		C3031	ECUM1H181JCN	C.CAPACITOR CH 50V 180P	1	
C1706	ECEA1VU100	E.CAPACITOR 35V 10U	1		C3032	ECEAQJK101	E.CAPACITOR 6.3V 100U	1	
C1707	ECQB1H103JH	P.CAPACITOR 50V 0.01U	1		C3033	ECUM1H1042FN	C.CAPACITOR 50V 0.1U	1	
C1708	ECEA1CM221	E.CAPACITOR 16V 220U	1		C3034	ECUM1C1052FN	C.CAPACITOR 16V 1U	1	
C2001	ECEA1HKR47	E.CAPACITOR 50V 4.7U	1		C3035	ECUM1H1042FN	C.CAPACITOR 50V 0.1U	1	
C2002	ECEAQJK220	E.CAPACITOR 6.3V 22U	1		C3036	ECUM1H472KBN	C.CAPACITOR CH 50V 4700P	1	
C2003	ECUM1H332KBN	C.CAPACITOR CH 50V 3300P	1		C3037,38	ECUM1H1042FN	C.CAPACITOR 50V 0.1U	2	
C2004	ECEA1HK3R3	E.CAPACITOR 50V 3.3U	1		C3050	ECUM1H220JCN	C.CAPACITOR CH 50V 22P	1	

Ref.No.	Part No.	Part Name & Description	Pcs	Remarks	Ref.No.	Part No.	Part Name & Description	Pcs	Remarks
C3901, 02	ECEAJK101	E. CAPACITOR 6.3V 100U	2		C4613	ECUM1H471JCN	C. CAPACITOR 50V 470P	1	
C3903	ECUM1H1032FN	C. CAPACITOR CH 50V 0.01U	1		C4616	ECUX1H1022FV	C. CAPACITOR CH 50V 1000P	1	
C3904	ECEA1K470	E. CAPACITOR 10V 47U	1		C4617	ECEA10M22	E. CAPACITOR 10V 22U	1	
C3905	ECEA1K470	E. CAPACITOR 16V 47U	1		C4618	ECQB1H822JH	P. CAPACITOR 50V 8200P	1	
C3906, 07	ECEA1K100	E. CAPACITOR 16V 10U	2		C4619	ECEA1APB100	E. CAPACITOR 10V 10U	1	
C3908, 09	ECUM1H332KBN	C. CAPACITOR CH 50V 3300P	2		C4621	ECEAJPK101	E. CAPACITOR 6.3V 100U	1	
C3910	ECUM1H1032FN	C. CAPACITOR CH 50V 0.01U	1		C4629	ECQB1H103JZ	P. CAPACITOR 50V 0.01U	1	
C3911, 12	ECEAJK101	E. CAPACITOR 6.3V 100U	2		C4636	ECUM1H471JCN	C. CAPACITOR CH 50V 470P	1	
C3913	ECUM1H1042FN	C. CAPACITOR 50V 0.1U	1		C4638	ECQB1H822JH	P. CAPACITOR 50V 8200P	1	
C3914	ECUM1H102KBN	C. CAPACITOR CH 50V 1000P	1		C4651	ECQB1H333JA	P. CAPACITOR 50V 0.033U	1	
C3915-17	ECEAJK101	E. CAPACITOR 6.3V 100U	3		C4652, 53	ECUM1C1052FN	C. CAPACITOR 16V 1U	2	
C4001	ECEAJK220	E. CAPACITOR 6.3V 22U	1		C4901-04	ECUM1H101JCN	C. CAPACITOR CH 50V 100P	4	
C4002, 03	ECUM1H103KBN	C. CAPACITOR CH 50V 0.01U	2		C4908-10	VCEA1CAD100	E. CAPACITOR 16V 10U	3	
C4005	ECUM1H1032FN	C. CAPACITOR CH 50V 0.01U	1		C4911, 12	VCEAJAC101	E. CAPACITOR 6.3V 100U	2	
C4006	ECEAJK220	E. CAPACITOR 6.3V 22U	1		C4913	ECQB1H103JH	P. CAPACITOR 50V 0.01U	1	
C4007	ECEA16M33	E. CAPACITOR 16V 33U	1		C4914	ECQB1H332JH	P. CAPACITOR 50V 0.27U	1	
C4008	ECQB1H103JH	P. CAPACITOR 50V 0.01U	1		C4915	ECQB1H103JH	P. CAPACITOR 50V 0.01U	1	
C4009	ECUM1H102KBN	C. CAPACITOR CH 50V 1000P	1		C4916	ECQB1H332JH	P. CAPACITOR 50V 0.27U	1	
C4010	ECQP1222JZ	P. CAPACITOR 0.0022U	1		C4917	VCEA1CAD100	E. CAPACITOR 16V 10U	1	
C4011	ECCD2H181J	C. CAPACITOR 500V 180P	1		C4918	ECQB1H103JH	P. CAPACITOR 50V 0.01U	1	
C4013, 14	ECEA1K100	E. CAPACITOR 16V 10U	2		C4919	ECQB1H332JH	P. CAPACITOR 50V 0.27U	1	
C4015	ECUM1H21JCN	C. CAPACITOR CH 50V 220P	1		C4920	ECQB1H103JH	P. CAPACITOR 50V 0.01U	1	
C4016	ECUM1H471JCN	C. CAPACITOR 50V 470P	1		C4921	ECQB1H332JH	P. CAPACITOR 50V 0.27U	1	
C4017	ECUM1H1032FN	C. CAPACITOR CH 50V 0.01U	1		C4922	ECQB1H103JH	P. CAPACITOR 50V 0.01U	1	
C4018	ECEA1HK010	E. CAPACITOR 50V 1U	1		C4923, 24	ECQB1H332JH	P. CAPACITOR 50V 0.27U	2	
C4019	ECEA1K100	E. CAPACITOR 16V 10U	1		C4925	ECQB1H103JH	P. CAPACITOR 50V 0.01U	1	
C4020	ECUM1H1032FN	C. CAPACITOR CH 50V 0.01U	1		C5005	ECEA1EK3R3	E. CAPACITOR 25V 3.3U	1	
C4021	ECEAJK330	E. CAPACITOR 6.3V 33U	1		C5006	ECUM1H150JCN	C. CAPACITOR CH 50V 15P	1	
C4502	ECUM1C1042FN	C. CAPACITOR CH 16V 0.1U	1		C5007-09	ECUM1H330JCN	C. CAPACITOR CH 50V 33P	3	
C4503	ECUX1H152KBN	C. CAPACITOR CH 50V 1500P	1		C5012, 13	ECUM1H1032FN	C. CAPACITOR CH 50V 0.01U	2	
C4504, 05	ECEA1CP2470	E. CAPACITOR 16V 47U	2		C5014	ECEAJK470	E. CAPACITOR 6.3V 47U	1	
C4506	VCEA1CAH100	E. CAPACITOR 16V 10U	1		C5015, 16	ECUM1H1032FN	C. CAPACITOR CH 50V 0.01U	2	
C4507	ECQB1H223JA	P. CAPACITOR 50V 0.022U	1		C6001	ECEAJK330	E. CAPACITOR 6.3V 33U	1	
C4508	ECEA1EB24R7	E. CAPACITOR 25V 4.7U	1		C6002	ECKF1H1032F	C. CAPACITOR 50V 0.01U	1	
C4509	ECEA1AP2470	E. CAPACITOR 10V 47U	1		C6003, 04	ECEAJK470	E. CAPACITOR 6.3V 47U	2	
C4510	ECQB1H103JA	P. CAPACITOR 50V 0.01U	1		C6005	ECUM1H1042FN	C. CAPACITOR 50V 0.1U	1	
C4511	ECQB1H332JA	P. CAPACITOR 50V 3300P	1		C6006	ECQB1H392J	P. CAPACITOR 50V 3900P	1	
C4512	ECUX1H561JV	C. CAPACITOR CH 50V 560P	1		C6007	ECUM1H1032FN	C. CAPACITOR CH 50V 0.01U	1	
C4513	ECUM1H681JN	C. CAPACITOR CH 50V 680P	1		C6010, 11	ECUM1H180JCN	C. CAPACITOR CH 50V 18P	2	
C4514	ECUM1H561JN	C. CAPACITOR CH 50V 560P	1		C6014	ECAJ3M331	E. CAPACITOR 6.3V 330U	1	
C4515	VCEA1EAH4R7	E. CAPACITOR 25V 4.7U	1		C6015	ECEAJK470	E. CAPACITOR 6.3V 47U	1	
C4517	ECEA1AP2101	E. CAPACITOR 10V 100U	1		C6016	ECUM1H1032FN	C. CAPACITOR CH 50V 0.01U	1	
C4518	ECUM1H1042FN	C. CAPACITOR 50V 0.1U	1		C6017	ECA1CM222	E. CAPACITOR 16V 2200U	1	
C4521	ECUM1C473KBN	C. CAPACITOR CH 16V 0.047U	1		C6018	ECUM1H1032FN	C. CAPACITOR CH 50V 0.01U	1	
C4522	VCEA1HAH3R3	E. CAPACITOR 50V 3.3U	1		C6019	ECEAJK220	E. CAPACITOR 6.3V 22U	1	
C4528	ECUM1H1042FN	C. CAPACITOR 50V 0.1U	1		C6021	ECUM1H1042FN	C. CAPACITOR 50V 0.1U	1	
C4530	ECEAJPK470	E. CAPACITOR 6.3V 47U	1		C6022, 23	ECUM1H271JCN	C. CAPACITOR CH 50V 270P	2	
C4533	ECEA1CP2330	E. CAPACITOR 16V 33U	1		C6024-26	ECUM1H1032FN	C. CAPACITOR CH 50V 0.01U	3	
C4537	ECUM1H102JCN	C. CAPACITOR CH 50V 1000P	1		C6027	ECEA1HK2R2	E. CAPACITOR 50V 2.2U	1	
C4538	ECEA1HUR47	E. CAPACITOR 50V 0.47U	1		C6028	ECKF1H1032F	C. CAPACITOR 50V 0.01U	1	
C4539	ECUM1C2242FN	C. CAPACITOR CH 16V 0.22U	1		C6029	ECUM1H1032FN	C. CAPACITOR CH 50V 0.01U	1	
C4541	ECUM1H1042FN	C. CAPACITOR 50V 0.1U	1		C6104	ECAJ3M221	E. CAPACITOR 6.3V 220U	1	
C4545	ECUM1H102KBN	C. CAPACITOR CH 50V 1000P	1		C6105	ECEA1K100	E. CAPACITOR 16V 10U	1	
C4552	ECUM1C1042FN	C. CAPACITOR CH 16V 0.1U	1		C6302	EBCS5R5T224N	E. CAPACITOR 5.5V 0.22U	1	
C4556	VCEA1CAH100	E. CAPACITOR 16V 10U	1		C7302	ECEA1CKN100	E. CAPACITOR 16V 10U	1	
C4557	ECQB1H223JA	P. CAPACITOR 50V 0.022U	1		C7303	ECQV1H393JZ	P. CAPACITOR 50V 0.039U	1	
C4558	ECEA1EB24R7	E. CAPACITOR 25V 4.7U	1		C7304	ECEA1CKN100	E. CAPACITOR 16V 10U	1	
C4559	ECEA1AP2470	E. CAPACITOR 10V 47U	1		C7305	ECQV1H473JZ	P. CAPACITOR 50V 0.047U	1	
C4560	ECQB1H103JA	P. CAPACITOR 50V 0.01U	1		C7306	ECQB1H102KZ	P. CAPACITOR 50V 1000P	1	
C4561	ECQB1H332JA	P. CAPACITOR 50V 3300P	1		C7307	ECQB1H822KZ	P. CAPACITOR 50V 8200P	1	
C4562	ECUM1H561JN	C. CAPACITOR CH 50V 560P	1		C7308	ECQB1H102KZ	P. CAPACITOR 50V 1000P	1	
C4563	ECUM1H681JN	C. CAPACITOR CH 50V 680P	1		C7309	ECQB1H152JH	P. CAPACITOR 50V 1500P	1	
C4564	ECUM1H561JN	C. CAPACITOR CH 50V 560P	1		C7310	ECEA16M10	E. CAPACITOR 16V	1	
C4565	VCEA1EAH4R7	E. CAPACITOR 25V 4.7U	1		C7311	ECEA50MR47	E. CAPACITOR	1	
C4567	ECEA1AP2101	E. CAPACITOR 10V 100U	1		C7312	ECQV1H224JZ	P. CAPACITOR 50V 0.22U	1	
C4568	ECUM1H1042FN	C. CAPACITOR 50V 0.1U	1		C7313	ECQV1H104JZ	P. CAPACITOR 50V 0.1U	1	
C4572	VCEA1HAH3R3	E. CAPACITOR 50V 3.3U	1		C7314	ECQV1H224JZ	P. CAPACITOR 50V 0.22U	1	
C4576	ECUM1E473KBN	C. CAPACITOR CH 25V 0.047U	1		C7315	ECQV1H104JZ	P. CAPACITOR 50V 0.1U	1	
C4583	ECEA1CP2330	E. CAPACITOR 16V 33U	1		C7316	ECQV1H224JZ	P. CAPACITOR 50V 0.22U	1	
C4585, 86	ECEA1AP2101	E. CAPACITOR 10V 100U	2		C7317	ECEA1CK101	E. CAPACITOR 16V 100U	1	
C4591	ECUM1H1042FN	C. CAPACITOR 50V 0.1U	1		C7318	ECUM1H1032FN	C. CAPACITOR CH 50V 0.01U	1	
C4592	ECUX1H152KBN	C. CAPACITOR CH 50V 1500P	1		C7319	ECEA1CK470	E. CAPACITOR 16V 47U	1	
C4604	ECUM1H182JN	C. CAPACITOR CH 50V 1800P	1		C7320, 21	ECEA1CK100	E. CAPACITOR 16V 10U	2	
C4606	VCEAJAC470	E. CAPACITOR 6.3V 47U	1		C7323, 24	ECQV1H393JZ	P. CAPACITOR 50V 0.039U	2	
C4611	ECQB1H103JH	P. CAPACITOR 50V 0.01U	1		C7331	ECQV1H474JZ	P. CAPACITOR 50V 0.47U	1	

Ref.No.	Part No.	Part Name & Description	Pcs	Remarks
C7332, 33	ECUM1H1022FN	C.CAPACITOR CH 50V 1000P	2	
C7334	ECUM1H1032FN	C.CAPACITOR CH 50V 0.01U	1	
C7335	ECEA1CK470	E.CAPACITOR 16V 47U	1	
C7336	ECUM1H1032FN	C.CAPACITOR CH 50V 0.01U	1	
C7337	ECUM1H680JCN	C.CAPACITOR CH 50V 68P	1	
C7339	ECUM1H1032FN	C.CAPACITOR CH 50V 0.01U	1	
C7340	ECUM1H390JFN	C.CAPACITOR CH 50V 39P	1	
C7341	ECUM1H070DCN	C.CAPACITOR CH 50V 7P	1	
C7342	ECQV1H823JZ	P.CAPACITOR 50V 0.082U	1	
C7343	ECEA1CK100	E.CAPACITOR 16V 10U	1	
C7345	ECUM1H1032FN	C.CAPACITOR CH 50V 0.01U	1	
C7346	ECUM1H390JFN	C.CAPACITOR CH 50V 39P	1	
C7347	ECUM1H070DCN	C.CAPACITOR CH 50V 7P	1	
C7348	ECQV1H393JZ	P.CAPACITOR 50V 0.039U	1	
C7349, 50	ECUM1H221JCN	C.CAPACITOR CH 50V 220P	2	
C7351, 52	ECUM1H1032FN	C.CAPACITOR CH 50V 0.01U	2	
C7353	ECEA1CK470	E.CAPACITOR 16V 47U	1	
C7401	ECUM1H1032FN	C.CAPACITOR CH 50V 0.01U	1	
C7402	ECEA1CK100	E.CAPACITOR 16V 10U	1	
C7405, 06	ECUM1H1032FN	C.CAPACITOR CH 50V 0.01U	2	
C7407	ECEA1CK100	E.CAPACITOR 16V 10U	1	
C7408	ECUM1H1032FN	C.CAPACITOR CH 50V 0.01U	1	
C7412	ECEA0JK470	E.CAPACITOR 6.3V 47U	1	
C7413	ECUM1H1032FN	C.CAPACITOR CH 50V 0.01U	1	
C7651	ECEA1CKN100	E.CAPACITOR 16V 10U	1	
C7653	ECQB1H332JH	P.CAPACITOR 50V 0.27U	1	
C7668	ECUM1H1032FN	C.CAPACITOR CH 50V 0.01U	1	
C7685	ECEA1HK010	E.CAPACITOR 50V 1U	1	
C7801	ECQV1H104JZ	P.CAPACITOR 50V 0.1U	1	
C7815	VCYE1C104MR1	S.CAPACITOR 16V 0.1U	1	
C7816	ECEA1EK4R7	E.CAPACITOR 25V 4.7U	1	
C7821	ECUM1H151JCN	C.CAPACITOR CH 50V 150P	1	
C7822	ECQB1H333JH	P.CAPACITOR 50V 0.033U	1	
C7823	ECUM1H470JCN	C.CAPACITOR CH 50V 47P	1	
C7851	ECQV1H104JZ	P.CAPACITOR 50V 0.1U	1	
C7852	ECEA1CK101	E.CAPACITOR 16V 100U	1	
C7853, 54	ECUM1H330JCN	C.CAPACITOR CH 50V 33P	2	
C7855, 56	ECEA1HK010	E.CAPACITOR 50V 1U	2	
C7860	ECEA0JK101	E.CAPACITOR 6.3V 100U	1	
		DIODES		
D301	1SS254	DIODE	1	
D303	MA723	DIODE	1	
D710	MA3100L	DIODE	1	
D801-03	1SS254	DIODE	3	
D805, 06	1SS254	DIODE	2	
D1005	1SS254	DIODE	1	
D1006	SVO3YS	DIODE	1	
D1007	AK04	DIODE	1	
D1701	SB05-05CP	DIODE	1	
D1702	MA4300H	DIODE	1	
D1703	MA185	DIODE	1	
D2003	1SS254	DIODE	1	
D2503-10	1SS254	DIODE	8	
D2511	AK04	DIODE	1	
D2512	MA723VT	DIODE	1	
D2513	1SS254	DIODE	1	
D3003	1SS254	DIODE	1	
D3004	M1MA151WA	DIODE	1	
D3005	1SS254	DIODE	1	
D3901	MA4056M	DIODE	1	
D3902	1SS254	DIODE	1	
D3903	M1MA151WK	DIODE	1	
D3904, 05	MA151K	DIODE	2	
D4001	M1MA151WK	DIODE	1	
D4002-04	1SS254	DIODE	3	
D4501, 02	MA151K	DIODE	2	
D4503	MA151K	DIODE	1	
D4504	MA151K	DIODE	1	
D4602	MA151K	DIODE	1	
D6002-04	MA723VT	DIODE	3	
D6007	ERA15-01	DIODE	1	
D6008	AK04	DIODE	1	
D6009-11	1SS254	DIODE	3	

Ref.No.	Part No.	Part Name & Description	Pcs	Remarks
D6012	M1MA151WK	DIODE	1	
D6101-10	1SS254	DIODE	10	
D6112	1SS254	DIODE	1	
D6113, 14	SVO3YS	DIODE	2	
D7303	MA28WA	DIODE	1	
D7304	MA3100L	DIODE	1	
D7401	MA723VT	DIODE	1	
D7402	1SS254	DIODE	1	
D7406, 07	1SS254	DIODE	2	
D7408	M1MA151WK	DIODE	1	
D7672, 73	MA3150-H	DIODE	2	
D7851	1SS254	DIODE	1	
		DELAYS		
DL801	EFDUN124A13N	DELAY	1	
DL802	VLD0198	DELAY	1	
		FILTERS		
FL3901	VLF0413	FILTER	1	
FL4501	VLF0947	FILTER	1	
		INTEGRATED CIRCUITS		
IC301	MSM7403MS	IC	1	
IC302	VERH14D	IC	1	
IC303	UPC78L05J	IC	1	
IC701	M51366SP	IC	1	
IC801	M52352FP	IC	1	
IC2001	AN3727S	IC	1	
IC2002	UPC358G2	IC	1	
IC2501	BA6435S	IC	1	
IC2502	UPC358G2	IC	1	
IC2503	SI-3090CA	IC	1	
IC2504	TPIC0130N	IC	1	
IC3901	M52474P	IC	1	
IC3902	BA7004	IC	1	
IC4001	RC4565DD	IC	1	
IC4501	BH7770KS	IC	1	
IC4601	BA7755AF	IC	1	
IC4901	LA7155M	IC	1	
IC6001	MN67431VREG	IC	1	
IC6002	MC14519BF	IC	1	
IC6003	BU5863F	IC	1	
IC6004	MN1280S	IC	1	
IC7301	TDA3803A	IC	1	
IC7302	TA8721SN	IC	1	
IC7401	M66006FP	IC	1	
IC7851	MN158413VSSY	IC	1	
IC7852	MN1280S	IC	1	
IC7853	SDA5642	IC	1	
		CONNECTORS		
JK3901, 02	VJS1469	CONNECTOR (FEMALE)	2	
		COILS		
L302, 03	VLQ0188J390	COIL 39UH	2	
L304, 05	ELESQ101KA	COIL 100UH	2	
L306	ELESP560KA	COIL 56UH	1	
L307, 08	VLPO099	COIL 2	2	
L701	ELESP680KA	COIL 68UH	1	
L711	ELQTR22XB	COIL 0.22UH	1	
L714	VLQ0305J1R2	COIL 1.2UH	1	
L715	VLQ0213K680	COIL 68UH	1	
L716	ELESP560KA	COIL 56UH	1	
L717, 18	ELESP680KA	COIL 68UH	2	
L719	ELESP120KA	COIL 12UH	1	
L781	ELESP680KA	COIL 68UH	1	
L801	ELESQ101KA	COIL 100UH	1	
L802	ELESP270KA	COIL 27UH	1	
L803	ELESP560JA	COIL 56UH	1	
L804	ELESQ101KA	COIL 100UH	1	

[illegible]

Ref.No.	Part No.	Part Name & Description	Pcs	Remarks	Ref.No.	Part No.	Part Name & Description	Pcs	Remarks
Q3906	MSB709	TRANSISTOR	1		QR6105	MRN1402	TRANSISTOR	1	
Q3907	MSD601	TRANSISTOR	1		QR6106	MRN1404	TRANSISTOR	1	
Q4002	2SB710-R	TRANSISTOR	1		QR6107	MRN2404	TRANSISTOR	1	
Q4003	MSB710-R	TRANSISTOR	1		QR6108	MRN1404	TRANSISTOR	1	
Q4004	2SB1378	TRANSISTOR	1		QR6109	MRN2402	TRANSISTOR	1	
Q4005	MSB710-R	TRANSISTOR	1		QR7301,02	MRN1404	TRANSISTOR	2	
Q4006	2SD602A	TRANSISTOR	1		QR7312-14	MRN1402	TRANSISTOR	3	
Q4501	2SD655	TRANSISTOR	1		QR7315,16	MRN1404	TRANSISTOR	2	
Q4551	2SB561	TRANSISTOR	1		QR7401	UN2217	TRANSISTOR-RESISTOR	1	
Q4601	MSD1328	TRANSISTOR	1		QR7801	MRN2402	TRANSISTOR	1	
Q5001	MSB709	TRANSISTOR	1		QR7802	MRN1404	TRANSISTOR	1	
Q5002	MSD601	TRANSISTOR	1		QR7851	MRN1402	TRANSISTOR	1	
Q5003	2SA1022	TRANSISTOR CHIP	1		QR7852	MRN1404	TRANSISTOR	1	
Q5005	XN1501	TWIN TRANSISTOR	1						
Q5006	MSB709	TRANSISTOR	1						
Q5007	MSC2295	TRANSISTOR	1						
Q5008	MSB709	TRANSISTOR	1				RESISTORS		
Q5009-13	MSC2295	TRANSISTOR	5		R301	ERJ6QMYJ102	M.RESISTOR CH 1/10W 1K	1	
Q6001	2SD655	TRANSISTOR	1		R302	ERJ6QMYJ221	M.RESISTOR CH 1/10W 220	1	
Q6003	2SD893	TRANSISTOR	1		R303,04	ERJ6QMYJ561	M.RESISTOR CH 1/10W 560	2	
Q6004,05	2SD1994-S	TRANSISTOR	2		R305	ERJ6QMYJ103	M.RESISTOR CH 1/10W 10K	1	
Q6006	MSD602	TRANSISTOR	1		R306	ERJ6QMYJ332	M.RESISTOR CH 1/10W 3.3K	1	
Q6101	MSD601	TRANSISTOR	1		R307	ERJ6QMYJ183	M.RESISTOR CH 1/10W 18K	1	
Q6102	MSB709	TRANSISTOR	1		R308	ERJ6GEYJ272	M.RESISTOR CH 1/10W 2.7K	1	
Q6105	MSD601	TRANSISTOR	1		R309	ERJ6QMYJ472	M.RESISTOR CH 1/10W 4.7K	1	
Q7301	MSD601-ST	TRANSISTOR	1		R310	ERJ6QMYJ682	M.RESISTOR CH 1/10W 6.8K	1	
Q7304,05	MSD601	TRANSISTOR	2		R311	ERJ6QMYJ102	M.RESISTOR CH 1/10W 1K	1	
Q7306	2SC2404-C	TRANSISTOR CHIP	1		R313-15	ERJ6QMYJ473	M.RESISTOR CH 1/10W 47K	3	
Q7307	2SD1328	TRANSISTOR	1		R316,17	ERJ6QMYJ103	M.RESISTOR CH 1/10W 10K	2	
Q7401	2SB710	TRANSISTOR CHIP	1		R318	ERJ6QMYJ154	M.RESISTOR CH 1/10W 150K	1	
					R319	ERJ6QMYJ393	M.RESISTOR CH 1/10W 39K	1	
					R320	ERJ6QMYJ392	M.RESISTOR CH 1/10W 3.9K	1	
		COMBINATION PARTS			R321	ERJ6QMYJ182	M.RESISTOR CH 1/10W 1.8K	1	
QR301	DTC363EK	TRANSISTOR-RESISTOR	1		R322	ERJ6QMYJ392	M.RESISTOR CH 1/10W 3.9K	1	
QR303	MRN1404	TRANSISTOR	1		R323	ERJ6QMYJ153	M.RESISTOR CH 1/10W 15K	1	
QR304	MRN1403	TRANSISTOR	1		R324	ERJ6QMYJ332	M.RESISTOR CH 1/10W 3.3K	1	
QR305	MRN1404	TRANSISTOR	1		R325	ERJ6QMYJ103	M.RESISTOR CH 1/10W 10K	1	
QR306	IMH5	TRANSISTOR-RESISTOR	1		R716	ERJ6GEYJ152	M.RESISTOR CH 1/10W 1.5K	1	
QR701,02	MRN1404	TRANSISTOR	2		R717	ERJ6GEYJ332	M.RESISTOR CH 1/10W 3.3K	1	
QR711,12	MRN1403	TRANSISTOR	2		R718	ERJ6GEYJ754	M.RESISTOR CH 1/10W 750K	1	
QR801	MRN2404	TRANSISTOR	1		R719,20	ERJ6GEYJ682	M.RESISTOR CH 1/10W 6.8K	2	
QR803	MRN1404	TRANSISTOR	1		R721	ERJ6GEYJ272	M.RESISTOR CH 1/10W 2.7K	1	
QR805	MRN1403	TRANSISTOR	1		R722	ERJ6GEYJ332	M.RESISTOR CH 1/10W 3.3K	1	
QR807	MRN1403	TRANSISTOR	1		R723	ERJ6GEYJ183	M.RESISTOR CH 1/10W 18K	1	
QR1001,02	MRN1402	TRANSISTOR	2		R724	ERDS2TJ101	C.RESISTOR 1/4W 100	1	
QR2001,02	MRN1404	TRANSISTOR	2		R725	ERJ6GEYJ182	M.RESISTOR CH 1/10W 1.8K	1	
QR2502,03	MRN1403	TRANSISTOR	2		R726	ERJ6GEYJ472	M.RESISTOR CH 1/10W 4.7K	1	
QR2504	MRN2404	TRANSISTOR	1		R727	ERJ6GEYJ471	M.RESISTOR CH 1/10W 470	1	
QR3002,03	MRN2402	TRANSISTOR	2		R728	ERDS2TJ471	C.RESISTOR 1/4W 470	1	
QR3006	MRN1403	TRANSISTOR	1		R737	ERJ6GEYJ274	M.RESISTOR CH 1/10W 270K	1	
QR3007	DTC363EK	COMBI. TR-R	1		R738	ERJ6GEYJ334	M.RESISTOR CH 1/10W 330K	1	
QR3008	DTC363EK	TRANSISTOR-RESISTOR	1		R740	ERJ6GEYJ473	M.RESISTOR CH 1/10W 47K	1	
QR3010	MRN1404	TRANSISTOR	1		R741	ERJ6GEYJ562	M.RESISTOR CH 1/10W 5.6K	1	
QR3902	MRN1403	TRANSISTOR	1		R743	ERJ6GEYJ470	M.RESISTOR CH 1/10W 47	1	
QR3903	MRN1402	TRANSISTOR	1		R744	ERJ6GEYJ821	M.RESISTOR CH 1/10W 820	1	
QR4001-06	MRN1404	TRANSISTOR	6		R745	ERJ6GEYJ331	M.RESISTOR CH 1/10W 330	1	
QR4007	MRN1403	TRANSISTOR	1		R746	ERDS2TJ181	C.RESISTOR 1/4W 180	1	
QR4010	MRN1404	TRANSISTOR	1		R747	ERJ6GEYJ471	M.RESISTOR CH 1/10W 470	1	
QR4012	MRN1402	TRANSISTOR	1		R750	ERJ6GEYJ182	M.RESISTOR CH 1/10W 1.8K	1	
QR4013,14	MRN1404	TRANSISTOR	2		R759	ERJ6GEYJ103	M.RESISTOR CH 1/10W 10K	1	
QR4508,09	MRN2404	TRANSISTOR	2		R772	ERJ6GEYJ271	M.RESISTOR CH 1/10W 270	1	
QR4510	MRN1403	TRANSISTOR	1		R773	ERJ6GEYJ472	M.RESISTOR CH 1/10W 4.7K	1	
QR4602	MRN2402	TRANSISTOR	1		R774	ERJ6GEYJ562	M.RESISTOR CH 1/10W 5.6K	1	
QR4603	MRN1404	TRANSISTOR	1		R781	ERJ6GEYJ271	M.RESISTOR CH 1/10W 270	1	
QR6001,02	MRN2402	TRANSISTOR	2		R782	ERJ6GEYJ821	M.RESISTOR CH 1/10W 820	1	
QR6003	MRN1402	TRANSISTOR	1		R792	ERDS2TJ120	C.RESISTOR 1/4W 12	1	
QR6004	UN211H	IC	1		R801	ERJ6QMYJ821	M.RESISTOR CH 1/10W 820	1	
QR6005	MRN2404	TRANSISTOR	1		R802	ERJ6QMYJ102	M.RESISTOR CH 1/10W 1K	1	
QR6006	UN211H	IC	1		R803	ERJ6QMYJ471	M.RESISTOR CH 1/10W 470	1	
QR6007	MRN2404	TRANSISTOR	1		R804	ERJ6QMYJ102	M.RESISTOR CH 1/10W 1K	1	
QR6008	MRN2402	TRANSISTOR	1		R805	ERJ6QMYJ393	M.RESISTOR CH 1/10W 39K	1	
QR6009,10	MRN1404	TRANSISTOR	2		R806	ERJ6QMYJ102	M.RESISTOR CH 1/10W 1K	1	
QR6101	MRN1404	TRANSISTOR	1		R807,08	ERJ6QMYJ471	M.RESISTOR CH 1/10W 470	2	
QR6102,03	MRN1402	TRANSISTOR	2		R809,10	ERJ6QMYJ103	M.RESISTOR CH 1/10W 10K	2	
QR6104	MRN1407	TRANSISTOR	1		R811	ERJ6GEYJ821	M.RESISTOR CH 1/10W 820	1	

Ref.No.	Part No.	Part Name & Description	Pcs	Remarks	Ref.No.	Part No.	Part Name & Description	Pcs	Remarks
R812	ERJ6GMYJ102	M.RESISTOR CH 1/10W 1K	1		R2535	ERJ6GMYJ392	M.RESISTOR CH 1/10W 3.9K	1	
R813,14	ERJ6GMYJ681	M.RESISTOR CH 1/10W 680	2		R2537	ERJ6GMYJ102	M.RESISTOR CH 1/10W 1K	1	
R815	ERJ6GMYJ152	M.RESISTOR CH 1/10W 1.5K	1		R2538	ERJ6GMYJ153	M.RESISTOR CH 1/10W 15K	1	
R816	ERJ6GMYJ122	M.RESISTOR CH 1/10W 1.2K	1		R2539	ERJ6GMYJ622	M.RESISTOR CH 1/10W 6.2K	1	
R817	ERJ6GMYJ272	M.RESISTOR CH 1/10W 2.7K	1		R2540	ERJ6GMYJ103	M.RESISTOR CH 1/10W 10K	1	
R818,19	ERJ6GMYJ102	M.RESISTOR CH 1/10W 1K	2		R2541	ERJ6GMYJ472	M.RESISTOR CH 1/10W 4.7K	1	
R820	ERJ6GMYJ122	M.RESISTOR CH 1/10W 1.2K	1		R2542	ERX12SJR47	M.RESISTOR 1/2W 0.47	1	
R821	ERJ6GMYJ271	M.RESISTOR CH 1/10W 270	1		R2547	ERJ6GMYJ272	M.RESISTOR CH 1/10W 2.7K	1	
R823	ERJ6GMYJ122	M.RESISTOR CH 1/10W 1.2K	1		R3002	ERJ6GMYJ102	M.RESISTOR CH 1/10W 1K	1	
R824	ERJ6GMYJ271	M.RESISTOR CH 1/10W 270	1		R3003	ERDS2TJ561	C.RESISTOR 1/4W 560	1	
R827	ERJ6GMYJ154	M.RESISTOR CH 1/10W 150K	1		R3008	ERJ6GMYJ471	M.RESISTOR CH 1/10W 470	1	
R828	ERJ6GMYJ204	M.RESISTOR CH 1/10W 200K	1		R3009	ERJ6GMYJ561	M.RESISTOR CH 1/10W 560	1	
R829	ERJ6GMYJ153	M.RESISTOR CH 1/10W 15K	1		R3010	ERJ6GMYJ000	M.RESISTOR CH 1/10W 0	1	
R830	ERJ6GMYJ103	M.RESISTOR CH 1/10W 10K	1		R3012	ERJ6GMYJ102	M.RESISTOR CH 1/10W 1K	1	
R831	ERJ6GMYJ154	M.RESISTOR CH 1/10W 150K	1		R3013	ERJ6GMYJ222	M.RESISTOR CH 1/10W 2.2K	1	
R832,33	ERJ6GMYJ102	M.RESISTOR CH 1/10W 1K	2		R3014	ERJ6GMYJ681	M.RESISTOR CH 1/10W 680	1	
R834	ERJ6GMYJ561	M.RESISTOR CH 1/10W 560	1		R3015	ERJ6GMYJ222	M.RESISTOR CH 1/10W 2.2K	1	
R835,36	ERJ6GMYJ102	M.RESISTOR CH 1/10W 1K	2		R3016,17	ERJ6GMYJ473	M.RESISTOR CH 1/10W 47K	2	
R837	ERJ6GMYJ222	M.RESISTOR CH 1/10W 2.2K	1		R3018	ERJ6GMYJ102	M.RESISTOR CH 1/10W 1K	1	
R838	ERJ6GMYJ562	M.RESISTOR CH 1/10W 5.6K	1		R3020	ERJ6GMYJ103	M.RESISTOR CH 1/10W 10K	1	
R839	ERJ6GMYJ152	M.RESISTOR CH 1/10W 1.5K	1		R3022	ERJ6GMYJ103	M.RESISTOR CH 1/10W 10K	1	
R840	ERJ6GMYJ681	M.RESISTOR CH 1/10W 680	1		R3023	ERJ6GMYJ000	M.RESISTOR CH 1/10W 0	1	
R841	ERJ6GMYJ221	M.RESISTOR CH 1/10W 220	1		R3024,25	ERJ6GMYJ821	M.RESISTOR CH 1/10W 820	2	
R842	ERJ6GMYJ271	M.RESISTOR CH 1/10W 270	1		R3026	ERJ6GMYJ391	M.RESISTOR CH 1/10W 390	1	
R843	ERJ6GMYJ562	M.RESISTOR CH 1/10W 5.6K	1		R3027	ERJ6GMYJ561	M.RESISTOR CH 1/10W 560	1	
R845	ERJ6GMYJ102	M.RESISTOR CH 1/10W 1K	1		R3028	ERJ6GMYJ222	M.RESISTOR CH 1/10W 2.2K	1	
R846	ERJ6GEYJ102	M.RESISTOR CH 1/10W 1K	1		R3029	ERJ6GMYJ561	M.RESISTOR CH 1/10W 560	1	
R847,48	ERJ6GMYJ333	M.RESISTOR CH 1/10W 33K	2		R3030	ERJ6GMYJ472	M.RESISTOR CH 1/10W 4.7K	1	
R1002	ERDS2TJ822	C.RESISTOR 1/4W 8.2K	1		R3032	ERJ6GMYJ392	M.RESISTOR CH 1/10W 3.9K	1	
R1003	ERJ6GMYJ561	M.RESISTOR CH 1/10W 560	1		R3037,38	ERJ6GMYJ473	M.RESISTOR CH 1/10W 47K	2	
R1004	ERJ6GMYJ103	M.RESISTOR CH 1/10W 10K	1		R3039	ERJ6GMYJ102	M.RESISTOR CH 1/10W 1K	1	
R1701	ERDS2TJ332	C.RESISTOR 1/4W 3.3K	1		R3041	ERJ6GMYJ152	M.RESISTOR CH 1/10W 1.5K	1	
R1702	ERDS2TJ101	C.RESISTOR 1/4W 100	1		R3042-44	ERJ6GMYJ222	M.RESISTOR CH 1/10W 2.2K	3	
R2001,02	ERJ6GMYJ223	M.RESISTOR CH 1/10W 22K	2		R3047	ERJ6GMYJ104	M.RESISTOR CH 1/10W 100K	1	
R2003	ERJ6GMYJ221	M.RESISTOR CH 1/10W 220	1		R3049	ERJ6GMYJ102	M.RESISTOR CH 1/10W 1K	1	
R2005,06	ERJ6GMYJ223	M.RESISTOR CH 1/10W 22K	2		R3050	ERJ6GMYJ562	M.RESISTOR CH 1/10W 5.6K	1	
R2007	ERJ6GMYJ332	M.RESISTOR CH 1/10W 3.3K	1		R3901-04	ERJ6GEYJ750	M.RESISTOR CH 1/10W 75	4	
R2008,09	ERJ6GMYJ563	M.RESISTOR CH 1/10W 56K	2		R3905	ERJ6GEYJ153	M.RESISTOR CH 1/10W 15K	1	
R2010	ERJ6GMYJ332	M.RESISTOR CH 1/10W 3.3K	1		R3906	ERJ6GEYJ223	M.RESISTOR CH 1/10W 22K	1	
R2011	ERJ6GMYJ102	M.RESISTOR CH 1/10W 1K	1		R3907	ERJ6GEYJ103	M.RESISTOR CH 1/10W 10K	1	
R2012	ERJ6GMYJ392	M.RESISTOR CH 1/10W 3.9K	1		R3908-10	ERJ6GEYJ471	M.RESISTOR CH 1/10W 470	3	
R2013	ERJ6GMYJ222	M.RESISTOR CH 1/10W 2.2K	1		R3911,12	ERJ6GEYJ151	M.RESISTOR CH 1/10W 150	2	
R2014	ERJ6GMYJ102	M.RESISTOR CH 1/10W 1K	1		R3913	ERJ6GEYJ152	M.RESISTOR CH 1/10W 1.5K	1	
R2015	ERJ6GMYJ221	M.RESISTOR CH 1/10W 220	1		R3914	ERJ6GEYJ392	M.RESISTOR CH 1/10W 3.9K	1	
R2016	ERJ6GMYJ222	M.RESISTOR CH 1/10W 2.2K	1		R3915	ERJ6GEYJ102	M.RESISTOR CH 1/10W 1K	1	
R2017	ERJ6GMYJ123	M.RESISTOR CH 1/10W 12K	1		R3916	ERJ6GEYJ472	M.RESISTOR CH 1/10W 4.7K	1	
R2018	ERJ6GMYJ000	M.RESISTOR CH 1/10W 0	1		R3917	ERJ6GEYJ561	M.RESISTOR CH 1/10W 560	1	
R2019	ERJ6GMYJ103	M.RESISTOR CH 1/10W 10K	1		R3918	ERJ6GEYJ152	M.RESISTOR CH 1/10W 1.5K	1	
R2501	ERDS2TJ330	C.RESISTOR 1/4W 33	1		R3919	ERJ6GEYJ472	M.RESISTOR CH 1/10W 4.7K	1	
R2502	ERJ6GMYG133	M.RESISTOR CH 1/10W 13K	1		R3920	ERJ6GEYJ223	M.RESISTOR CH 1/10W 22K	1	
R2503	ERJ6GMYG103	M.RESISTOR CH 1/10W 10K	1		R3921	ERJ6GEYJ153	M.RESISTOR CH 1/10W 15K	1	
R2504	ERJ6GMYG512	M.RESISTOR CH 1/10W 5.1K	1		R3922	ERJ6GEYJ750	M.RESISTOR CH 1/10W 75	1	
R2505	ERJ6GMYG513	M.RESISTOR CH 1/10W 51K	1		R3923,24	ERJ6GEYJ562	M.RESISTOR CH 1/10W 5.6K	2	
R2506	ERJ6GMYJ824	M.RESISTOR CH 1/10W 820K	1		R3925	ERJ6GEYJ222	M.RESISTOR CH 1/10W 2.2K	1	
R2507	ERJ6GMYJ102	M.RESISTOR CH 1/10W 1K	1		R3926	ERJ6GEYJ103	M.RESISTOR CH 1/10W 10K	1	
R2508-10	ERDS2TJ560	C.RESISTOR 1/4W 56	3		R3927,28	ERJ6GEYJ472	M.RESISTOR CH 1/10W 4.7K	2	
R2511,12	ERJ6GMYJ472	M.RESISTOR CH 1/10W 4.7K	2		R3929	ERJ6GEYJ272	M.RESISTOR CH 1/10W 2.7K	1	
R2513	ERJ6GMYJ105	M.RESISTOR CH 1/10W 1M	1		R3930,31	ERJ6GEYJ472	M.RESISTOR CH 1/10W 4.7K	2	
R2514	ERJ6GMYJ392	M.RESISTOR CH 1/10W 3.9K	1		R3933	ERJ6GEYJ472	M.RESISTOR CH 1/10W 4.7K	1	
R2515	ERJ6GMYJ223	M.RESISTOR CH 1/10W 22K	1		R3934	ERJ6GEYJ103	M.RESISTOR CH 1/10W 10K	1	
R2516	ERJ6GMYJ105	M.RESISTOR CH 1/10W 1M	1		R3935-37	ERJ6GEYJ472	M.RESISTOR CH 1/10W 4.7K	3	
R2517	ERJ6GMYJ333	M.RESISTOR CH 1/10W 33K	1		R4001	ERJ6GMYJ683	M.RESISTOR CH 1/10W 68K	1	
R2520	ERDS2TJ681	C.RESISTOR 1/4W 680	1		R4003	ERJ6GMYJ332	M.RESISTOR CH 1/10W 3.3K	1	
R2521	ERDS1TJ681	C.RESISTOR 1/2W 680	1		R4004	ERJ6GMYJ103	M.RESISTOR CH 1/10W 10K	1	
R2522	ERJ6GMYG473	M.RESISTOR CH 1/10W 47K	1		R4005	ERDS2TJ680	C.RESISTOR 1/4W 68	1	
R2523	ERJ6GMYG123	M.RESISTOR CH 1/10W 12K	1		R4006,07	ERJ6GMYJ103	M.RESISTOR CH 1/10W 10K	2	
R2524	ERJ6GMYG393	M.RESISTOR CH 1/10W 39K	1		R4008	ERDS2TJ680	C.RESISTOR 1/4W 68	1	
R2525	ERJ6GMYG124	M.RESISTOR CH 1/10W 120K	1		R4009	ERJ6GMYJ473	M.RESISTOR CH 1/10W 47K	1	
R2526	ERJ6GMYJ333	M.RESISTOR CH 1/10W 33K	1		R4010	ERJ6GMYJ223	M.RESISTOR CH 1/10W 22K	1	
R2528	ERJ6GMYJ223	M.RESISTOR CH 1/10W 22K	1		R4011	ERJ6GMYJ222	M.RESISTOR CH 1/10W 2.2K	1	
R2529	ERJ6GMYJ822	M.RESISTOR CH 1/10W 8.2K	1		R4012	ERJ6GMYJ332	M.RESISTOR CH 1/10W 3.3K	1	
R2530	ERJ6GMYG272	M.RESISTOR CH 1/10W 2.7K	1		R4013	ERJ6GMYJ152	M.RESISTOR CH 1/10W 1.5K	1	
R2531	ERJ6GMYG392	M.RESISTOR CH 1/10W 3.9K	1		R4014	ERJ6GMYJ332	M.RESISTOR CH 1/10W 3.3K	1	
R2532	ERJ6GMYG473	M.RESISTOR CH 1/10W 47K	1		R4015	ERJ6GMYJ562	M.RESISTOR CH 1/10W 5.6K	1	
R2534	ERSF30JR90		1		R4019	ERJ6GMYJ153	M.RESISTOR CH 1/10W 15K	1	

Ref.No.	Part No.	Part Name & Description	Pcs	Remarks	Ref.No.	Part No.	Part Name & Description	Pcs	Remarks
R4020, 21	ERJ6GMZOR00	M.RESISTOR CH 1/10W 0	2		R4656	ERJ6GEYG243	M.RESISTOR CH 1/10W 24K	1	
R4022	ERJ6GMYJ100	M.RESISTOR CH 1/10W 10	1		R4657	ERJ6GEYJ392	M.RESISTOR CH 1/10W 3.9K	1	
R4024	ERJ6GMZOR00	M.RESISTOR CH 1/10W 0	1		R4659	ERJ6GEYJ123	M.RESISTOR CH 1/10W 12K	1	
R4025, 26	ERJ6GMYJ562	M.RESISTOR CH 1/10W 5.6K	2		R4666	ERJ6GEYJ471	M.RESISTOR CH 1/10W 470	1	
R4027	ERJ6GMZOR00	M.RESISTOR CH 1/10W 0	1		R4901	ERJ6GEYJ391	M.RESISTOR CH 1/10W 390	1	
R4028, 29	ERJ6GMYJ103	M.RESISTOR CH 1/10W 10K	2		R4902	ERJ6GEYJ222	M.RESISTOR CH 1/10W 2.2K	1	
R4034	ERJ6GMYJ473	M.RESISTOR CH 1/10W 47K	1		R4903	ERJ6GEYJ391	M.RESISTOR CH 1/10W 390	1	
R4035	ERJ6GMYJ103	M.RESISTOR CH 1/10W 10K	1		R4904	ERJ6GEYJ222	M.RESISTOR CH 1/10W 2.2K	1	
R4036	ERJ6GMYJ333	M.RESISTOR CH 1/10W 33K	1		R4905	ERJ6GEYJ391	M.RESISTOR CH 1/10W 390	1	
R4037-40	ERJ6GMYJ103	M.RESISTOR CH 1/10W 10K	4		R4906	ERJ6GEYJ222	M.RESISTOR CH 1/10W 2.2K	1	
R4041, 42	ERJ6GMYJ104	M.RESISTOR CH 1/10W 100K	2		R4907	ERJ6GEYJ391	M.RESISTOR CH 1/10W 390	1	
R4043	ERJ6GMYJ103	M.RESISTOR CH 1/10W 10K	1		R4908	ERJ6GEYJ222	M.RESISTOR CH 1/10W 2.2K	1	
R4044	ERJ6GMYJ222	M.RESISTOR CH 1/10W 2.2K	1		R4909, 10	ERJ6GEYJ221	M.RESISTOR CH 1/10W 220	2	
R4102	ERJ6GMYG303	M.RESISTOR CH 1/10W 30K	1		R4911	ERJ6GEYJ104	M.RESISTOR CH 1/10W 100K	1	
R4103	ERJ6GMYG623	M.RESISTOR CH 1/10W 62K	1		R4912	ERJ6GEYJ163	M.RESISTOR CH 1/10W 16K	1	
R4104	ERJ6GMYJ823	M.RESISTOR CH 1/10W 82K	1		R4913, 14	ERJ6GEYJ433	M.RESISTOR CH 1/10W 43K	2	
R4501, 02	ERJ3GEYOR00	M.RESISTOR CH 1/16W 0	2		R4915	ERJ6GEYJ163	M.RESISTOR CH 1/10W 16K	1	
R4503	VRE0071E36C	M.RESISTOR	1		R4916	ERJ6GEYJ104	M.RESISTOR CH 1/10W 100K	1	
R4504, 05	ERJ6GEYJ393	M.RESISTOR CH 1/10W 39K	2		R4917-20	ERJ6GEYJ473	M.RESISTOR CH 1/10W 47K	4	
R4506, 07	ERJ6GEYJ473	M.RESISTOR CH 1/10W 47K	2		R4921	ERJ6GEYJ333	M.RESISTOR CH 1/10W 33K	1	
R4508	ERJ6GEYJ224	M.RESISTOR CH 1/10W 220K	1		R4922, 23	ERJ6GEYJ223	M.RESISTOR CH 1/10W 22K	2	
R4509	ERJ6GEYJ822	M.RESISTOR CH 1/10W 8.2K	1		R4924	ERJ6GEYJ333	M.RESISTOR CH 1/10W 33K	1	
R4510	ERJ6GEYJ621	M.RESISTOR CH 1/10W 620	1		R5003	ERJ6GEYJ102	M.RESISTOR CH 1/10W 1K	1	
R4511	ERJ6GEYJ303	M.RESISTOR CH 1/10W 30K	1		R5004	ERJ6GEYJ221	M.RESISTOR CH 1/10W 220	1	
R4512	VRE0034E163	M.RESISTOR CH 1/10W 16K	1		R5005	ERJ6GEYJ472	M.RESISTOR CH 1/10W 4.7K	1	
R4513	ERJ3GEYJ103	M.RESISTOR CH 1/16W 10K	1		R5006	ERJ6GEYJ124	M.RESISTOR CH 1/10W 120K	1	
R4514	ERJ6GEYJ223	M.RESISTOR CH 1/10W 22K	1		R5007	ERJ6GEYJ223	M.RESISTOR CH 1/10W 22K	1	
R4518, 19	ERJ6GMZOR00	M.RESISTOR CH 1/10W 0	2		R5012	ERJ6GEYJ563	M.RESISTOR CH 1/10W 56K	1	
R4522	ERJ6GEYJ225	M.RESISTOR CH 1/10W 2.2M	1		R5013	ERJ6GEYJ123	M.RESISTOR CH 1/10W 12K	1	
R4527	VRE0034E133	M.RESISTOR CH 1/10W 33K	1		R5014	ERJ6GEYJ223	M.RESISTOR CH 1/10W 22K	1	
R4528	VRE0034E153	M.RESISTOR CH 1/10W 15K	1		R5016, 17	ERJ6GEYJ102	M.RESISTOR CH 1/10W 1K	2	
R4529	ERJ6GEYJ562	M.RESISTOR CH 1/10W 5.6K	1		R5018	ERJ6GEYJ123	M.RESISTOR CH 1/10W 12K	1	
R4530	ERJ3GEYJ334	M.RESISTOR CH 1/16W 330K	1		R5019	ERJ6GEYJ682	M.RESISTOR CH 1/10W 6.8K	1	
R4534	ERJ6GEYJ472	M.RESISTOR CH 1/10W 4.7K	1		R5020	ERJ6GEYJ102	M.RESISTOR CH 1/10W 1K	1	
R4535	ERJ3GEYJ104	M.RESISTOR CH 1/16W 100K	1		R5021, 22	ERJ6GEYJ681	M.RESISTOR CH 1/10W 680	2	
R4539	ERJ6GEYJ104	M.RESISTOR CH 1/10W 100K	1		R5023	ERJ6GEYJ271	M.RESISTOR CH 1/10W 270	1	
R4540	ERJ3GEYOR00	M.RESISTOR CH 1/16W 0	1		R5025	ERJ6GEYJ102	M.RESISTOR CH 1/10W 1K	1	
R4541	ERJ6GEYJ152	M.RESISTOR CH 1/10W 1.5K	1		R5027	ERJ6GEYJ391	M.RESISTOR CH 1/10W 390	1	
R4542	ERJ6GEYJ222	M.RESISTOR CH 1/10W 2.2K	1		R5028, 29	ERJ6GEYJ102	M.RESISTOR CH 1/10W 1K	2	
R4543	ERJ3GEYJ472	M.RESISTOR CH 1/16W 4.7K	1		R5030	ERJ6GEYJ471	M.RESISTOR CH 1/10W 470	1	
R4551, 52	ERJ3GEYJ393	M.RESISTOR CH 1/16W 39K	2		R5031	ERJ6GEYJ102	M.RESISTOR CH 1/10W 1K	1	
R4553	ERJ6GEYJ273	M.RESISTOR CH 1/10W 27K	1		R6001	ERJ6GMYJ332	M.RESISTOR CH 1/10W 3.3K	1	
R4554	ERJ3GEYJ273	M.RESISTOR CH 1/16W 27K	1		R6002	ERJ6GMYJ103	M.RESISTOR CH 1/10W 10K	1	
R4558	ERJ6GEYJ224	M.RESISTOR CH 1/10W 220K	1		R6003	ERJ6GMYJ222	M.RESISTOR CH 1/10W 2.2K	1	
R4561	ERJ6GEYJ303	M.RESISTOR CH 1/10W 30K	1		R6004	ERJ6GMYJ122	M.RESISTOR CH 1/10W 1.2K	1	
R4562	VRE0034E10C	M.RESISTOR 1/10W	1		R6005	ERJ6GMYJ332	M.RESISTOR CH 1/10W 3.3K	1	
R4563	ERJ3GEYJ272	M.RESISTOR CH 1/16W 2.7K	1		R6006, 07	ERJ6GMYJ333	M.RESISTOR CH 1/10W 33K	2	
R4568	ERJ6GEYJ273	M.RESISTOR CH 1/10W 27K	1		R6008-10	ERJ6GMYJ561	M.RESISTOR CH 1/10W 560	3	
R4569	ERJ3GEYJ273	M.RESISTOR CH 1/16W 27K	1		R6011	ERJ6GMYJ104	M.RESISTOR CH 1/10W 100K	1	
R4573	ERJ6GEYJ152	M.RESISTOR CH 1/10W 1.5K	1		R6012, 13	ERJ6GMYJ103	M.RESISTOR CH 1/10W 10K	2	
R4577	ERJ3GEYJ473	M.RESISTOR CH 1/16W 47K	1		R6014-19	ERJ6GMYJ333	M.RESISTOR CH 1/10W 33K	6	
R4578	VRE0034E473	M.RESISTOR CH 1/10W 47K	1		R6021	ERJ6GMYJ152	M.RESISTOR CH 1/10W 1.5K	1	
R4581	ERJ6GEYJ104	M.RESISTOR CH 1/10W 100K	1		R6024	ERJ6GMYJ332	M.RESISTOR CH 1/10W 3.3K	1	
R4583	ERJ3GEYJ102	M.RESISTOR CH 1/16W 1K	1		R6027	ERJ6GMYJ473	M.RESISTOR CH 1/10W 47K	1	
R4584	ERJ6GEYJ152	M.RESISTOR CH 1/10W 1.5K	1		R6028	ERJ6GMYJ563	M.RESISTOR CH 1/10W 56K	1	
R4585	ERJ3GEYOR00	M.RESISTOR CH 1/16W 0	1		R6029	ERJ6GMYJ561	M.RESISTOR CH 1/10W 560	1	
R4586	ERJ6GEYJ152	M.RESISTOR CH 1/10W 1.5K	1		R6030	ERJ6GMYJ271	M.RESISTOR CH 1/10W 270	1	
R4587, 88	ERJ3GEYJ273	M.RESISTOR CH 1/16W 27K	2		R6031	ERJ6GMYJ561	M.RESISTOR CH 1/10W 560	1	
R4591	ERJ3GEYJ473	M.RESISTOR CH 1/16W 47K	1		R6032	ERJ6GMYJ562	M.RESISTOR CH 1/10W 5.6K	1	
R4592	ERJ6GEYJ563	M.RESISTOR CH 1/10W 56K	1		R6033	ERJ6GMYJ221	M.RESISTOR CH 1/10W 220	1	
R4593	ERJ6GEYJ472	M.RESISTOR CH 1/10W 4.7K	1		R6034	ERJ6GMYJ152	M.RESISTOR CH 1/10W 1.5K	1	
R4594	ERJ3GEYJ473	M.RESISTOR CH 1/16W 47K	1		R6035	ERJ6GMYJ562	M.RESISTOR CH 1/10W 5.6K	1	
R4603	ERJ3GEYJ183	M.RESISTOR CH 1/16W 18K	1		R6036	ERJ6GMYJ201	M.RESISTOR CH 1/10W 200	1	
R4606	ERJ6GEYJ562	M.RESISTOR CH 1/10W 5.6K	1		R6037	ERG3SJ220	M.RESISTOR 3W 22	1	
R4610	ERJ6GEYJ473	M.RESISTOR CH 1/10W 47K	1		R6038	ERJ6GMYJ103	M.RESISTOR CH 1/10W 10K	1	
R4611, 12	ERJ6GEYJ331	M.RESISTOR CH 1/10W 330	2		R6039	ERJ6GMYJ101	M.RESISTOR CH 1/10W 100	1	
R4613	ERJ6GEYJ394	M.RESISTOR CH 1/10W 390K	1		R6040	ERD2FCVG220	C.RESISTOR 2W 22	1	(!)
R4615	ERJ6GEYJ133	M.RESISTOR CH 1/10W 13K	1		R6041	ERJ6GMYJ471	M.RESISTOR CH 1/10W 470	1	
R4616	ERJ6GEYJ105	M.RESISTOR CH 1/10W 1M	1		R6043, 44	ERJ6GMYJ272	M.RESISTOR CH 1/10W 2.7K	2	
R4638	ERJ6GMZOR00	M.RESISTOR CH 1/10W 0	1		R6045	ERJ6GMYJ221	M.RESISTOR CH 1/10W 220	1	
R4649	ERJ3GEYJ470	M.RESISTOR 1/16W 47	1		R6046	ERJ6GMYJ103	M.RESISTOR CH 1/10W 10K	1	
R4651	ERJ6GEYJ101	M.RESISTOR CH 1/10W 100	1		R6047	ERJ6GMYJ101	M.RESISTOR CH 1/10W 100	1	
R4653	ERJ6GEYJ471	M.RESISTOR CH 1/10W 470	1		R6048, 49	ERJ6GMYJ103	M.RESISTOR CH 1/10W 10K	2	
R4654	ERJ6GEYJ223	M.RESISTOR CH 1/10W 22K	1		R6050, 51	ERJ6GMYJ223	M.RESISTOR CH 1/10W 22K	2	
R4655	ERJ6GEYJ562	M.RESISTOR CH 1/10W 5.6K	1		R6052	ERJ6GMYJ683	M.RESISTOR CH 1/10W 68K	1	

Ref.No.	Part No.	Part Name & Description	Pcs	Remarks	Ref.No.	Part No.	Part Name & Description	Pcs	Remarks
R6053	ERJ6GMYJ184	M.RESISTOR CH 1/10W 180K	1		R7808	ERJ6GEYJ473	M.RESISTOR CH 1/10W 47K	1	
R6054	ERJ6GMYJ223	M.RESISTOR CH 1/10W 22K	1		R7821	ERJ6GEYJ222	M.RESISTOR CH 1/10W 2.2K	1	
R6055	ERJ6GMYJ181	M.RESISTOR CH 1/10W 180	1		R7822	ERJ6GEYJ105	M.RESISTOR CH 1/10W 1M	1	
R6057	ERJ6GMYJ103	M.RESISTOR CH 1/10W 10K	1		R7851	ERJ6GEYJ103	M.RESISTOR CH 1/10W 10K	1	
R6058	ERJ6GMYJ131	M.RESISTOR CH 1/10W 130	1		R7860	ERJ6GEYJ471	M.RESISTOR CH 1/10W 470	1	
R6059	ERJ6GMYJ332	M.RESISTOR CH 1/10W 3.3K	1						
R6060	ERJ6GMYJ101	M.RESISTOR CH 1/10W 100	1				SWITCHES		
R6061	ERJ6GMYJ223	M.RESISTOR CH 1/10W 22K	1		SW3901	VSS0225	SWITCH	1	
R6101	ERJ6GMYJ222	M.RESISTOR CH 1/10W 2.2K	1						
R6102	ERJ6GMYJ103	M.RESISTOR CH 1/10W 10K	1						
R6103	ERJ6GMYJ333	M.RESISTOR CH 1/10W 33K	1						
R6104,05	ERJ6GMYJ223	M.RESISTOR CH 1/10W 22K	2				TRANSFORMERS		
R6106	ERJ6GMYJ393	M.RESISTOR CH 1/10W 39K	1		T703	EIV5EC013A	TRANSFORMER	1	
R6108,09	ERJ6GMYJ101	M.RESISTOR CH 1/10W 100	2		T704	EIV5EC006A1	TRANSFORMER	1	
R6110	ERJ6GMYJ183	M.RESISTOR CH 1/10W 18K	1		T1701	VLTO683	TRANSFORMER	1	
R6111	ERJ6GMYJ472	M.RESISTOR CH 1/10W 4.7K	1		T4001	EIQ7QF013Q	TRANSFORMER	1	
R6112,13	ERJ6GMYJ101	M.RESISTOR CH 1/10W 100	2		T7301	EIR7QG001B	1F TRANSFORMER	1	
R6115	ERJ6GMYJ562	M.RESISTOR CH 1/10W 5.6K	1		T7302,03	EIL7QH012Q	TRANSFORMER	2	
R6116	ERJ6GMYJ223	M.RESISTOR CH 1/10W 22K	1		T7304	EIS5EC007A	TRANSFORMER	1	
R6117	ERJ6GMYJ222	M.RESISTOR CH 1/10W 2.2K	1		T7305	EIS5EC005A	TRANSFORMER	1	
R6118,19	ERJ6GMYJ473	M.RESISTOR CH 1/10W 47K	2						
R6301	ERJ6GMZ0R00	M.RESISTOR CH 1/10W 0	1				VARIABLE RESISTORS		
R7302	ERJ6GEYJ392	M.RESISTOR CH 1/10W 3.9K	1		VR301	EVMF6SA00B13	V.RESISTOR	1K	1
R7303	ERJ6GEYJ182	M.RESISTOR CH 1/10W 1.8K	1		VR701,02	EVTF6SA00B23	V.RESISTOR	2K	2
R7304	ERJ6GEYJ392	M.RESISTOR CH 1/10W 3.9K	1		VR741	EVNDXAA00B14	V.RESISTOR	10K	1
R7305	ERJ6GEYJ822	M.RESISTOR CH 1/10W 8.2K	1		VR801,02	EVMF6SA00B13	V.RESISTOR	1K	2
R7306	ERJ6GEYJ471	M.RESISTOR CH 1/10W 470	1		VR803	EVMF6SA00B14	V.RESISTOR	10K	1
R7307	ERJ6GEYJ104	M.RESISTOR CH 1/10W 100K	1		VR2001	EVNDXAA00B54	V.RESISTOR	50K	1
R7308	ERJ6GEYJ273	M.RESISTOR CH 1/10W 27K	1		VR2006	EVNDXAA00B15	V.RESISTOR	100K	1
R7309	ERDS2TJ102	C.RESISTOR 1/4W 1K	1		VR2011	EVNDXAA00B15	V.RESISTOR	100K	1
R7310	ERJ6GEYJ474	M.RESISTOR CH 1/10W 470K	1		VR2018,19	EVNDXAA00B15	V.RESISTOR	100K	2
R7311	ERJ6GEYJ562	M.RESISTOR CH 1/10W 5.6K	1		VR3001	EVNDXAA00B23	V.RESISTOR	2K	1
R7312	ERJ6GEY0563	M.RESISTOR CH 1/10W 56K	1		VR3012,13	EVNDXAA00B52	V.RESISTOR	500	2
R7313	ERJ6GEYJ824	M.RESISTOR CH 1/10W 820K	1		VR4001	EVNDXAA00B25	V.RESISTOR	200K	1
R7314,15	ERJ6GEYJ224	M.RESISTOR CH 1/10W 220K	2		VR4501	EVMF6SA00B53	V.RESISTOR		1
R7316	ERJ6GEYJ473	M.RESISTOR CH 1/10W 47K	1		VR4502	EVMF6SA00B24	V.RESISTOR	20K	1
R7317	ERJ6GEYJ393	M.RESISTOR CH 1/10W 39K	1		VR4507	EVMF6SA00B24	V.RESISTOR	20K	1
R7318	ERJ6GEYJ153	M.RESISTOR CH 1/10W 15K	1		VR4509	EVMF6SA00B3	V.RESISTOR		1
R7321	ERJ6GEYJ103	M.RESISTOR CH 1/10W 10K	1		VR4512	EVNDXAA00B52	V.RESISTOR	500	1
R7322	ERJ6GEYJ102	M.RESISTOR CH 1/10W 1K	1		VR4550	EVMF6SA00B3	V.RESISTOR		1
R7323	ERJ6GEYJ103	M.RESISTOR CH 1/10W 10K	1		VR4551,52	EVMF6SA00B55	V.RESISTOR		2
R7324,25	ERJ6GEYJ271	M.RESISTOR CH 1/10W 270	2		VR7301	EVMF6SA00B14	V.RESISTOR	10K	1
R7329	ERJ6GEYJ102	M.RESISTOR CH 1/10W 1K	1		VR7326	EVMF6SA00B52	V.RESISTOR		1
R7330	ERJ6GEYJ332	M.RESISTOR CH 1/10W 3.3K	1		VR7328	EVMF6SA00B52	V.RESISTOR		1
R7334-37	ERJ6GEYJ471	M.RESISTOR CH 1/10W 470	4		VR7340	EVNE4AA00B14	V.RESISTOR	10K	1
R7338	ERJ6GEYJ182	M.RESISTOR CH 1/10W 1.8K	1		VR7342	EVNE4AA00B53	V.RESISTOR	5K	1
R7339	ERJ6GEYJ330	M.RESISTOR CH 1/10W 33	1		VR7344	EVNE4AA00B14	V.RESISTOR	10K	1
R7340	ERJ6GEYJ152	M.RESISTOR CH 1/10W 1.5K	1		VR8001	EVNDXAA00B23	V.RESISTOR	2K	1
R7341	ERJ6GEYJ681	M.RESISTOR CH 1/10W 680	1						
R7342	ERJ6GEYJ103	M.RESISTOR CH 1/10W 10K	1				CRYSTAL OSCILLATORS		
R7345	ERJ6GEYJ182	M.RESISTOR CH 1/10W 1.8K	1		X710	EFCH38MGP1	CRYSTAL OSCILLATOR		1
R7346	ERJ6GEYJ221	M.RESISTOR CH 1/10W 220	1		X711	VLFO638	CRYSTAL OSCILLATOR		1
R7347	ERJ6GEYJ681	M.RESISTOR CH 1/10W 680	1		X716,17	EFCA40R40M1	CRYSTAL OSCILLATOR		2
R7348	ERJ6GEYJ222	M.RESISTOR CH 1/10W 2.2K	1		X801	VSX0162	CRYSTAL OSCILLATOR		1
R7349	ERJ6GEYJ102	M.RESISTOR CH 1/10W 1K	1		X3901	VSX0099	CRYSTAL OSCILLATOR		1
R7351-53	ERJ6GEYJ103	M.RESISTOR CH 1/10W 10K	3		X6001	VSX0383	CRYSTAL OSCILLATOR		1
R7354,55	ERJ6GEYJ102	M.RESISTOR CH 1/10W 1K	2		X6002	VSX0258	CRYSTAL OSCILLATOR		1
R7402	ERJ6GMYJ332	M.RESISTOR CH 1/10W 3.3K	1		X6003	VSQ0565	CRYSTAL OSCILLATOR		1
R7403,04	ERJ6GMYJ750	M.RESISTOR CH 1/10W 75	2		X7301,02	EFCS5R5MS5B	CRYSTAL OSCILLATOR		2
R7405	ERJ6GMYJ562	M.RESISTOR CH 1/10W 5.6K	1		X7303,04	EFCS5R74MS5B	CRYSTAL OSCILLATOR		2
R7406	ERJ6GMYJ332	M.RESISTOR CH 1/10W 3.3K	1		X7305	ELB5A016	CRYSTAL OSCILLATOR		1
R7407	ERJ6GMYJ182	M.RESISTOR CH 1/10W 1.8K	1		X7851	EFOA4R0M03C2	CRYSTAL OSCILLATOR		1
R7410	ERJ6GMYJ221	M.RESISTOR CH 1/10W 220	1						
R7412	ERJ6GMYJ221	M.RESISTOR CH 1/10W 220	1						
R7414,15	ERJ6GMYJ332	M.RESISTOR CH 1/10W 3.3K	2						
R7419-21	ERJ6GMYJ332	M.RESISTOR CH 1/10W 3.3K	3						
R7422-24	ERJ6GMYJ221	M.RESISTOR CH 1/10W 220	3						
R7656	ERJ6GEYJ221	M.RESISTOR CH 1/10W 220	1						
R7676	ERGLSJ152	M.RESISTOR 1W 1.5K	1				MISCELLANEOUS		
R7801	ERJ6GEYJ104	M.RESISTOR CH 1/10W 100K	1		ENC17984	RF CONVERTER		1	(1)
R7802	ERJ6GEYJ824	M.RESISTOR CH 1/10W 820K	1		VJH0617	ANT TERMINAL		1	
R7803,04	ERJ6GEYJ103	M.RESISTOR CH 1/10W 10K	2		VMJ201W140BB	FLAT CARD (CABLE) 20P		1	(P606-p7501)
R7805	ERJ6GEYJ824	M.RESISTOR CH 1/10W 820K	1		VMJ18AW160BB	FLAT CARD (CABLE) 18P		1	(P606-p7502)
R7806	ERJ6GEYJ101	M.RESISTOR CH 1/10W 100	1		VMJ04NB080QQ	FLAT CARD (CABLE) 4P		1	(P604-p1508)
R7807	ERJ6GEY0512	M.RESISTOR CH 1/10W 5.1K	1		VSQ0687	FERRITE RING		1	

5-18

[illegible]

Ref.No.	Part No.	Part Name & Description	Pcs	Remarks	Ref.No.	Part No.	Part Name & Description	Pcs	Remarks
		INTEGRATED CIRCUITS							
IC6511	VCR0172	IC	1			■ VEPOOS04A	FRONT INPUT C.B.A.		(NLA)
		COILS					CAPACITORS		
L6501-03	VLPO083	FILTER	3		C4801,02	ECCF1H101JC	C.CAPACITOR 50V 100P	2	
L6511,12	ELESP471KA	COIL	2		C4803,04	ECQV1H104JZ	P.CAPACITOR 50V 0.1U	2	
		CONNECTORS					COILS		
P6501	VJP3267A012W	CONNECTOR (MALE)	1		L4801,02	VLQ0188J101	COIL 100UH	2	
P6511	VJP1252T	CONNECTOR (MALE) 12P	1						
P6512	VJP3042A007W	CONNECTOR (MALE)	1				CONNECTORS		
					P4801	VJP2622	CONNECTOR (MALE)	1	
		RESISTORS			P4802	VJP3103	CONNECTOR (MALE)	1	
R6501	ERDS2TJ271	C.RESISTOR 1/4W 270	1						
R6502	ERDS2TJ102	C.RESISTOR 1/4W 1K	1				RESISTORS		
R6511	EROS2CKG3301	M.RESISTOR 1/4W 3.3K	1		R4801	ERDS2TJ750	C.RESISTOR 1/4W 75	1	
R6512,13	EROS2CKG2700	M.RESISTOR 1/4W 270	2		R4802,03	ERDS2TJ222	C.RESISTOR 1/4W 2.2K	2	
R6514	EROS2CKG3301	M.RESISTOR 1/4W 3.3K	1						
R6516	ERDS2TJ101	C.RESISTOR 1/4W 100	1				MISCELLANEOUS		
R6518,19	EROS2CKG3300	M.RESISTOR 1/4W 330	2			VEJ1236	FRONT JACK PLATE	1	
						VSC3623	FRONT JACK SHIELD COVER	1	
		SWITCHES							
SW6501	EVQ0S307K	SWITCH	1						
SW6502-04	ESD170206	SWITCH	3						
SW6505,06	ESD170306	SWITCH	2						
		VARIABLE RESISTORS							
VR6511	EWANYJX0554J	V.RESISTOR	1			■ VEPOOS33B	JOG C.B.A.		(NLA)
VR6512	EVUF3AE20B24	V.RESISTOR 20K	1						
VR6513	EVJY5OE20C23	V.RESISTOR 2K	1				DIODES		
					D6702	LN38GCPP	LED	1	
		MISCELLANEOUS			D6704,05	LN38GCPP	LED	2	
	KL-04	LED SPACER	1						
	VGU4537	SLIDE KNOB	5				CONNECTORS		
	VGU4495	REC VR KNOB	2		P6701	VJS2621	CONNECTOR (FEMALE)	1	
	VYCO160	REC VR PANEL UNIT	1						
							RESISTORS		
					R6702	ERDS2T0	C.RESISTOR 1/4W 0	1	
	■ VEPOOS03A	MIC C.B.A.		(NLA)	R6706,07	ERDS2TJ271	C.RESISTOR 1/4W 270	2	
					R6709	ERDS2TJ271	C.RESISTOR 1/4W 270	1	
		CAPACITORS							
C6301,02	ECUM1H103KBN	C.CAPACITOR CH 50V 0.01U	2				SWITCHES		
					SW6701	EVQ0S307K	SWITCH	1	
		JACKS							
J6302	VJJ0274	MIC JACK	1				MISCELLANEOUS		
J6401	VJJ0238	HEAD PHONE JACK	1			KL-02	LED SPACER	3	
						VSQ0798	JOG ENCODER	1	
		COILS							
L6301,02	ELESP221KA	COIL 220UH	2						
		CONNECTORS				■ VEPO1487A	POWER C.B.A.		(NLA) <1>
PS6301	VJS3042B007W	CONNECTOR (FEMALE)	1				CAPACITORS		
					C1101	ECQU2A154MNB	P.CAPACITOR 250V 0.15U	1	<1>
					C1102	ECQU2A104MN	P.CAPACITOR 250V 0.01U	1	<1>
					C1103	ECES2G680	CAPACITOR	1	
					C1106	VCC0021	C.CAPACITOR	1	<1>

Ref.No.	Part No.	Part Name & Description	Pcs	Remarks	Ref.No.	Part No.	Part Name & Description	Pcs	Remarks
C1107	ECQE6473KF	P. CAPACITOR 50V	1						
C1108	VCK0106K121	CAPACITOR	1						
C1109	ECA1VXLV470	E. CAPACITOR 35V 47U	1				TRANSFORMERS		
C1110	ECA1CKLV101	E. CAPACITOR 16V 100U	1		T1101	VLTO657	TRANSFORMER	1	<1>
C1111	ECEA1JFE470	E. CAPACITOR 63V 47U	1						
C1112	ECEA1CFE560	E. CAPACITOR 16V 56U	1						
C1113, 14	ECEA1DFZ681	E. CAPACITOR 20V 680U	2				MISCELLANEOUS		
C1115, 16	ECEA1AFZ681	E. CAPACITOR 10V 680U	2			VJFO318	FUSE HOLDER	1	<1>
C1117	ECQ81H103JF	P. CAPACITOR 50V 0.01U	1			VSC3487	HEAT SINK	1	FOR IC1101
C1118	ECKF1H102KB	C. CAPACITOR 50V 1000P	1			VMC0811	HEAT SINK SPRING	1	FOR IC1101
C1119	VCF2AAC101JT	P. CAPACITOR	1			VMZ1184	CAPACITOR COVER	3	<1> FOR C1106, 33, 36
C1120	ECKF1H391KB	C. CAPACITOR 50V 390P	1						
C1121	ECKF1H102KB	C. CAPACITOR 50V 1000P	1						
C1133	VCC0021	C. CAPACITOR	1	<1>					
C1136	VCC0022	C. CAPACITOR 1000P	1	<1>					
		DIODES							
D1102	SIWBA60S	DIODE	1	<1>		■ VEXO117	CYLINDER DRIVE C.B.A.		(NLA)
D1103	AP01C	DIODE	1						
D1104	MA420OH	DIODE	1				CAPACITORS		
D1105	MA723VT	DIODE	1		C2901-03	ECEA1VSN2R2	E. CAPACITOR 35V 2.2U	3	
D1106	MA178	DIODE	1		C2904-06	ECUM1E104KBM	C. CAPACITOR CH 25V 0.1U	3	
D1107	AU01Z	DIODE	1		C2907	ECUM1E683KBM	C. CAPACITOR CH 25V 0.068U	1	
D1108	MA185	DIODE	1		C2908	ECUM1E473KBM	C. CAPACITOR CH 25V 0.047U	1	
D1109	30DF2	DIODE	1		C2909	ECQV1H104JS	P. CAPACITOR 50V 0.1U	1	
D1110	31DQ04	DIODE	1		C2910, 11	ECEA1CKS100	E. CAPACITOR 16V 10U	2	
					C2912	ECEA0JKS220	E. CAPACITOR 6.3V 22U	1	
		INTEGRATED CIRCUITS					INTEGRATED CIRCUITS		
IC1101	STR56545LF	IC	1	<1>	IC2901	AN3815K	IC	1	
IC1102	SI3120C	IC	1						
IC1103	UPC1093J	IC	1						
							CONNECTORS		
					P2901	VJP2603W	CONNECTOR (MALE)	1	
					P2902	VJP1232T	CONNECTOR (MALE) 5P	1	
		COILS							
L1101	ELF18D221F	COIL 220UH	1	<1>					
L1102, 03	VLQ0410	COIL	2				RESISTORS		
L1104, 05	ELESE101KA	COIL 100UH	2		R2901	ERX12SJR47	M. RESISTOR 1/2W 0.47	1	
L1106	VLP0074	COIL	1						
L1107	VLP0083	COIL	1						
L1111	ELF18D290A	COIL	1	<1>			HEATERS		
L1112-15	VLP0085	COIL	4		TH2901	VRH0017	HEATER	1	
		CONNECTORS							
P1101	VJS2625	CONNECTOR (FEMALE)	1	<1>			MISCELLANEOUS		
P1102	VJP1250T	CONNECTOR (MALE) 10P	1			VMA8089	MAIN HOLDER	1	
		TRANSISTORS							
Q1101	PS2561L1	TRANSISTOR	1	<1>					
		RESISTORS							
R1101	EROS2CKG3001	M. RESISTOR 1/4W 3K	1			■ VXA3825	MECHANISM CONNECTION C.B.A.		(NLA)
R1102	ERG3SJ683	M. RESISTOR 3W 68K	1						
R1103	ERDS2TJ224	C. RESISTOR 1/4W 220K	1						
R1104	ERDS2FJ221	C. RESISTOR 1/4W 220	1						
R1105	ERDS2TJ101	C. RESISTOR 1/4W 100	1				MISCELLANEOUS		
R1106	ERDS2TJ561	C. RESISTOR 1/4W 560	1			ON2170-RLF	PHOTO INTERRUPTER	2	
R1107	ERW1PK1R5	W. RESISTOR 1W	1			VJS1493	FLEXIBLE CARD 15P	1	
R1108	ERDS2TJ561	C. RESISTOR 1/4W 560	1			VMA7829	REINFORCEMENT (F)	1	
R1109	ERDS2TJ271	C. RESISTOR 1/4W 270	1			VMA7830	REINFORCEMENT (R)	1	
R1110	EROS2CKG2701	M. RESISTOR 1/4W 2.7K	1			VMZ1366	PROTECTION SHEET	1	
R1111	ERDS2TJ272	C. RESISTOR 1/4W 2.7K	1						
R1112	EROS2CKG2401	M. RESISTOR 1/4W 2.4K	1						
R1113	EROS2CKG3302	M. RESISTOR 1/4W 33K	1						
R1114	ERDS2TJ682	C. RESISTOR 1/4W 6.8K	1						
R1115	ERDS2TJ471	C. RESISTOR 1/4W 470	1						
R1116	EROS2CKG62R0	M. RESISTOR 62	1						
R1117	ERDS2TJ103	C. RESISTOR 1/4W 10K	1						
R1131	ERW1PK2R2	W. RESISTOR 1W	1						
R1132	ERC12AGM334	S. RESISTOR 1/2W 330K	1	<1>		■ VEPOCK88C	FE HEAD C.B.A.		(NLA)
R1133	ERDS2TJ224	C. RESISTOR 1/4W 220K	1						

